


### Directions for use:

1. Prior to turning trimmer on, please be sure that battery has been properly installed.
  - a) Slide battery compartment cover to open.
  - b) Insert one AA alkaline battery into trimmer.
  - c) Replace battery cover.
2. Turn trimmer on by pushing rocker switch on bottom of unit forward to “I-ON” position. Please be sure to turn trimmer off immediately after use to preserve battery life.
3. There are two trimmer attachments for either a medium or a long cut. Simply place one side of attachment over the front of the blades and snap the other side in place. To remove, pull tab away from one side.
4. Always purchase the correct size and grade of battery most suitable for the intended use.
5. Replace all batteries of a set at the same time.
6. Clean the battery contacts and also those of the device prior to battery installation.
7. Ensure the battery is installed correctly with regard to polarity (+ and -).
8. Remove battery from equipment which is not to be used for an extended period of time.
9. Remove used batteries promptly.
10. Store unused batteries in their original packaging, away from metal objects that could short-circuit them. Never short-circuit batteries.
11. Never dispose of batteries in fire, except under conditions of controlled incineration. (Failure to observe this precaution may result in an explosion). Never attempt to recharge primary batteries as this may cause leakage, fire, or explosion.

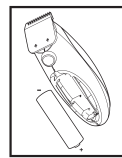

Please be sure that the attachments are firmly in place before turning the trimmer on.

### BLADE REPLACEMENT

This trimmer comes with a detachable blade set, which makes maintenance and replacement easy.

### TO REMOVE THE BLADE SET:

- Make sure the trimmer is in the “0-OFF” position.
- Facing the front of trimmer, press the blade on the teeth in the direction away from you until they pop out of the housing.



### TO REPLACE THE BLADE SET:

- Looking at the trimmer from above, you will see a notch at the back of the trimmer.
- There is a tab on the blade set on the bottom, opposite the blades. Position that tab so that it fits into the notch inside the trimmer head. Push the blade set down onto the trimmer head until it snaps into place.

### Oiling blades:

For best results, put a drop of lubricating oil on the blade approximately once a month. Motor bearings are permanently lubricated – do not attempt to oil.

### Notice – do not over oil:

This trimmer requires very little oiling. When it is necessary to oil, turn trimmer on, hold the unit with blades facing DOWN, and squeeze one drop of oil onto blades. Wipe off excess with soft cloth.

### LIMITED ONE YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace (at our option) your unit free of charge for 12 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service centre listed below, together with your purchase receipt and \$7.50 for postage and handling. In the absence of a purchase receipt, the warranty period shall be 12 months from the date of manufacture.

**ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 12 MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.**

**IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CON-SEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.**

This warranty gives you specific legal rights, and you may also have other rights, which vary from province to province.

### SERVICE CENTRE:

**Conair Consumer Products ULC**

100 Conair Parkway,

Woodbridge, Ontario, L4H 0L2

1-855-926-6247

©2018 Conair Consumer Products ULC

www.conaircanada.ca

Consumer Call Centre E-mail :

Consumer\_Canada@Conair.com

18CN033085

*The*  
**BARBER SHOP**  
- PRO SERIES -  
*Est. 1959*  
BY **CONAIR™**



### Have a Question?

*Please do not return this product to the retailer.*

### Call Us First!

**Our customer service and product experts are ready to answer ALL your questions.**

**Please call our TOLL-FREE customer service number at: 1-855-926-6247 or visit us online at [www.conaircanada.ca](http://www.conaircanada.ca)**

### Instruction Booklet

For your safety and continued enjoyment of this product, always read the instruction booklet carefully before using.

Model GMT44BSC

IB-15575