

LIMITED FIVE YEAR WARRANTY

Conair will repair or replace, at our option, your appliance free of charge for 60 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center nearest you, together with your sales slip and \$7.50 for postage and handling. In the absence of a receipt, the warranty period shall be 60 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 60 MONTH DURATION OF THIS WARRANTY.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

This warranty gives you specific legal rights, and you may also have other rights which vary from province to province.

SERVICE CENTRE:

Conair Consumer Products Inc.

100 Conair Parkway,
Woodbridge, Ontario, L4H 0L2.
1-800-472-7606

©2012 Conair Consumer Products Inc.

www.conaircanada.ca

Consumer Call Centre E-mail :

 
Consumer_Canada@Conair.com

12CN135646

IB-11756


CONAIRPETTM
MC

PET CLIPPER & TRIMMER KIT

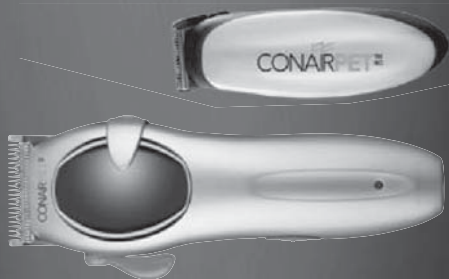

HAVE A QUESTION?

Please do not return this product to the retailer.

CALL US FIRST!

Our customer service and product experts are ready to answer **ALL** your questions. Please call our **TOLL-FREE** customer service number at :

1-800-472-7606

Or visit us online at

www.conaircanada.ca


Instruction & Styling Guide

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

Model CPG81C

*Be sure that the extreme right-hand big tooth of the cutter touches the extreme right-hand tooth of the cutting comb.

Any other servicing should be performed by an authorized service representative. This product is for household use. Do not pull, twist, or wrap line cord around appliance.

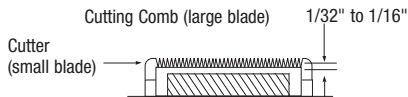

FOR RECHARGEABLE APPLICATION

Your new Conair Pet Clipper & Trimmer Kit has everything you need to achieve professional cuts at home. Its powerful DC motor clipper with high stainless steel blades for long lasting cutting precision features a new 5-position adjustmatic taper control, plus turbo button for more cutting power. Whatever hair length you set the lever for, the clipper will automatically cut all hair in that section at the same desired length.

Also included are 8 comb attachments for different hair lengths, scissors, a metal comb and a case for easy storage. The kit comes with lubricating oil, a cleaning brush and a blade guard for easy maintenance of the clipper blades.

This appliance is intended for household use. Comes with an adapter used on 100–240V AC 50/60 HZ.

1. Before using the clipper for the first time, charge continuously for 16 hours. Maximum battery capacity will only be reached after 3 charging and discharging cycles.

2. After use, turn the switch to “0-OFF” position. Recharge batteries by connecting the charging jack into the receptacle at the end of the clipper and plugging the adapter unit into the electrical outlet. The charging indicator lamp will light up to indicate that charging has begun.

3. After recharging, store in a dry place, away from small children.
4. Do not wrap cord around the clipper.
5. Preserving the batteries: in order to maintain the optimum capacity of the rechargeable batteries, the clipper should be recharged for 16 hours approximately every 3 months.

FOR DIRECT PLUG-IN OPERATION


1. Connect the charging jack into the receptacle at the end of the clipper.
2. Plug the adapter unit into the electric outlet.
3. Turn the switch to “0-OFF” position; let the clipper charge for a few minutes first.
4. Turn the switch to “I-ON” position.
5. Unplug the adapter unit after use.
6. After use, store in a dry place away from small children.
7. Do not wrap cord around the clipper.
8. This power unit is intended to be correctly oriented in a vertical or floor mount position.

NOTE: THE PRODUCT YOU HAVE PURCHASED CONTAINS RECHARGEABLE BATTERIES. THE BATTERIES ARE RECYCLABLE. AT THE END OF THEIR USEFUL LIFE, UNDER VARIOUS STATE AND LOCAL LAWS, IT MAY BE ILLEGAL TO DISPOSE OF THESE BATTERIES INTO THE MUNICIPAL WASTE STREAM. CHECK WITH YOUR LOCAL SOLID WASTE OFFICIALS FOR DETAILS IN YOUR AREA FOR RECYCLING OPTION OR PROPER DISPOSAL.



position. To increase cutting length, slowly push the lever down. To cut closer, push the lever up. Because a different cutting edge is used in each setting, using the taper lever lengthens the life of your blades.

Packed-in hair can slow down any clipper. To remove hair without removing the blades, keep the clipper on and quickly push the taper lever up and down several times. If you do this every time, especially after heavy hair cutting, the blades should remain free of cut hair.

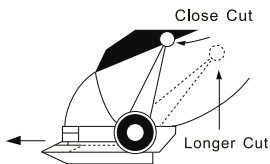

USER MAINTENANCE INSTRUCTIONS



CARE OF YOUR UNIT

DETACHABLE BLADE SET

Your appliance is equipped with a detachable blade set for routine maintenance, cleaning and replacement.

To remove the blades: the front of the clipper should be facing you; push up under the blades with your thumb and the blades will pop out. (See Fig 1)

To replace the blades: Make sure the taper control is set to the longest position and, with the back of the clipper facing you, insert the bottom side (with screws) of the blades into the clipper and push down until it snaps into place. (See Fig 2)

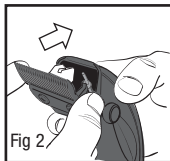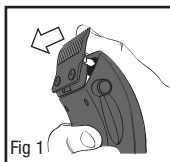

MAINTENANCE OF THE BLADES

Always apply oil to the blades before and after use. This will ensure maximum cutting performance. Hold clipper away from your body in a downward position and apply oil on the front and sides of the cutter blades. Wipe excess oil off with a soft, dry cloth.

*The top edge of the cutting comb should be $\frac{1}{32}$ " to $\frac{1}{16}$ " (.79 mm. to 1.59 mm.) higher than the top edge of the cutter. This is important so that the clipper does not cut too close or come in contact with the skin.

*The extreme left-hand tooth of the cutting comb must cover or be to the extreme left hand of the first small tooth of the cutter.

18. During use, do not place or leave appliance where it may be (1) damaged by an animal or (2) exposed to weather.

SAVE THESE INSTRUCTIONS

Before you use your ConairPET™ pet clipper for the first time, familiarize yourself with the entire clipper kit. Your kit includes the clipper unit with an adjustable blade assembly, comb attachments to use over the blades, scissors, a metal comb, cleaning brush and lubricating oil.

A proper work surface, such as a grooming table or a kitchen counter or picnic table, is essential to the safety of your pet during the grooming session. Place a nonslip rubber bath mat or rubber-backed bath rug on the raised surface where grooming will take place. Be sure to keep your hands in continual contact with your pet, so he doesn't jump or fall off and get hurt. If you are doing the grooming alone, you can use a collar and a short lead to keep him stable.

Your pet must be thoroughly brushed, bathed and dried before you can clip him accurately. All mats and tangles must be combed out of the coat before the clipper is applied to it, or the clipper will be unable to cut properly. After bathing your pet, towel him until he is damp, then finish drying with a pet-friendly dryer. Brush coat while you are drying to straighten coat and to remove any mats or tangles you may have missed before the bath. When finished drying, make sure you can run a comb easily through the coat.

Make sure your pet is not apprehensive about his first experience with the clipper. Turn on the clipper and hold it close to your pet until he accepts the sound of the clipper. Next, hold the clipper up against him until he seems comfortable. Do this several times while constantly reassuring him, before you begin the first grooming session.

OPERATING INSTRUCTIONS

Remove the plastic head guard protecting the blades. Apply oil across the blades; wipe off any excess with a dry cloth. Plug the clipper into electrical outlet; operate on voltage specified for clipper. Push the on/off switch to the "I-ON" position. When finished cutting hair, switch clipper to the "O-OFF" position, remove clippings from the blades, using the cleaning brush. Wipe the housing clean with a dry cloth. Before replacing head guard, apply a few drops of lubricating oil to the blades to prevent any rust from occurring.

HOW TO USE COMB ATTACHMENTS

Comb attachments serve as clipping guides. The combs are designed to fit securely over the blades. To fasten comb onto the blades, turn clipper to the "O-OFF" position, slide the comb onto the front of the clipper blades, and snap over the back of the blades. To remove, push up the comb attachments at the back of the blades and remove the comb.

Eight comb attachments are included:

1/8" (3mm)	1/4" (6mm)	3/8" (9.5mm)
1/2" (13mm)	5/8" (16mm)	3/4" (19mm)
7/8" (22mm)	1" (25mm)	

Depending upon the breed and the length of hair, choose the most appropriate guide. Increasing blade tension to force blades to cut can cause the clipper to overheat and reduce motor life. When the cutting blades no longer cut smoothly, sharpening or replacement is required.

ADJUSTABLE TAPER LEVER

The taper lever is positioned at your thumb. You can hold the clipper in your hand and adjust the lever at the same time, while you are clipping.

The taper lever adjusts the closeness of the cut from a close cut with the taper lever in the up position, to a longer length cut with the taper lever in the down

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, take basic safety precautions, including the following:

READ ALL INSTRUCTIONS BEFORE USING.

KEEP AWAY FROM WATER.

DANGER — Any appliance is electrically live, even when the switch is off. To reduce the risk of death or injury by electric shock:

1. **Unplug this appliance before cleaning.**
2. Do not place or store appliance where it can fall or be pulled into a tub or sink.
3. Do not use while bathing or in a shower.
4. Do not place in, or drop into water or other liquid.
5. **Do not reach for an appliance that has fallen into water. Unplug immediately. Use in a dry location only. Do not expose to liquid, vapor or rain.**
6. Except when charging, always unplug this appliance from electrical outlet immediately after using.
7. Always verify rating before plugging adapter in.

WARNING — To reduce the risk of burns, electric shock, fire, or injury to persons:

1. **This appliance should never be left unattended when plugged in. Do not pull, twist, or wrap line cord around appliance.**
2. This appliance should not be used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended purpose as described in this manual. Do not use attachments not recommended by the manufacturer. Do not use an extension cord to operate this appliance.

4. **Never operate this appliance if it has a damaged cord or plug, or if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for examination and repair.**
5. Keep the cord away from heated surfaces.
6. Never drop or insert any object into any opening on this unit.
7. Do not place appliance on any surface while it is operating.
8. Do not use this appliance with a damaged or broken comb or with teeth missing from the blades as injury may occur. Before use, make certain blades are aligned properly. (See “Care of your unit”).
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked.
11. Always attach plug to appliance first, then to outlet. To disconnect, turn all controls to “OFF” then remove plug from outlet.
12. Avoid skin contact with moving blades.
13. When using the appliance with its cord, be mindful of tangles or kinks in the cord. If the cord does become tangled during use, turn the unit off and straighten cord before operating again.
14. Always connect adapter to appliance first, then to outlet.
15. This power unit is intended to be correctly oriented in vertical floor mount position.
16. Be sure voltage selector is in correct position before operating.
17. For connection to a supply not in the U.S.A./Canada, use an attachment plug adapter of the proper configuration for the power outlet.

PALM-PRO MICRO PET TRIMMER

Directions for use:

1. Prior to turning trimmer on, please be sure that battery has been properly installed.
 - a) Slide battery compartment cover to open.
 - b) Insert one AA alkaline battery into trimmer.
 - c) Replace battery cover.
2. Turn trimmer on by pushing rocker switch on bottom of unit forward to "I-ON" position. Please be sure to turn trimmer off immediately after use to preserve battery life.
3. There are two trimmer attachments for either a medium or a long cut. Simply place one side of attachment over the front of the blades and snap the other side in place. To remove, pull tab away from one side.
4. Always purchase the correct size and grade of battery most suitable for the intended use.
5. Replace all batteries of a set at the same time.
6. Clean the battery contacts and also those of the device prior to battery installation.
7. Ensure the battery is installed correctly with regard to polarity (+ and -).
8. Remove battery from equipment which is not to be used for an extended period of time.
9. Remove used batteries promptly.
10. Store unused batteries in their original packaging, away from metal objects that could short-circuit them. Never short-circuit batteries.
11. Never dispose of batteries in fire, except under conditions of controlled incineration. (Failure to observe this precaution may result in an explosion).




Never attempt to recharge primary batteries as this may cause leakage, fire, or explosion. Please be sure that the attachments are firmly in place before turning the trimmer on.

BLADE REPLACEMENT

This trimmer comes with a detachable blade set, which makes maintenance and replacement easy.

TO REMOVE THE BLADE SET:

- Make sure the trimmer is in the "O-OFF" position.
- Facing the front of trimmer, press the blade on the teeth in the direction away from you until they pop out of the housing.

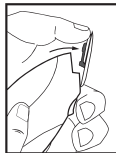

TO REPLACE THE BLADE SET:

- Looking at the trimmer from above, you will see a notch at the back of the trimmer.
- There is a tab on the blade set on the bottom, opposite the blades. Position that tab so that it fits into the notch inside the trimmer head. Push the blade set down onto the trimmer head until it snaps into place.

Oiling blades:

For best results, put a drop of lubricating oil on the blade approximately once a month. Motor bearings are permanently lubricated – do not attempt to oil.

Notice – do not over oil:

This trimmer requires very little oiling. When it is necessary to oil, turn trimmer on, hold the unit with blades facing DOWN, and squeeze one drop of oil onto blades. Wipe off excess with soft cloth.

BATTERY REMOVAL INSTRUCTIONS

1. Using a small screwdriver, remove the screw on the bottom housing at back of the clipper.
2. Remove the top housing by hand.
3. Now the battery is exposed so you can separate the wire connectors. Carefully hold the wires on each side of the connector and gently cut the wires. The connector will separate and the batteries can be removed from the inner housing. Bring the battery to the nearest collection center for disposal or call the toll-free RBRC information line at 1-800-8-BATTERY. RBRC is a trademark of The Rechargeable Battery Recycling Corporation. **DO NOT** throw the batteries into the normal municipal waste system.


Never use cord to pull clipper. Never twist or otherwise obstruct cord. To store, coil cord loosely and secure with a twist tie.

SPECIAL OIL

To maintain the blades of your ConairPET™ clipper, be sure to lubricate them regularly with oil. Gently place 2 or 3 drops of oil on the teeth of the blades before each use. Turn clipper on for a minute, then turn off. This will help maintain blade sharpness and prevent damage from overheating. Oil is included in your clipper set. This light, natural oil was formulated specifically for the ConairPET™ clipper. Because it is the right oil to use, it will not slow down the blades. Never use any other product. There is no substitute for ConairPET™ oil. **KEEP OIL AWAY FROM CHILDREN.**

**WARNING:
IF YOU THINK
THE POWER IS OFF
WHEN THE SWITCH
IS OFF,
YOU'RE WRONG.**

TENIR LOIN DE L'EAU

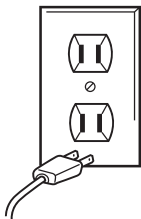

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically alive even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

**ALWAYS UNPLUG
SMALL APPLIANCES**

STORAGE

When not in use, your clipper should be disconnected and stored in a safe, dry location, out of reach of children.

