

PROFESSIONAL
EVEN CUT
Rotary Cutting



CONAIR FOR *men*™

Have a Question?

*Please do not return this product
to the retailer.*

Call Us First!

**Our customer service and product
experts are ready to answer ALL your
questions.**

**Please call our TOLL-FREE customer
service number at: 1-800-472-7606
or visit us online at
www.conaircanada.ca**

Instruction Booklet

For your safety and continued enjoyment
of this product, always read the instruction
booklet carefully before using.

Model HC900C

SERVICE CENTRE

©2014 CONAIR CONSUMER PRODUCTS ULC

100 Conair Parkway
Woodbridge Ontario, L4H 0L2

For more information on any Conair

product call: 1-800-472-7606

Visit our Web site:

www.conaircanada.ca

Consumer Call Centre E-mail:

 
Consumer_Canada@Conair.com

13CN142816

IB-12246

CHANGING THE COMB GUIDE LENGTH SETTING

Comb guide 1 for grades 1-3, will lock into 3 different positions, providing 3 cutting length grade settings. Comb guide 2 for grade 4, locks into 1 position and provides 1 cutting length grade setting. The comb guide will be marked with its grade settings (Fig.3). In order to change the grade setting release the comb guide locking mechanism found on the side of the clipper (Fig.4) and rotate the comb guide either clockwise or anti-clockwise as appropriate (Fig.5). Line up the grade setting you want with the 'I' mark on the clipper. Make sure that the locking mechanism is in the locked position and the comb guide is securely in place before using the clipper.

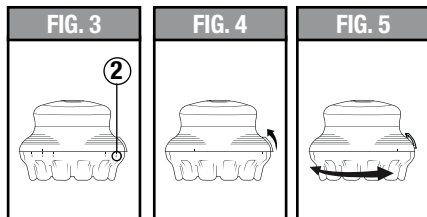

REMOVING A COMB GUIDE

 
To remove the comb guide unclip the guide-locking mechanism found on the side of the clipper and rotate the comb guide in a clockwise direction until it is completely free of the clipper.

OILING INSTRUCTIONS

IMPORTANT - It is highly recommended before each use to oil the circular blades with the oil provided. This ensures optimum cutting performance.

For the first use you will need to use the oil supplied with the product, unscrew the cap and cut off the very end of the plastic tube with a pair of scissors to release the oil.

Before each use, we recommend adding a few drops of oil provided in the oil slots inside the blade ring.

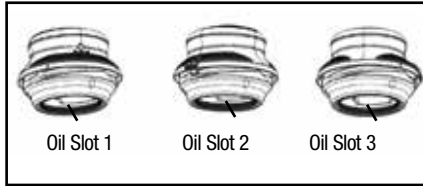

PRESERVING THE BATTERIES


In order to maintain the optimum capacity of the rechargeable batteries, the appliance has to be fully discharged and then recharged for 16 hours every 3 months approximately.

COMB GUIDES

This appliance is supplied with 2 adjustable comb guides that provide 4 cutting lengths from grades 1-4.

CUTTING LENGTH	GRADE
1/8"	#1
1/4"	#2
3/8"	#3
1/2"	#4

 
The comb guide with the shorter teeth will cut at the 3 shorter lengths while the comb guide with the longer teeth will cut at the 1 longer length setting.

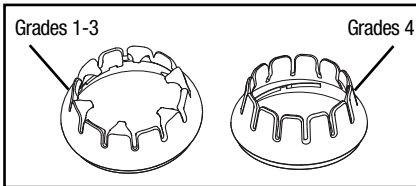

If you desire a grade 0 cut, the clipper can be used without a comb guide for an ultra close, even cut.

ATTACHING A COMB GUIDE

 To attach a comb guide, make sure the appliance is switched off. Hold the clipper with the blades facing downwards and place the comb guide over the top of the clipper with the teeth of the comb facing downwards. Release the comb guide locking mechanism, located on the side of the appliance, by sliding it away from the comb guide. Line up the dot indicator on the comb guide (Fig. 1) with the grade setting marker on the clipper (Fig. 1) then gently rotate the comb guide in a counter-clockwise direction until it clicks into place (Fig. 2). Make sure that the locking mechanism is in the locked position and the comb guide is securely in place before using the clipper.

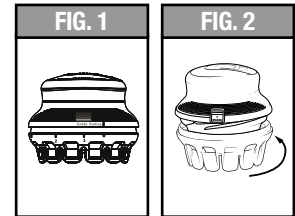

MODEL HC900C



Stainless
Steel Blades

Ergonomic Design



Cord/Cordless Clipper



- ① Barber Comb
- ② Scissors
- ③ Neck Brush
- ④ Oil
- ⑤ Storage pouch
- ⑥ 2 Adjustable Comb Guides

LIMITED FIVE YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 60 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service centre listed below, together with your purchase receipt and \$5.00 for postage and handling. In the absence of a purchase receipt, the warranty period shall be 60 months from the date of manufacture.

ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 60 MONTH DURATION OF THIS WRITTEN WARRANTY. IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

This warranty gives you specific legal rights, and you may also have other rights which vary from province to province.

FEATURES

- Corded or cordless operational clipper. Use corded for continuous power while plugged into the outlet or use cordless for total flexibility and control during use.
- Ultra sharp stainless steel blades for fast, precise cutting.
- Ergonomic design – it fits into the palm of your hand.
- 2 adjustable comb guides for grades 1-4 (comb guide 1 cuts lengths 1/8", 1/4" and 3/8" and comb guide 2 cuts lengths 1/2").
- Includes barber's comb, neck brush, scissors, storage pouch, oil, and barber cape.

The hair clipper is perfect for maintaining a short even length all over. It has been designed with a unique rotary cutting system and circular comb guides to give a guaranteed even finish. Because of this revolutionary technology the cutting technique differs somewhat to that of a normal clipper, in fact this cutting technique is much simpler!

The Even Cut is designed for cutting grades 1-4 to an even length. **It is not however, suitable for layering or grading.** A shorter hair style length (1" or less is recommended), is needed for initial use of this item. There are two comb guides; the smaller comb guide is for grades 1-3 and the larger comb guide for grade 4.

Note Comb Guides section for detailed breakdown of lengths.

Firstly, select the desired comb guide and lock the length setting in place lining up the grade length number to the grade setting indicator line.



For the best results we advise you start cutting the top of the head and with a sweeping motion run from the back to the front of your head concentrating on one area until you reach the desired length.

Once you have completed this over your whole head you should then finish using circular motions as this ensures you achieve a perfect even finish. Please note that when you first begin cutting your hair you may notice that some hair is being cut and other hairs are left long. This is perfectly normal, especially if you are cutting longer hair. This is because hair grows in different directions and the Easy Cut clipper is designed to be used in all directions against the hair growth. So continue cutting in all directions until all hair is cut to length, then the use of circular motions over the whole head will ensure an even finish.

OPERATION

CHARGING INSTRUCTIONS

IMPORTANT - The Even Cut is so easy to use, but before you do anything you must take your time to charge the unit for 16 hours before its first use. Even if you want to use it plugged in straight from the outlet, this initial super-charge ensures optimum power performance to give smooth fast cutting every time. Only use the adaptor supplied with this appliance. Using other adaptors may cause a hazard.

- Before using for the first time, the appliance should be fully charged continuously for 16 hours. Maximum battery capacity will only be reached after 3 charging and discharging cycles.
- Ensure the appliance is switched off.
- Insert the small plug on the charging adaptor into the socket on the side of the appliance.
- Plug the charging unit into a suitable outlet socket.
- The red charging indicator light on the power handle will illuminate when the appliance is correctly connected to the outlet.
- A full charge will supply enough power for approximately 20 minutes of use.

CLEANING & MAINTENANCE OF CLIPPER

To maintain optimum performance, the appliance should be cleaned after each use:

- Remove the comb guide after use. Rinse the comb guide under running water and dry thoroughly before storage or use.
- Never place the clipper under running water.
- After each use ensure hair is emptied from the blade area and use the cleaning brush to clean thoroughly.
- It is highly recommended to apply a small amount of oil (provided) to the blades before each use.
- Wipe the outside with a damp cloth and dry thoroughly before use or storage.

STORAGE

 
 
When not in use, allow clipper to cool and store in a safe, dry location and out of the reach of children. Never pull, twist or wrap the cord around the clipper.

BATTERY DISPOSAL

This appliance contains Nickel Metal Hydride batteries. To protect the environment this appliance and its batteries must be disposed of safely. At the end of its life, please take this appliance to a recycling center, where the internal rechargeable battery should be removed by a professional and recycled separately. For more information about the recycling of electrical and battery operated appliances please contact your local council office or your household waste disposal service. For specific enquiries regarding the replacement of batteries in this product please contact our Conair Customer Care Line.



CONTAINS NICKEL METAL HYDRIDE BATTERIES. MUST BE COLLECTED, RECYCLED OR DISPOSED OF PROPERLY. DO NOT DISPOSE OF IN THE MUNICIPAL WASTE.

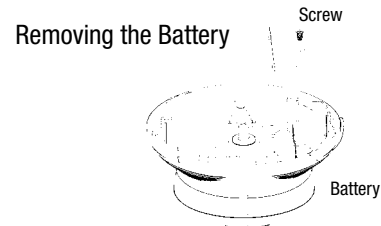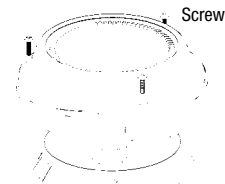

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER FOR HOUSEHOLD USE ONLY

DANGER — Any appliance is electrically live, even when the switch is off.

To reduce the risk of death or injury by electric shock:

1. **Always unplug appliance from electrical outlet immediately after using (except when charging unit).**
2. Do not place or store appliance where it could fall or be pulled into a tub or sink.
3. Do not use appliance while bathing or in the shower.
4. Do not place appliance in, or drop into, water or other liquid.
5. Do not reach for an appliance that has fallen into water. **UNPLUG IMMEDIATELY.** Dry location use only. **DO NOT** expose to liquid, vapor or rain.
6. Unplug this appliance before cleaning.
7. Only use adapter that is specified with this unit.

DO NOT REACH INTO THE WATER

WARNING — To reduce the risk of burns, electric shock, fire, or injury to persons:

1. Never leave a plugged-in appliance unattended.
2. This appliance should not be used by children or individuals with certain disabilities.
3. Use appliance only for its intended use as described in this manual. Only use attachments recommended by the manufacturer. Do not use an extension cord to operate the appliance.
4. Never operate the appliance if it has a damaged cord or plug, is not working properly, has been dropped or damaged, or dropped into water. Return the appliance to a Conair service center for examination and repair.
5. Keep the appliance cord away from heated surfaces.
6. Do not pull, twist or wrap the cord around the appliance.
7. Never drop or insert any object into any opening of the appliance.
8. Do not place the appliance on any surface while it is operating.
9. Do not use the appliance with a damaged or broken comb or with teeth missing from the blades, as injury may result. Before each use, make certain the blades are aligned properly and oiled.
10. Do not use the appliance outdoors or where aerosol (spray) products are being used or oxygen is being administered.

11. Do not short the polarity (output cord). Ensure jack is plugged into the unit before plugging the adapter into outlet.

12. This power unit is intended to be correct as per instruction booklet.

13. For connection to a supply not in the U.S.A., use an attachment plug adapter of the proper configuration for the power outlet.

14. Always attach plug to appliance first, then to outlet. To disconnect, turn all controls to "OFF", then remove plug from outlet.

15. When using the appliance with its cord, be mindful of tangles or kinks in the cord. If the cord becomes tangled during use, turn the unit off and straighten cord before operating again.

16. CAN ICES-3(B)

SAVE THESE INSTRUCTIONS

USER MANUAL

The Conair for Men Even Cut Clipper is a revolution in home hair cutting. The clipper's unique circular blades mean that it can be used in any direction over the head to maintain an all over even cut.

The clipper comes with adapter:

Adapter: CA15

Rating input: 100-240V AC 50/60Hz

Rating output: 3.0V DC 1500mA

PREPARATION FOR USE

- Always inspect the appliance for noticeable signs of damage. Do not use if damaged.
- Always inspect the appliance before use to ensure the clipper blades are free from hair, debris etc. (see Cleaning & Maintenance of clipper).
- Prior to use always inspect the head for warts, moles, spots and broken skin. If using the clipper on yourself either use mirrors or ask another person to check for you. Special care should be taken when cutting hair in areas that have warts, moles, spots or broken skin, to prevent injury.
- Remove any head jewelry such as earrings and necklaces before use.
- For best performance use on clean, dry hair that has been combed until tangle-free.
- If hair is long, use the scissors and comb provided to cut the hair prior to using the clipper.
- Ensure the appliance is sufficiently charged or plugged into the outlet.

WARNING - The clipper is for use only on the head. Never use the clipper on the face or any other area of the body.

IMPORTANT - Do not attempt to trim hair close to your ears with the clipper. Never allow ears to enter the ring of the clipper blade.

CLIPPING

- Attach a comb guide as required. Note Comb Guides section for specific lengths.
- Switch on the clipper using the on/off sliding switch located on top of the clipper and the blades will start to move and the green LED will illuminate.
- Begin cutting on the top of your head. Slowly and gently steer the clipper around the scalp, taking care on areas where there may be warts, moles, spots and broken skin and keep away from the ears.
- Again, remember you must have a shorter hair style, length to begin, as this item will not work on longer, layered hair.

FOR BEST RESULTS USE IN A CIRCULAR MOTION.

- The clipper can be moved in any direction to cut your hair. Only apply gentle pressure. Never force the clipper - if resistance is experienced lift clipper away from the head, empty hair from the clipper and resume clipping.
- If using on areas where there are folds of skin, ensure the skin is stretched taught prior to cutting hair in this area.
- If you experience any discomfort stop using immediately.
- **NOTE** - Hair will collect in the area inside the blade ring. This may need to be emptied before all the hair has been cut. Switch the clipper off and remove any hair by simply tapping gently on the top of the clipper.
- If you require a grade 0 cut, the clipper can be used without a comb guide attached for an ultra close, even cut.