 


## Personal Hair Trimmer for Women

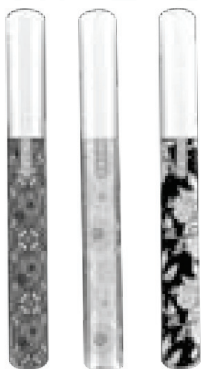

### Have a Question?

*Please do not return this product  
to the retailer.*

### Call Us First!

Our customer service and product experts  
are ready to answer ALL your questions.

Please call our TOLL-FREE  
customer service number at:

1-800-472-7606

or visit us online at  
[www.conaircanada.ca](http://www.conaircanada.ca)

# CONAIR<sup>TM</sup>

Instructions for Care and Use

MODEL LT30CSC

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially basic precautions should always be followed, including the following:

### READ ALL INSTRUCTIONS BEFORE USING

### KEEP AWAY FROM WATER

To reduce the risk of electric shock:

1. Do not reach for an appliance that has fallen into water.
2. Do not use while bathing or in the shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.

## DO NOT REACH INTO THE WATER WARNING

—To reduce the risk of burns, electric shock, fire, or injury to persons:

1. This appliance should not be used by, on, or near children or by individuals with certain disabilities.
2. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
3. Never operate this appliance if it is not working properly, if it has been dropped, damaged, or

## TRIMMING TIPS

1. Place the trimmer at a slight right angle to the skin, and trim in the direction of hair growth.
2. Continue trimming in the direction of growth. Be careful not to apply excess pressure to the blade. This may damage the blade, and can result in injury to the skin during trimming.
3. Pull the skin firmly with one hand during the trimming process to ensure the closest possible shave.

## REPLACING THE BATTERY:

To replace battery first remove lower housing and remove/replace battery and re-assemble to cover housing. Dispose of battery properly after use. Do not incinerate.

1. Be sure appliance is off and remove the protective cap. Hold the upper part of the trimmer firmly and pull off battery cover. (Handle tube)
2. Insert 1 "AAA" battery. Pay close attention, making sure that the battery is inserted in the correct direction (+ / - poles). If you expect that the trimmer will go unused for some time, please remove the battery.
3. Slide the on/off switch into the notch in the battery cover when closing the trimmer. \*For best performance "AAA" alkaline batteries are recommended.
4. Ensure the batteries are installed correctly with regard to polarity (+ and -).
5. Remove the battery if the battery is no longer functional or if the trimmer is left unused for an extended period of time.
6. Clean the battery contacts and also those of the device prior to battery installation.
7. Remove used batteries promptly.
8. Use only alkaline batteries.

\* Do not use in the shower or submerge unit in water.

\*For best performance "AAA" alkaline batteries are recommended.

## CARE AND MAINTENANCE:

Do not use water to clean, and do not use the trimmer in a damp room. Do not use harsh cleansing products. Instead, use mild cleaning agents to care for the trimmer.

1. Make sure the trimmer is in the off position.
2. To remove the blade, press the blade release button away from the trimmer blade.
3. Carefully remove the blade from the trimmer.
4. Use a small brush located inside the lower housing to wipe away any hair or dust. Never remove foreign matter with a sharp object.
5. After cleaning, replace the blade. Make sure unit is still in the off position when replacing blade. Cover blade with protective cap for storage.

dropped into water.

Return the appliance to service center for examination and repair.

4. Never operate the appliance with the air opening blocked or while on a soft surface, such as a bed or couch, where the air openings may be blocked.

Keep the air openings free of lint, hair and the like.

5. Never drop or insert any object into any opening.

6. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

7. Do not place appliance on any surface while it is operating.

8. Do not use this appliance with a damaged or broken comb or with teeth missing from the blades, as injury may occur.

9. Avoid skin contact with moving blades.

# OPERATING INSTRUCTIONS

## BEFORE USE:

 
Prior to initial use, test trimmer on small area of arm or leg. If any signs of allergic reaction or sensitivity occur, discontinue use. Do not use trimmer on ultra sensitive or irritated skin. Keep out of reach of children.

## TO OPERATE TRIMMER

This trimmer comes with a two trimming blades. The larger blade can be used to trim body hair and eyebrows. The smaller blade is ideal for

detailing.

It also comes with an attachment comb that helps you achieve an even cut when you do not want to completely remove the hair. The attachment comb has two sides, the longer tooth is good for body hair while the shorter one is good for eyebrow trimming. Aligning the indicator with the L mark on the comb leaves hair longer while aligning with S mark leaves hair shorter.


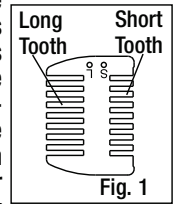


To use the attachment comb, be sure the unit is in the "off" position and slide it over the trimming blades. Make sure that the teeth of the comb are facing in the same direction as the trimming blade and that the top of the comb is even with the top of the trimmer. (See Fig. 1)

If you want to completely remove hair, use the trimmer without the attachment comb.


To operate the trimmer, slide the "on" switch towards the trimming blades. When you are finished trimming, slide the "on" switch away from the blades.

  To store the Trimmer, slide the attachment comb over the trimming blades. Be sure to align triangle sign on the comb attachment with indicator on the trimmer housing. (see Fig. 2) Then slide the protective cap over the attachment comb (see Fig. 3).



# GET TO KNOW YOUR TRIMMER
 
## MODEL LT30CSC

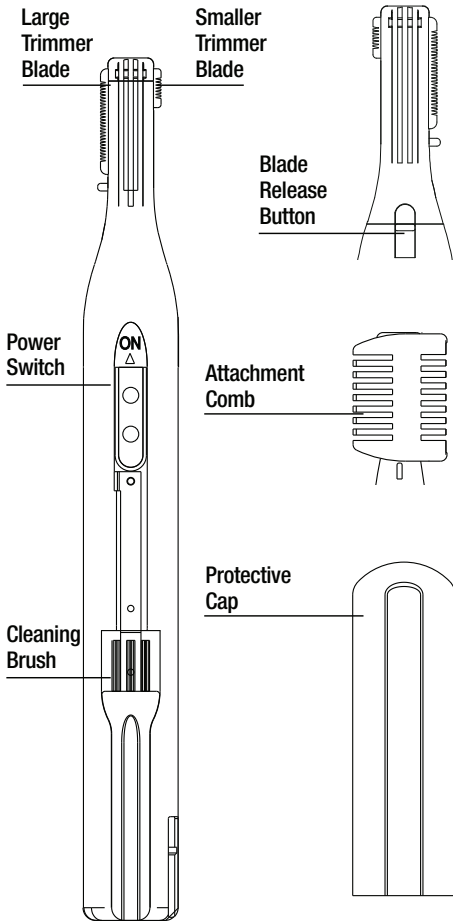

### LIMITED TWO YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service centre listed below that is nearest you, together with your purchase receipt and \$5.50 for postage and handling. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.

**ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24 MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.**

**IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.**

This warranty gives you specific legal rights, and you may also have other rights, which vary from province to province.

#### SERVICE CENTRE:

Conair Consumer Products Inc.  
100 Conair Parkway, Woodbridge, Ontario, L4H 0L2.

©2011 Conair Consumer Products Inc.  
For information on any Conair product call 1-800-472-7606 or visit us on the web at: [www.conaircanada.ca](http://www.conaircanada.ca).  
Consumer Call Centre E-mail : [Consumer\\_Canada@Conair.com](mailto:Consumer_Canada@Conair.com)

10CN118354

IB-10437