

## Instruction Guide

### 2 in one trimmer

Model  
TSLT3C

# OPERATING INSTRUCTIONS

## BEFORE USE:

Prior to initial use, test trimmer on small area of arm or leg. If any signs of allergic reaction or sensitivity occur, discontinue use. Do not use trimmer on ultra sensitive or irritated skin. Keep out of reach of children.

## TO OPERATE TRIMMER:

This trimmer comes with a two trimming blades. The larger blade can be used to trim body hair and eyebrows. The smaller is ideal one for details.

It also comes with an attachment comb that helps you achieve an even cut when you do not want to completely remove the hair. The attachment comb has two sides, the longer tooth is good for body hair while the shorter is good for eyebrow trimming. Align the indicator with the L mark on the comb leaves hair longer while align with S mark leaves hair shorter.

To use the attachment comb, be sure the unit is in the "off" position and slide it over the trimming blades. Make sure that the teeth of the comb are facing in the same direction as the trimming blade and that the top of the comb is even with the top of the trimmer. (See Fig. 1)

If you want to completely remove hair, use the trimmer without the attachment comb.

To operate the trimmer, slide the "on" switch towards the trimming blades. When you are finished trimming, slide the "on" switch away from the blades.

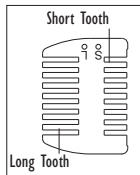 


Fig.1

To store the Trimmer, slide the attachment comb to cover the trimming blades. Be sure to align triangle sign on the comb attachment with indicator on the trimmer housing. (see Fig. 2) Then, slide the protective cap over the attachment comb so that the triangle sign on protective cap aligns with the triangle sign on the handle tube (see Fig. 3)

 


Fig.2

 


Fig.3

## TRIMMING TIPS

1. Place the trimmer at a slight right angle to the skin, and trim in the direction of hair growth.
2. Continue trimming in the direction of growth. Be careful not to apply excess pressure to the blade. This may damage the blade, and can result in injury to the skin during trimming.
3. Pull the skin firmly with one hand during the trimming process to ensure the closest possible shave.

## REPLACING THE BATTERY:

To replace battery, remove lower housing, remove/replace battery and re-assemble to cover housing. Dispose of battery properly after use. Do not incinerate.

1. Be sure appliance is off and remove the protective cap. Hold the upper part of the trimmer firmly and pull off battery cover. (Handle tube).

2. Insert 1 "AAA" battery. To avoid trimmer damage pay close attention, making sure that the battery is inserted in the correct direction(+ / - poles). If you expect that the trimmer will go unused for some time, please remove the battery.

3. Slide the on/off switch into the notch in the battery cover when closing the trimmer:

 
\* For best performance, "AAA" Alkaline batteries are recommended.

### CARE AND MAINTENANCE:

Do not use water to clean, and do not use the trimmer in a damp room. Do not use harsh cleansing products. Instead, use mild cleaning agents to care for the trimmer.

1. Make sure the trimmer is in the off position.
2. To remove the blade, press the blade release button away from the trimmer blade.
3. Carefully remove the blade from the trimmer.
4. Use a small brush located inside the lower housing to wipe away any hair or dust. Never remove foreign matter with a sharp object.
5. After cleaning, replace the blade. Make sure unit is still in the off position when replacing blade. Cover blade with protective cap for storage.

## GET TO KNOW YOUR TRIMMER

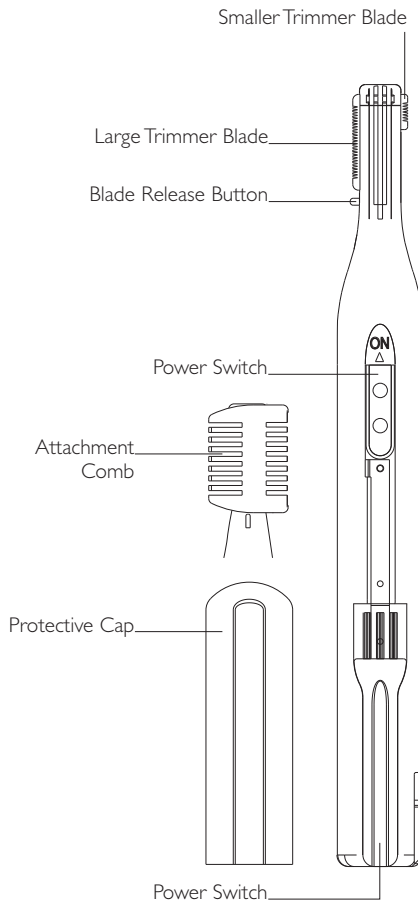

## LIMITED TWO-YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service centre listed below, together with your purchase receipt and \$5.50 for postage and handling.

In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.

**ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.**

**IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.**

This warranty gives you specific legal rights, and you may also have other rights which vary from province to province.

### Service Centre

Conair Consumer Products Inc.  
100 Conair Parkway,  
Woodbridge, ON L4H 0L2

Travel Smart® is a trademark of Conair Consumer Products Inc.  
Customer Service  
1-800-472-7606

[www.travel-smart.ca](http://www.travel-smart.ca)

Travel Smart®, a division of Conair Consumer Products Inc.  
100 Conair Parkway,  
Woodbridge, ON L4H 0L2

© 2008 Conair Consumer Products Inc.