

# Curl Secret™ M/C

## IMPORTANT SAFEGUARD

***PLEASE READ THIS CARD  
AND INSTRUCTION BOOKLET  
BEFORE USE***

**IMPORTANT:** To prevent tangling of hair, ensure the opening of the Curl Secret™ curl chamber is always facing toward your head as indicated and pictured below. Failing to use the styler in the correct position greatly increases the risk of tangling.



✓ **Correct curl chamber position**



✗ **Incorrect curl chamber position**

### ANTI-TANGLE FEATURE:

Curl Secret is safe and easy to use when used properly. However, should improper use occur, the anti-tangle feature has been designed to immediately stop drawing the hair in and reverse to a neutral position. Simply open the handles and ease hair out of the curl chamber.

**MOST IMPORTANT:** For more serious tangles, unplug the unit and gently work the hair out of the unit.

### GETTING STARTED:

1. Comb through clean, dry hair so it is smooth and free of tangles.
2. Work with 1/2 in.–1 in. sections (longer hair requires smaller sections).
3. Wait for red blinking light to remain solid before starting.
4. **ENSURE THE OPENING OF THE CURL CHAMBER IS ALWAYS FACING TOWARD YOUR HEAD.**