 


# GETTING TO KNOW YOUR FABRIC SHAVER

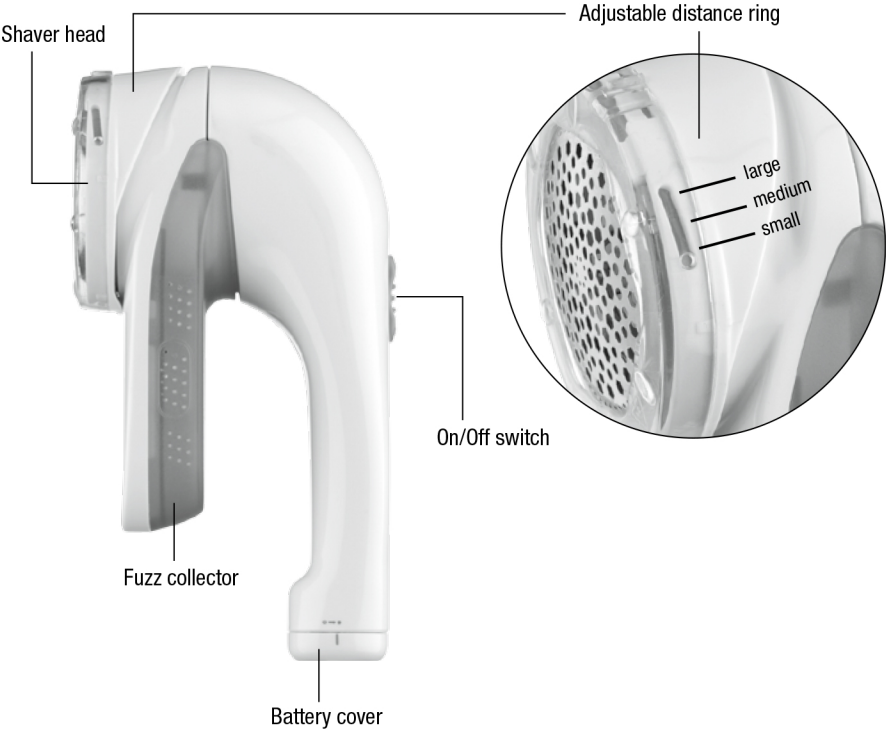

**LIMITED ONE YEAR WARRANTY**  
Conair will repair or replace, at our option, your appliance free of charge for 12 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service centre below together with your sales slip and \$7.50 for postage and handling.

**ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 12 MONTH DURATION OF THIS WARRANTY.**

**IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.**

This warranty gives you specific legal rights, and you may also have other rights which vary from province to province.

**Please register this product at:**  
**[www.conair.com/registration](http://www.conair.com/registration)**

**SERVICE CENTRE:**  
**CONAIR CONSUMER PRODUCTS ULC**  
100 Conair Parkway  
Woodbridge Ontario, L4H 0L2

©2013 CONAIR CONSUMER PRODUCTS ULC  
For more information on any Conair product call:  
1-800-472-7606  
Visit our Web site: [www.conaircanada.ca](http://www.conaircanada.ca)  
Consumer Call Centre E-mail:  
[Consumer\\_Canada@Conair.com](mailto:Consumer_Canada@Conair.com)

13CN143824

IB-12353

# battery operated FABRIC DEFUZZER

Removes  
FUZZ, LINT  
& PILLING



## HAVE A QUESTION?

*Please do not return this product to the retailer.*

**CALL US FIRST!**

Our customer service and product experts are ready to answer **ALL** your questions. Please call our **TOLL-FREE** customer service number at :

**1-800-472-7606**

Or visit us online at

**[www.conaircanada.ca](http://www.conaircanada.ca)**

Instructions for Use

**Model CLS1WC**

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

## IMPORTANT SAFETY INSTRUCTIONS

**THE APPLIANCE MUST  
NOT COME INTO CONTACT  
WITH WATER.**

**DO NOT USE  
ON DAMP TEXTILES!**


The fabric defuzzer might damage structured textiles or very soft materials such as Angora wool. Always test on an area that is not visible on the item you want to treat. In testing, set the distance ring to the highest level.

## OPERATING INSTRUCTIONS

1. Put the item you want to treat on an even surface.
2. Turn the distance ring to the appropriate position or remove the ring entirely depending on the distance required.
3. Switch the unit "I" (ON).
4. Without applying pressure, run the shaver head lightly over the parts you wish to remove the fuzz from. Fuzz will accumulate in the fuzz collector.
5. After use, switch the unit "O" (OFF).


**IMPORTANT:** Empty the fuzz collector regularly and before it becomes overfilled, which can cause the unit to slow down or stop. If

unit slows or stops, check and empty fuzz collector prior to replacing the batteries.

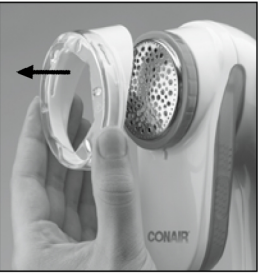

### REMOVING AND FITTING THE DISTANCE RING


**TO REMOVE:** Grasp both sides of the ring

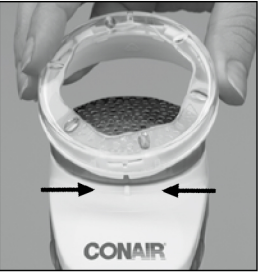

and pull it off the unit in the direction of the arrow.

**TO FIT:** Push the distance ring onto the unit so that the recess on the distance ring engages the lug on the body of the shaver. This ensures that the distance ring does not twist when you adjust it.

## EMPTYING THE FUZZ COLLECTOR

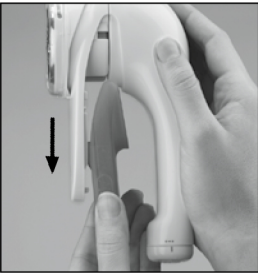

Slide the fuzz collector downward and out of the unit.

Empty the collector and slide it straight into the unit until it engages audibly.

## CLEANING THE FABRIC DEFUZZER AND SHAVER HEAD

 



1. Remove the batteries from the appliance.
2. Remove the distance ring and turn the shaver head counterclockwise to remove it.



3. Brush out residual fuzz with any small cleaning brush. **CAUTION:** Blades are extremely sharp and can be damaged easily.
  4. Reattach the shaver head and fit the distance ring.
- If necessary, wipe off the unit casing with a slightly dampened cloth.

## INSERTING BATTERIES

Open the battery compartment by sliding the mark on the battery compartment lid against the marking arrow on the handle to  and lift it off. Insert the two (2) AA batteries (not included) so that the +/- terminals on each battery match the markings in the battery compartment. Place the battery cover back on and then turn it in the direction of  until it engages audibly.



## INSTRUCTIONS FOR USING BATTERIES

- Always purchase the correct size and grade of battery most suitable for the intended use.
- Replace all batteries at the same time.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Clean the battery contacts as well as those of the device prior to battery installation.
- Ensure that the batteries are installed correctly with regard to polarity (+ and -).
- Remove batteries from equipment that is not to be used for an extended period of time.
- Remove depleted batteries promptly.

## DISPOSAL OF BATTERIES

When replacing the batteries, make sure you dispose of the old batteries in accordance with applicable regulations. They should be disposed of in a location specifically designated for that purpose so they can be recycled safely without posing any risk to the environment. Do not burn or bury them.