

# IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

## READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER


**DANGER** — Any hair dryer is electrically live even when the switch is off:

To reduce the risk of death or injury by electric shock:

1. **Always unplug appliance immediately after using.**
2. Do not use while bathing.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into, water or other liquid.
5. If an appliance falls into water, unplug it immediately. **Do not reach into the water.**

**WARNING** — To reduce the risk of burns, electrocution, fire, or injury to persons:

1. **This appliance should never be left unattended when plugged in.**
2. This appliance should not be used by, on, or near children or individuals with certain disabilities.

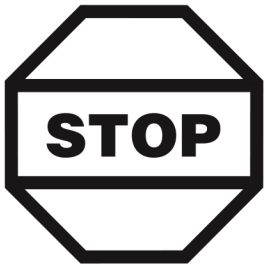

This message about...

**G**ROUND

**F**AULT

**C**IRCUIT

**I**NTERRUPTERS

...can save a life!

3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped, damaged, or dropped into water. Return the appliance to Conair for examination and repair.**
5. Keep the cord away from heated surfaces. **Do not pull, twist, or wrap line cord around dryer.**
6. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
7. Never use while sleeping.
8. Never drop or insert any object into any opening or hose.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Do not use an extension cord to operate dryer.
11. Do not direct hot air toward eyes or other heat-sensitive areas.
12. **Attachments may be hot during use. Allow them to cool before handling.**
13. Do not place appliance on any surface while it is operating.
14. While using the appliance, keep your hair out of it. Keep your hair away from the air inlets.
15. Do not use with voltage converter.

### IF YOU MUST USE YOUR HAIR DRYER IN THE BATHROOM, INSTALL A GFCI\*NOW!

Your local electrician can help you decide which type is best for you—a portable unit that plugs into the electrical outlet or a permanent unit installed by your electrician. The National Electrical Code now requires GFCI's in the bathrooms, garages, and outdoor outlets of all new homes.

**WHY DO YOU NEED A GFCI?** Electricity and water don't mix. If your hair dryer falls in water while it's plugged in, the electric shock can kill you...**even if the switch is "off."** A regular fuse or circuit breaker won't protect you under these circumstances. A GFCI offers you far greater protection.

**A GFCI can save your life! Compared to that, the price is small! Don't wait...install one now!**

\*GFCI is a sensitive device which reacts immediately to a small electric current leak by stopping the electricity flow.



16. This appliance is not a toy. Keep away from children.
- For a dual voltage hair dryer:**
  17. Be sure dual voltage selector is in correct voltage position before operating. Before plugging in, read the information about dual voltage contained in the instruction section of this manual.
  18. This appliance was set at the factory to operate at 125 volts. Refer to Additional Information section of this manual for conversion to 250 volts operation.

## SAVE THESE INSTRUCTIONS OPERATING INSTRUCTIONS

This appliance is intended for household use only. Use on Alternating Current (60 hertz) only. Standard Dryers are designed to operate at 110 to 125 volts A.C. For special dual voltage dryers, see Additional Information.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

### ADDITIONAL INFORMATION

#### FOR DUAL-VOLTAGE DRYERS

For use in the U.S.A., the voltage selector switch should be placed in the 125 position. For use in several countries overseas, the voltage selector may need to be placed in the 250 position. Confirm the voltage available at each overseas location before using the appliance. For connection to a 250 volt supply, use an attachment plug adapter of the proper configuration for the power supply receptacle.

#### For 125 Volt Operation

Flick the dual voltage switch to the 125 position. In this position, the dryer operates in all available heat and speed settings.

#### For 250 Volt Operation

First put the "I/I" switch into "I". Flick the dual voltage switch to the 250 position. At 250 while set at "I", the dryer operates only at high speed with high heat. **Do not attempt to operate the "I/I" switch or change to 125 when operating on 220-250V. The switches must be set and remain in "I" and 250 positions.** A plug adapter may be necessary in certain countries.

### OPERATING GUIDE

1. Pull cord out slowly from dryer. Stop pulling when you see the red mark. DO NOT JERK CORD.
2. Plug in dryer, then turn on heat/speed switch.
3. **To retract cord, hold dryer vertically upright and away from your face. Grasp the plug with one hand, then press and hold the retract button with the other. Guide the cord and keep it from twisting.** If the cord does not retract completely, pull it out slightly and wind it again guiding it into the reel. DO NOT RETRACT CORD WHILE DRYER IS PLUGGED IN. DO NOT ALLOW SMALL CHILDREN TO HANDLE THE RETRACTIVE POWER CORD AS THIS MAY CAUSE THE CORD TO "WHIP" AND CAUSE INJURY.

## IMPORTANT 1875 WATT OPERATING GUIDE

Use of this dryer on the same circuit or fuse with other electrical products or appliances may trip a 15 amp circuit breaker or blow a 15 amp fuse. **NEVER replace the fuse with one rated higher than the capacity of the circuit. Doing so could result in an electrical fire.**

### SUPER STYLING GUIDE

Your best looks begin with a good haircut that's well maintained. Always treat hair right with superior quality shampoos, conditioners, and finishing products.

### DRYING BASICS

1. Shampoo and condition hair with products of your choice. Rinse thoroughly. Towel blot hair to remove excess moisture. Section hair. Using the dryer along with your styling brush, direct hot air through a section of hair at a time. Move dryer steadily across each section so that the hot air passes through hair. Direct air flow at hair not scalp.
2. Keep dryer's air intake vents unobstructed and free from hair while drying.
3. To avoid over drying, do not concentrate heat on any one section for any length of time. Keep dryer moving as you style.
4. For quick touch ups, between shampoos, dampen hair with a mist of water before styling with the dryer.
5. When using your dryer to create curls and waves, dry hair almost completely on a warmer temperature setting, then finish styling with the Cool Shot feature to close hair shaft and lock in style.

### BODY & VOLUME

To create extra volume, turn head upside down while drying. Position the air flow toward the roots for maximum lift. When hair is dry, toss head back and brush hair into place.



### STRAIGHTENING

Work with hair in sections when creating a super straight look. Using a large round brush (approximately 2" in diameter), hold hair taut in each section and bend ends slightly under as you dry.



### MAKING WAVES


Tousled, natural-looking waves are easily created by grasping hair at the roots and scrunching between fingertips while drying.



### CONAIR® CORD-KEEPER® 1875 DRYER. UNIQUE FEATURES GIVE YOU PROFESSIONAL STYLING POWER:

1. **Power**  
1875 watts of drying power.
2. **Double Ceramic Technology**  
to reduce frizz and enhance shine
3. **Two Heat/Two Speed Settings**  
allows for precision styling.
4. **Cool Shot Button**  
locks in style.
5. **Folding Handle**  
for easy storage.
6. **Retractable Cord**  
with a push of a button, the dryer cord retracts into the handle.
7. **Dual Voltage**  
for worldwide travel.

### GET TO KNOW YOUR DRYER Model 289DCC

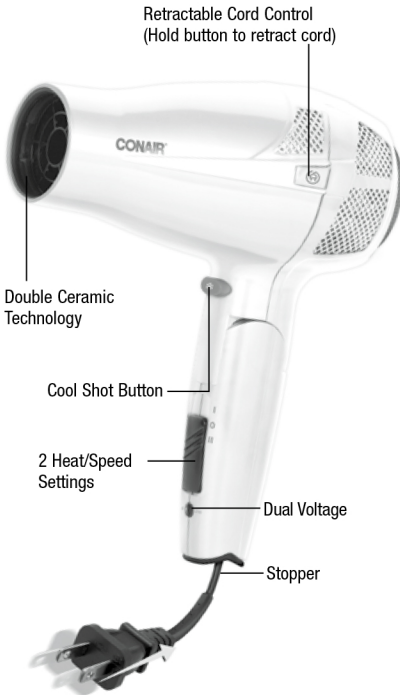

Folding Handle

# CONAIR®



## Have a Question?

*Please do not return this product to the retailer.*

### Call Us First!

Our customer service and product experts are ready to answer ALL your questions.

Please call our TOLL-FREE customer service number at: 1-855-926-6247 or visit us online at [www.conaircanada.ca](http://www.conaircanada.ca)

**Instruction & Styling Guide**  
Model 289DCC

### CAUTION

NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the dryer. Damage will occur at the high flex point of entry into the dryer, causing it to rupture and short. Inspect the cord frequently for damage. **Stop use immediately if damage is visible or unit stops or operates intermittently.**

If the cord or dryer is damaged or does not operate properly, return it for repair to an authorized Conair service representative only. No repairs should be attempted by the consumer.

### STORAGE - Important

When not in use, your dryer should be disconnected, the cord retracted, allowed to cool and stored in a safe, dry location, out of reach of children. Do not wrap line cord around dryer. **SEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.**

### LIMITED TWO YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service centre listed below, together with your purchase receipt. In the absence of a purchase receipt, the warranty period shall be 24 months of the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24 MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OF IMPLIED, WHATSOEVER.

This warranty gives you specific legal rights, and you may also have other rights, which vary from province to province.

### SERVICE CENTRE:

**CONAIR CONSUMER PRODUCTS ULC**

100 Conair Parkway, Woodbridge, Ontario, L4H 0L2

©2023 CONAIR CONSUMER PRODUCTS ULC

For more information on any Conair product call: 1-855-926-6247

Visit our Web site: [www.conaircanada.ca](http://www.conaircanada.ca)

Consumer Call Centre E-mail:

[Consumer\\_Canada@Conair.com](mailto:Consumer_Canada@Conair.com)