IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

DANGER — Any appliance is electrically live even when the switch is off. To reduce the risk of death by electric shock:

- 1. Always unplug appliance immediately after using.
- 2. Do not use while bathing or in the shower.3. Do not place or store appliance where it
- can fall or be pulled into a tub or sink.
 4. Do not place in, or drop into water or other
- liquids.
 5. If an appliance falls into water, unplug it immediately. **Do not reach into the water.**
- **WARNING** To reduce the risk of burns, electrocution, fire, or injury to persons:
- 1. This appliance should never be left unattended when plugged in.
- 2. Do not pull, twist, or wrap line cord around appliance.
- This appliance should not be used by, on or near children or individuals with certain disabilities.

TO STRAIGHTEN HAIR

Hair should be clean and completely dry before using the flat iron. For best results, use a light styling product before blow-drying hair.

- 1. Start with a hair section that is 1½ inches wide and no more than ½ inch thick.
- Open the iron and place the hair section between the two hot plates, close to the scalp. Trap hair between the plates by firmly squeezing the handles together.
- 3. While maintaining the tension, slowly pull the unit down along the hair section toward the ends. At the ends, release the pressure on the handle and allow the hair to slide out.
- 4. Repeat the process on additional sections of hair until you achieve the hairstyle you desire. It may be necessary to repeat the process on certain areas, depending on the texture of your hair.

Some experience is necessary when learning to use this flat iron. After using the iron several times, you will learn the ideal way to straighten and style your hair.

ADD VOLUME AND SHAPE

To add flips and waves, secure ends in between plates and wrap hair around the outer housing. It's an easy way to add shape to straight styles. Turn your wrist up or under to create flips, add curl or more body.

- Use this appliance only for its intended use, as described in this manual. Do not use attachments not recommended by the manufacturer.
- 5. Never operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service center for examination and repair.
- 6. Keep the cord away from heated surfaces.
- 7. Never use while sleeping.
- 8. Never drop or insert any object into any opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- 10. Unit is hot when in use. Do not let heated surfaces touch eyes or skin.
- Do not place the heated unit directly on any surface while it is hot or plugged in.
- 12. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of hair, lint and other debris.
- 13. Do not use an extension cord with this appliance.
- Do not touch hot surfaces of the appliance. Use handles or knobs.
- Do not attempt to touch the housing of your appliance near the straightening plates, as it is hot when in use.
- 16. Do not use with a voltage converter.

17. This appliance is not a toy. Keep away from children.

SAVE THESE INSTRUCTIONS OPERATING INSTRUCTIONS

Use on Alternating Current (60 hertz) only. This unit is designed to be operated at 125 volts AC.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

NOTE: Do not use this styling appliance on hair extensions.

STYLING WITH THE NEW EASY-GLIDE, FLOATING DOUBLE CERAMIC PLATE

The easy-glide Double Ceramic surface is one of the latest and best technological advances in hair appliances. With a higher ceramic content the Double Ceramic plates deliver even heat for the ultimate in silky, shiny, healthy-looking hair. You'll find that hair glides easily over the surface of the plates as you're straightening, and that it is easier to clean styling product residue, etc., off the plates after each use. The ceramic surface also helps smooth down flyaways. Your new straightening iron has a plate designed with a little give, to "float." This provides better contact with hair, eliminating gaps, for straighter results.

INSTANT HEAT TECHNOLOGY

This styling iron features a powerful PTC heater that maintains high temperatures during use for precision styling. It heats up quickly to the temperature you've selected for your hair type.

This Instant Heat technology has 5 variable temperature settings. There is a temperature range that's gentle and safe for every type of hair, from the finest to the curliest and most resistant, and helps you create the look you want. Conair's professional salon standards of engineering provide you with a uniform and improved heat recovery system that maintains the iron at constant temperatures. There is a constant surge of power to ensure that heat is continuously and quickly delivered for optimal styling results, unlike other units, which lose

heat during use. This provides consistent styling power so that every strand of your hair is set with the same level of heat and comes out the same way for a perfect finish.

The iron's unique high temperature settings and Instant Heat technology provide styling versatility for all hair types. If you have fine hair, a low temperature will provide the best results. If you have thick, wavy or hard-to-straighten hair, keep the heat setting on high. You can vary the iron's temperature according to your particular need by selecting the desired temperature setting.

Temperature Setting Guide

TEMP. CONTROL	HAIR TYPE
Low 266 °F (130°C)	Fragile/Fine Hair
Medium 302 °F (150°C)	Thin Hair
Med-High 338 °F (170°C)	Medium/Normal Hair
High 374 °F (190°C)	Wavy/Curly Hair
Maximum 410 °F (210°C)	Coarse/Thick Hair

GETTING STARTED

Plug the iron into an electrical outlet. Press "I/0" (ON/0FF) button. The iron will heat up to the default temperature setting (338°F/170°C). Adjust temperature to desired level. Red light will blink until it reaches desired temperature setting and then becomes solid. To turn off, press "I/0" (ON/0FF) button (lights will go off). Never leave your flat iron on and unattended. However, should you fail to turn the unit off, it will shut itself off automatically within 60 minutes.

WARNING: The flat iron's Double Ceramic plates will get very hot within a few seconds and should not come into contact with the skin after the flat iron has been turned on.

GET TO KNOW YOUR FLAT IRONS



*As compared to typical straightener plate length of 85mm. **As compared to standard Conair ceramic coating

DOUBLE

CERAMIC

1 IN. (25 MM) FLAT IRON

Have a Question?

Please do not return this

product to the retailer.

Call Us First!

Our customer service and product experts

USER MAINTENANCE

Your flat iron is virtually maintenance free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the unit from the power source, allow it to cool and wipe exterior with a cloth. If any abnormal condition occurs, unplug the unit, allow it to cool, and return it for repair to an authorized service representative only. No repairs should be attempted by the consumer.

CAUTION

 
NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the appliance. Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your iron is easy to store. Allow appliance to cool, then simply store out of reach of children in a safe, dry location. **Do not jerk or strain cord at plug connections.** Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

WARNING: IF YOU THINK THE POWER IS OFF WHEN THE SWITCH IS OFF, YOU'RE WRONG.

KEEP AWAY FROM WATER



Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES

LIMITED THREE-YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace (at our option) your unit free of charge for 36 months from the date of purchase if the appliance is defective in workmanship or materials. To obtain service under this warranty, return the defective product to the service center listed on back, together with your purchase receipt and \$7.50 for postage and handling. ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES. INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 36-MONTH DURATION OF THIS WRITTEN. LIMITED WARRANTY. IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR **CONSEQUENTIAL DAMAGES FOR BREACH** OF THIS OR ANY OTHER WARRANTY. EXPRESS OR IMPLIED, WHATSOEVER.

This warranty gives you specific legal rights, and you may also have other rights which vary from province to province..

SERVICE CENTRE:

Conair Consumer Products ULC 100 Conair Parkway, Woodbridge, Ontario, L4H 0L2

1-855-926-6247 ©2019 Conair Consumer Products ULC

www.conaircanada.ca

Consumer Call Centre E-mail: Consumer_Canada@Conair.com

Printed in China

IB-16191

n

are ready to answer ALL your questions.
Please call our TOLL-FREE customer service
number at: 1-855-926-6247
or visit us online at
www.conaircanada.ca

Instructions & Styling Guide

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.



Instructions & Styling Guide
Model CS221NC

19CN034285