

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING *KEEP AWAY FROM WATER*

DANGER — Any hair dryer is electrically live even when the switch is off. To reduce the risk of death or injury by electric shock:

1. Always “unplug it” immediately after using.
2. Do not use while bathing or in a shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into, water or other liquid.
5. If an appliance falls into water, “unplug it” immediately. **Do not reach into the water.**

WARNING— To reduce the risk of burns, electrocution, fire, or injury to persons:

1. **This appliance should never be left unattended when plugged in.**
2. This appliance should not be used by, on, or near children or individuals with certain disabilities.

3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped, damaged, or dropped into water. Return the appliance to a Conair Service Centre for examination and repair.**
5. Keep the cord away from heated surfaces. Do not pull, twist, or wrap line cord around dryer, even during storage.
6. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
7. Never use while sleeping.
8. Never drop or insert any object into any opening or hose.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Do not use an extension cord to operate dryer.
11. Do not direct hot air toward eyes or other heat-sensitive areas.
12. **Attachments may be hot during use. Allow them to cool before handling.**
13. Do not place appliance on any surface while it is operating.
14. While using the appliance, keep your hair out of it. Keep your hair away from the air inlets.

15. Do not use with voltage converter.

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

This appliance is intended for household use only. Use on Alternating Current (60 hertz) only. Standard Dryers are designed to operate at 110 to 125 volts A.C.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

IMPORTANT

1875 WATTS OPERATING GUIDE

Use of this dryer on the same circuit or fuse with other electrical products or appliances may trip a 15 amp circuit breaker or blow a 15 amp fuse. **NEVER replace the fuse with one rated higher than the capacity of the circuit. Doing so could result in an electrical fire.**

 
SETTING UP AND USE OF YOUR CONAIR® PRO STYLE™ DRYER

TO OPEN:

Facing the front of the dryer, release the front hood latch by bending the latch slightly toward you and lifting the hood upward by the handle. Move hood forward from under the rear latch and continue to lift the hood up and forward until it snaps into place under the hood lock. Tilt the hood and stem back and lift to adjust height. Allow the hood to tilt forward to maintain height adjustment. Adjust the position of the chair with the height of the dryer. Be sure the power switch is in the off position, (center position). Plug cord into a 120 volt electrical outlet. Switch to either high or low setting.


TEMPERATURE SETTINGS:

The high heat and high speed setting is rated at 1875 watts and is useful for drying very wet hair. The low heat and low speed setting, which is rated at 800 watts, is a gentle setting. The high setting can be switched to low as your hair dries. The low setting is also good for safely drying natural and synthetic hair pieces. In addition to high and low heat and fan speeds there is an air flow adjustment at the top of the hood. Rotating the handle to left or right opens or closes vents that affect the distribution of air flow inside the hood. Adjust the vents so that there is more or less air on the top, front or back of the head, as your hairstyle requires.

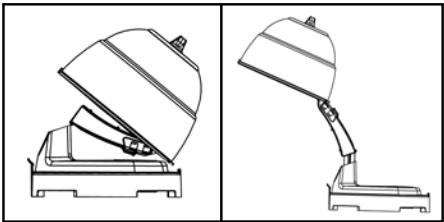


TO CLOSE:

 Turn switch to “0” Unplug cord and store in cord storage well in the hair dryer base. Push the hood lock downward to release the hood. Push and lower the hood and arm down and back until the lip of the hood stops under the rear latch. When the rear latch is engaged, snap the front lip of the hood down under the front latch. Be sure the hood is engaged under both latches before lifting the hair dryer by the handle.

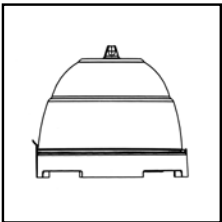


Folds easily for compact storage

 GETTING TO KNOW YOUR HAIR DRYER

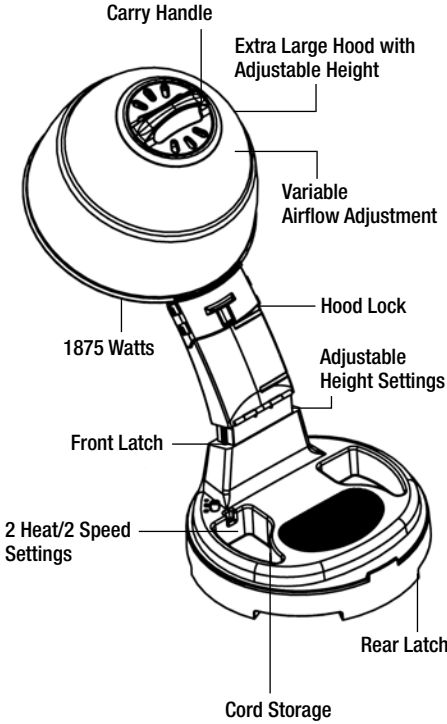

Professional Length Line Cord

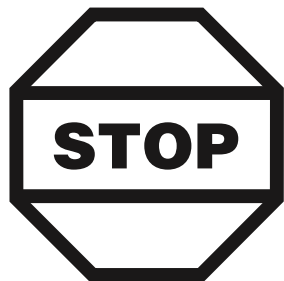 

This message about...

GROUND

FAULT

CIRCUIT

INTERRUPTERS

...can save a life!

IF YOU MUST USE YOUR HAIR DRYER IN THE BATHROOM, INSTALL A GFCI*NOW!

Your local electrician can help you decide which type is best for you—a portable unit that plugs into the electrical outlet or a permanent unit installed by your electrician. The National Electrical Code now requires GFCI's in the bathrooms, garages, and outdoor outlets of all new homes.

WHY DO YOU NEED A GFCI? Electricity and water don't mix. If your hair dryer falls into water while it's plugged in, the electric shock



can kill you...even if the switch is "off." A regular fuse or circuit breaker won't protect you under these circumstances. A GFCI offers you far greater protection.

A GFCI can save your life! Compared to that, the price is small! Don't wait...install one now!

*GFCI is a sensitive device which reacts immediately to a small electric current leak by stopping the electricity flow.

USER MAINTENANCE

Your dryer is virtually maintenance-free. No lubrication is needed. For proper operating performance, the dryer must be kept clean. When cleaning is needed, unplug the cord, and clean dust and lint from air intake openings with a small brush or the brush attachment of a vacuum cleaner. The outer surface of the dryer should be wiped clean with a cloth only.

Blocked or clogged air intake vents will cause the dryer to overheat. If overheating occurs, an automatic safety device will shut the dryer or the heat off to prevent damage or personal injury. If the unit or the heat cycles off, unplug the cord and allow the dryer to cool for 10 to 15 minutes before restarting. Make sure the air vents are clean.

CAUTION

NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the dryer. Damage will occur at the high flex point of entry into the dryer, causing it to rupture and short. Inspect the cord frequently for damage. Stop use immediately if damage is visible or unit stops or operates intermittently.

If the cord or dryer is damaged or does not operate properly, return it for repair to an authorized Conair service representative only. No repairs should be attempted by the consumer.

STORAGE - Important

When not in use, your dryer should be disconnected and stored in a safe, dry location, out of reach of children. **Do not wrap line cord around dryer.** Allow the cord to hang or lie loose and straight at the point of entry into the dryer.

LIMITED ONE YEAR WARRANTY

Conair will repair or replace, at our option, your appliance free of charge for 12 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service centre listed below together with your sales slip and \$7.50 for postage and handling. In the absence of a receipt, the warranty period shall be 12 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 12 MONTH DURATION OF THIS WARRANTY.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

This warranty gives you specific legal rights, and you may also have other rights which vary from province to province.

SERVICE CENTRE:

Conair Consumer Products Inc.

100 Conair Parkway,
Woodbridge, Ontario, L4H 0L2.

1-800-472-7606

©2012 Conair Consumer Products Inc.

www.conaircanada.ca

Consumer Call Centre E-mail :

Consumer_Canada@Conair.com

12CN135336

IB-11766

CONAIR®

PRO STYLE™

1875 WATTS



Have a Question?

Please do not return this product to the retailer.

Call Us First!

Our customer service and product experts are ready to answer

ALL your questions.

Please call our TOLL-FREE customer service number at: 1-800-472-7606

or visit us online at

www.conaircanada.ca

Instruction & Styling Guide

Model HH320RWBC