

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING. KEEP AWAY FROM WATER

DANGER — Any appliance is electrically live even when the switch is off.

To reduce the risk of death by electric shock:

1. Always “unplug it” immediately after using.
2. Do not use while bathing or in a shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into, water or other liquid.
5. If an appliance falls into water, “unplug it” immediately. Do not reach into the water.

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:

1. This appliance should never be left unattended when plugged in.
2. Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use

as described in this manual. Do not use attachments not recommended by the manufacturer.

4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service centre for examination and repair.
5. Keep the cord away from heated surfaces. Do not pull, twist, or wrap cord around appliance, even during storage.
6. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and other debris.
7. Never use while sleeping.
8. Never drop or insert any object into any opening or hose.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Do not use an extension cord to operate appliance.
11. This curling iron is hot when in use. Do not let eyes and bare skin touch heated surfaces.
12. Do not place the heated curling iron directly on any surface or on the appliance power cord while it is hot or plugged in. Use the stand provided.
13. Do not touch hot surface of the appliance; use handles or knobs.
14. Before plugging in, read the information about dual voltage contained in the

information section of this manual.

15. Do not use with a voltage converter.
16. Do not attempt to touch the housing of your appliance near the barrel, as it is hot when in use.
17. Do not use this styling appliance on hair extensions.

SAVE THESE INSTRUCTIONS OPERATING INSTRUCTIONS

This curling appliance is intended to use on Alternating Current (50/60Hz) only. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

DUAL VOLTAGE

This curling iron has dual voltage. It will automatically adjust to the proper voltage. Use an adapter plug with correct configuration, prior to use in outlet.

GETTING STARTED

The iron’s variable temperature settings and Instant Heat technology provide styling versatility for all hair types. If you have fine hair, a low temperature will provide the best results. If you have thick, wavy or hard-to-curl hair, keep the

heat setting on high. You can vary the iron’s temperature according to your particular need!

SUPER STYLING GUIDE

Your best looks begin with a good haircut that’s well maintained. Always treat hair right with superior quality shampoos, conditioners, and finishing products.

CURLING BASICS

1. Plug the curling iron cord into a standard household electrical outlet (120/240V).

The indicator light will stop blinking and remain on when the iron is ready to use.

Never leave your curling iron on and unattended. However, should you fail to turn the iron off, it will shut itself off automatically in approximately 60 minutes at 60Hz, 72 minutes at 50Hz.

2. Section dry hair evenly, and comb each section before winding. Pressing the automatic curl release, place curling iron midway up the hair section, then spread hair evenly between spoon and barrel. Release automatic curl release to hold hair in place. Gently slide curling iron down to hair ends. To avoid crimped ends, make sure they are securely wound under the spoon in the direction of the desired curl.

Remember, always place the spoon above the hair strand when making a curl you want rolled under; place the spoon under the hair strand when making a flip style.

3. Wind the hair up as far as you want it curled, being careful not to let the iron touch the scalp. Hold in place for 8-12 seconds depending on the texture and length of your hair. For tighter,

bouncier curls, roll less hair. For looser, free flowing curls, roll more hair.

4. To remove curling iron, unwind the hair and press the automatic curl release. To “set” the curl, do not comb or brush hair until it cools.

USING INSTANT HEAT & THE VARIABLE TEMPERATURE SETTINGS & HEAT RECOVERY SYSTEM

This styling iron features Conair’s Instant Heat technology. It quickly heats up to a stabilized temperature and is ready to use.

This Instant Heat technology includes variable temperature settings. Every type of hair, from the finest to the curliest and most resistant, has a temperature range that’s gentle and safe, to help you create the look you want.


Temperature Setting Guide

Temp. Control	Hair Type
Low (1-7)	Delicate, thin, easy-to-curl hair
Medium (7-13)	Average to thick or treated hair
Med-High (13-19)	Thick or wavy hair
High (19-25)	Hard-to-curl hair

And that’s not all. Conair’s professional salon standards of engineering provide you with a Uniform Heat Recovery System that maintains the iron at constant temperatures.

There is a constant surge of power to ensure that heat is continuously delivered for optimal styling results, unlike other units which lose heat during use. This recovery system provides consistent styling power so that every strand of your hair is set with the same level of heat and comes out the same way for a perfect finish.

GET TO KNOW YOUR CURLING IRON

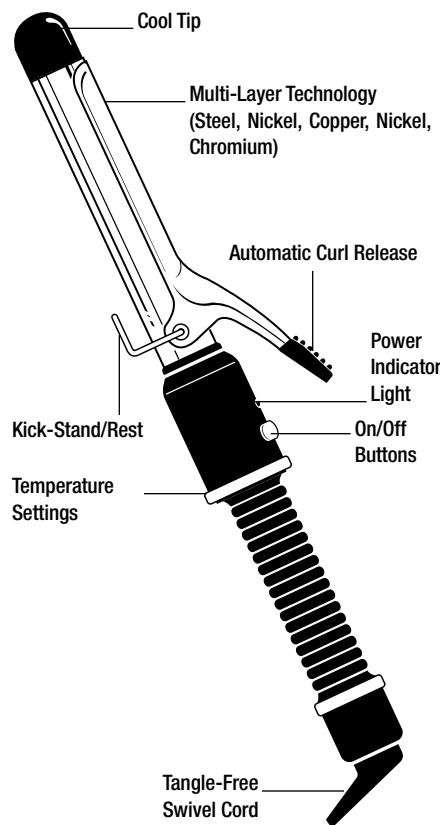

WARNING: The iron’s barrel will get very hot within a few seconds and should not be placed in contact with skin after the curling iron is turned on.

STYLING WITH THE NEW MULTI-LAYER TECHNOLOGY BARREL

The barrel of your new curling iron has an Easy-Glide multi-layer technology.

This means it's not only simpler to clean off styling product residue, etc., after each use, but you'll find that hair glides easily over the surface of the barrel as you're curling it up. The multi-layer technology delivers healthier longer lasting curls. As you wind each strand around the barrel, it evenly distributes heat so that the style you create has a salon-perfect, silky smooth, shining finish. Hair slips right off the barrel after it's curled as well.

CURLING IRONS ARE AVAILABLE IN THE FOLLOWING SIZES:

1/2 in. (13 mm)	CD80NCSRC
3/4 in. (19 mm)	CD81NCSRC
1 1/4 in. (32 mm)	CD82NCSRC
1 in. (25 mm)	CD87NCSRC

USER MAINTENANCE

Your curling iron is virtually maintenance-free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the curling iron from the power source, let it cool and wipe exterior with a damp cloth. If any abnormal condition occurs, unplug the curling iron, allow it to cool and return it for repair to an authorized service centre only. No repairs should be attempted by the consumer.

CAUTION

NEVER allow the power supply cord to be pulled or twisted. Never wrap the cord around the curling iron. Damage will occur at the high flex point of entry into the curling iron, causing it to rupture and short. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.


STORAGE

When not in use, your appliance should be disconnected and stored in a safe, dry location out of reach of children. Do not jerk or strain cord at plug connections.

Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

**WARNING:
IF YOU THINK THE POWER
IS OFF WHEN THE SWITCH
IS OFF, YOU'RE WRONG.**

KEEP AWAY FROM WATER

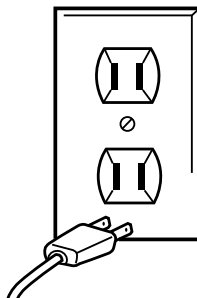

Everyone knows that electricity and water are a dangerous combination. But did you know that an electrical appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

**ALWAYS UNPLUG
SMALL APPLIANCES**

PUBLIC SERVICE AD FROM ASSOCIATION OF HOME APPLIANCE
MANUFACTURERS AND UNDERWRITERS LABORATORIES, INC.

LIMITED TWO YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service centre listed below, together with your purchase receipt and \$7.50 for postage and handling. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24 MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

This warranty gives you specific legal rights, and you may also have other rights, which vary from province to province.

SERVICE CENTRE :

CONAIR CONSUMER PRODUCTS ULC

100 Conair Parkway,
Woodbridge, Ont. L4H 0L2
Printed in China
1-855-926-6247

Visit our Web site: www.conaircanada.ca

Consumer Call Centre E-mail:

Consumer_Canada@Conair.com

©2016 CONAIR CONSUMER PRODUCTS ULC

16CN018583

IB-14151



HAVE A QUESTION?

Please do not return this product to the retailer.

CALL US FIRST!

Our customer service and product experts are ready to answer ALL your questions. Please call our TOLL-FREE customer service number at :

1-855-926-6247

Or visit us online at

www.conaircanada.ca

CONAIR®

Instruction & Styling Guide

Models: CD80NCSRC, CD81NCSRC,

CD82NCSRC, CD87NCSRC