



Have a Question?

Please do not return this product to the retailer.

Call Us First!

Our customer service and product experts are ready to answer ALL your questions.

Please call our TOLL-FREE customer service number at: 1-855-926-6247 or visit us online at www.conaircanada.ca

SERVICE CENTRE:

Conair Consumer Products ULC
100 Conair Parkway,
Woodbridge, Ontario, L4H 0L2.
1-855-926-6247
©2015 Conair Consumer Products ULC
www.conaircanada.ca
Consumer Call Centre E-mail :
Consumer_Canada@Conair.com

15CN148043

IB-13580

Model CD205C

LIMITED TWO YEAR WARRANTY

Conair will repair or replace, at our option, your appliance free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service centre listed below together with your sales slip and \$7.50 for postage and handling. In the absence of a receipt, the warranty period shall be 24 months from the date of manufacture.


ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24 MONTH DURATION OF THIS WARRANTY.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

This warranty gives you specific legal rights, and you may also have other rights which vary from province to province.

**WARNING:
IF YOU THINK THE
POWER IS OFF
WHEN THE SWITCH
IS OFF,
YOU'RE WRONG.**

KEEP AWAY FROM WATER

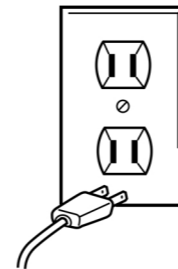

Everyone knows that electricity and water are a dangerous combination. But did you know that an electrical appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES

Please carefully read the instructions for use below before using the appliance.

QUICK TWIST

InfinitiPro by Conair's Quick Twist is a completely new hairstyling tool that is very useful for twisting hair quickly and easily. In a few easy steps, create your own stylish curls, which can be held in place later on with jewellery or bands. With the Quick Twist, you're free to try out new ideas in styling: twist and curl all your hair or just a few locks... Let your imagination run wild!

QUICK TWIST APPLICATION

You can find the whole Quick Twist range and even more advice, creations and competitions, on the Quick Twist application.

CHARACTERISTICS

- Battery casing (1)
- Tweezer/head rotation switch (2)
- Push buttons for raising the tweezers (3)
- Tweezers (4)

A. INSERTING/REMOVING THE BATTERIES

The battery casing is located in the back of the device. Use a Phillips screwdriver to remove the cover. Insert 2 alkaline AA batteries (type LR6) aligned as shown on the inside of the casing (Fig.1) and then close the casing again (using alkaline batteries guarantees improved performance and a longer life for your device). If the device should stay unused for long periods or should the batteries go flat, remove the batteries from the device. This will also help to prolong their life.

B. USING THE DEVICE

- Choose a lock of hair to curl and untangle it using a InfinitiPro by Conair brush.
- Part the lock into two strands.
- Press the button to raise the tweezer (Fig.2). Place the end of one of the two locks under the tweezer and release the button so that the lock is held firmly by the tweezer.
- Do exactly the same to fix the second lock under the other tweezer.
- Line the device up with the length of the strands of hair (Fig. 3). Hold the device slightly away from your head and stretch out the locks of hair.
- Turn the device on to position I. The tweezers rotate, twisting the locks (Fig.4).
- Once the locks have been twisted and curled over their entire length, return the device to position 0.
- Line up the device as described above. Turn the device on to position II. The device's head pivots, twisting the two strands of hair together (Fig. 5).
- Once the twisting action is finished, return the device to position 0, and release the locks from the tweezers by pressing the push buttons.
- Place an elastic band or else a InfinitiPro by Conair attachment in the hair to hold the curl in place.
- Repeat the operation for each new curl.

C. USING DECORATIVE RINGS FOR THE HAIR

- You can use decorative ring and, what's more, fix it while you are curling!
- To do so, place one or more rings around one or both tweezers (Fig.6).

- Place the locks of hair under the tweezers and line up the device as explained above. Turn the device on to position I.
- Once the locks have been twisted and curled over their entire length, return the device to position 0.
- Slide the ring(s) along the lock to the place you want (Fig.7).
- Line the device up as described above. Turn the device on to position II (Fig.8).
- You can repeat this operation as many times as needed to fix the desired number of items of decorative rings into the curls (Fig.9).

D. USING RIBBONS AND THREADS IN YOUR HAIR

- You can use Quick Twist to accessorise your curls with ribbons/threads
- Choose a lock of hair to curl and untangle it using a InfinitiPro by Conair brush.
- Choose a ribbon/thread and fix it to the roots of the lock of hair using a hair grip, an elastic band or a hair clip (Fig.10).
- Press the push button to raise the tweezer. Place the end of the lock of hair and the ribbon/thread under the tweezer and release the button so that the lock of hair and the ribbon/thread are held firmly by the tweezer.
- Do the same for the other tweezer.
- Line the device up as described. Turn the device on to position I. The tweezers rotate, twisting the lock of hair and the ribbon/thread (Fig. 11).
- Once the lock and the ribbon/thread have been twisted and curled over their whole

- length, place the device in position 0.
- Line the device up as described. Turn the device on to position II. The device's head pivots, twisting the locks of hair and the ribbon/thread together.
- Once the twisting action is finished, put the device back in position 0, and release the locks and the ribbons/threads from the tweezers by pressing the push buttons (Fig.12).
- Place an elastic band or else a InfinitiPro by Conair attachment in the hair to hold the curl in place (Fig.13).
- Repeat the operation for each new curl.
- You can twist and curl locks and ribbons/threads in different ways with this device.

E. USING RIBBONS AND THREADS TO CREATE YOUR OWN ACCESSORIES

- You can use the Quick Twist to create a wealth of accessories (hair bands, bracelets, necklaces, etc.) by using the ribbons/threads.
- Use a figure-8 elastic band and slide the ribbons/threads inside the elastic band; then fix them together with a hair clip (Fig.14).
- Fix the other end of the two ribbons/threads separately to the tweezers as you wish.
- Hold the clip in one hand and keep the ribbons/threads stretched out.
- Turn the device to position I. The tweezers will rotate, twisting the ribbons/threads (Fig.15).
- Once the ribbons/threads are twisted and curled over their whole length, turn the device back to position 0.
- Place the device in position II. The head of the device will pivot, twisting and curling the

- two ribbons/threads together.
- Once the twisting action is finished, turn the device back to position 0, and release the ribbons/threads from the tweezers by pressing the push buttons.
- Slide the ribbons/threads to the other end of the figure-8 elastic band and then fix them in place using one of the hair clips (Fig.16). Cut away any ribbon/thread that may go beyond the hair clips.
- There you have it - your very own accessory! Why not let your imagination run wild and create yet another accessory?

UPKEEP

So as to ensure that your Quick Twist works effectively, we recommend that you clean it regularly with a dry cloth.

