

# IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be taken, including the following:

## READ ALL INSTRUCTIONS BEFORE USING

## FOR HOUSEHOLD USE ONLY KEEP AWAY FROM WATER

To reduce the risk of electrical shock:

1. Do not reach for an appliance that has fallen into water.
2. Do not use while bathing or in the shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquids.

## WARNING – To reduce the risk of burns, fire, electrical shock, or injury to persons:

1. This appliance should not be used by, on, or near children or by individuals with certain disabilities.
2. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
3. **Never operate this appliance if it is not working properly, if it has been dropped, damaged, or dropped into water. Return the appliance to a service center for examination and repair.**
4. Never operate the appliance with the air openings blocked or while on a soft surface, such as a bed or couch, where the air openings may be

 
blocked. Keep the air openings free of lint, hair and the like.

5. Never drop or insert any object into any opening.
6. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
7. Do not place appliance on any surface while it is operating.
8. Do not use this appliance with a damaged or broken comb or with teeth missing from the blades, as injury may occur.

## SAVE THESE INSTRUCTIONS OPERATING INSTRUCTIONS

### PERSONAL GROOMING KIT

1. To insert battery, remove compartment cover at the back of the unit by pulling straight down (Fig. 1). Insert one AAA battery, negative end up. If you are not going to use the unit for a long period of time, or if the battery is dead, remove the battery from the unit. Remove used battery promptly. This will increase the life of your trimmer.

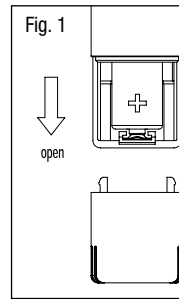


2. After inserting the battery, replace the battery compartment cover.
3. Now your unit is ready to be used.  
\*Do not use in the shower. To clean, simply rinse trimmer blade under faucet.
4. To use your trimmer, push On/Off switch upward to the "On" position.
5. After you finish using your trimmer, push down on the On/Off switch to turn the trimmer off.
6. Always purchase the correct size and grade of battery most suitable for the intended use.
7. Clean the battery contacts and also those of the device prior to battery installation.
8. Ensure the battery is installed correctly with regard to polarity (+ and -).
9. Remove battery from equipment, which is not to be used for an extended period of time.
10. Never short-circuit batteries. Store unused batteries in their original packaging away from any metal objects as that could cause a short-circuit.
11. Never dispose of batteries in fire, except under conditions of controlled incineration. Failure to observe this precaution may result in an explosion. Never attempt to recharge primary batteries as this may cause leakage, fire, or explosion.

### TO OPERATE TRIMMER

 This trimmer comes with a large trimming blade that can be used for trimming body and facial hair, eyebrows, necklines and sideburns.

It also comes with two attachment combs that help you achieve an even cut when you do not want to completely remove the hair. The larger attachment comb leaves hair longer, approximately 7mm and is good for body and facial hair (see Fig. 1). The smaller attachment comb leaves hair shorter, approximately 4mm and is good for eyebrows, necklines and sideburns (see Fig. 2).

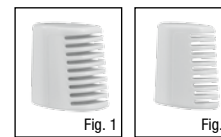

To use the attachment combs, be sure the unit is in the off position and slide the comb over the trimming blade. Make sure that the teeth of the comb are facing in the same direction as the trimming blade, and that the top of the comb is even with the top of the trimmer.

If you want to completely remove hair, use the trimmer without any attachment combs.


To operate the trimmer, slide the On switch toward the trimming blades. When you are finished trimming, slide the On switch away from the blades.

To store the trimmer, slide one of the attachment combs over the trimming blade for added protection.

### TO SWITCH TRIMMER HEADS

 Hold the handle of the trimmer while turning the trimmer head counterclockwise until the "I" mark is aligned properly with the "I" mark (see Fig. 3). At this point you should be able to easily lift the trimmer head from the handle. To use the new nose and ear trimmer head on the unit,

properly install the head into position making sure the "I" mark is aligned with the "I" mark, then turn clockwise until the "I" marks are aligned and lock into position (see Fig. 4)

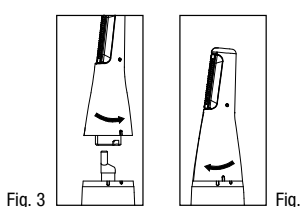

### TO TRIM YOUR BODY HAIR

To shape and define, move the trimmer slowly so as not to cut any hair you do not intend to trim.

### TO TRIM YOUR NECKLINE & SIDEBURNS

Hold the trimmer blade against the skin at the desired length and move the trimmer downward.

### TO TRIM YOUR FACIAL HAIR

To shape and define, move the trimmer slowly so as not to cut any hair you do not intend to trim.

### TO TRIM YOUR NOSE AND EAR HAIR

Attach the nose and ear trimmer head to the trimmer handle. Turn unit on. Gently insert trimmer head into nostril. Gentle move trimmer in and out of the nostril to remove unwanted hair. Avoid inserting the trimmer more than 1/4 inch (6 mm) to ensure safe trimming.

Turn unit on. Gently insert trimmer head no more than 1/4 inch (6 mm) into outer ear canal. Gently move trimmer around the outer ear to remove unwanted hair extending beyond the outer ear. Guide the trimmer around the outer surface of

the ear to trim protruding hairs. never insert trimmer more than 1/4 inch (6 mm) into the ear canal.

### TRIMMING TIPS

1. Place the trimmer at a slight right angle to the skin and trim in the direction of hair growth.
2. Continue trimming in the direction of growth. Be careful not to apply excess pressure to the blade. This may damage the blade, and can result in injury to the skin during trimming.
3. Pull the skin firmly with one hand during the trimming process to ensure the closest possible shave.

### REPLACING THE BATTERY

To replace battery, remove the lower housing and remove/replace battery and reassemble to cover housing. Dispose of battery properly after removal. Do not incinerate.

1. Be sure appliance is off and hold the upper part of the trimmer firmly and pull off battery cover.
2. Insert 1 AAA battery. Pay close attention, making sure that the battery is inserted in the correct direction (+ / - poles). If you expect that the trimmer will go unused for some time, please remove the battery.

**Do not use in the shower or submerge unit in water.**

## TAKING CARE OF YOUR TRIMMER

 
 
 
### BLADE CARE

Because the trimmer blades are precision made for a very special use, they should always be handled with care. Each time you finish using the trimmer, take a cleaning brush and brush away any loose hair that has collected in the blades, then rinse blades under water only, and store the trimmer in its storage stand until the next use. To promote the long life of the appliance, use your trimmer only for the purpose intended by the manufacturer.

### TO CLEAN YOUR TRIMMER


Make sure trimmer is off.

1. To remove the trimmer head for cleaning, turn the head counter clockwise until the "I" mark aligns with the "I" mark, then lift the head gently (Fig. 5).
2. Only rinse the head under water (Fig. 6). For proper functioning of the unit, the handle cannot touch or be immersed in water.
3. After cleaning, make sure to shake dry the head before replacing it to the body.
4. To reassemble the head onto the body, align the "I" mark on the head with the "I" mark on the body and then turn clockwise until the "I" marks are aligned and lock into position (Fig. 7).

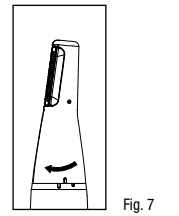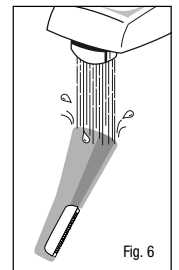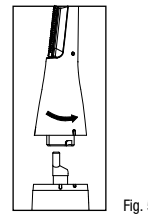

### GET TO KNOW YOUR TRIMMER

 Make sure trimmer is off.

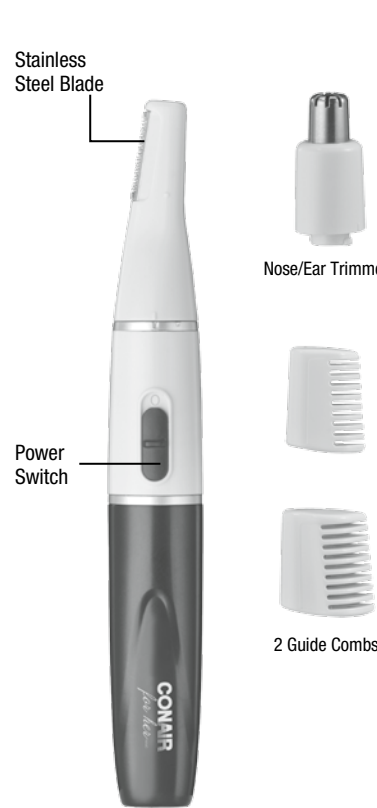

### LIMITED TWO-YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service centre listed below together with your purchase receipt and \$5.50 for postage and handling. In the absence of a purchase receipt, the warranty period shall be 2 years from the date of manufacture.

**ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24 MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.**

**IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.**

This warranty gives you specific legal rights, and you may also have other rights, which vary from province to province.

### SERVICE CENTRE:

**Conair Consumer Products ULC**  
100 Conair Parkway,  
Woodbridge, Ontario, L4H 0L2.  
1-855-926-6247  
©2017 Conair Consumer Products ULC  
www.conaircanada.ca  
Consumer Call Centre E-mail :  
Consumer\_Canada@Conair.com  
17CN031847

*Satiny Smooth™*  
find your inner beauty . . . transform yourself

## LITHIUM BATTERY POWERED PEN TRIMMER



**Have a Question?**  
*Please do not return this product to the retailer.*

### Call Us First!

**Our customer service and product experts are ready to answer ALL your questions. Please call our TOLL-FREE customer service number at: 1-855-926-6247 or visit us online at www.conaircanada.ca**

**CONAIR**  
*for her™*

Instructions for Care and Use

MODEL LLT2PURLIC