

This message about...

NTERRUPTERS

...can save a life!

IF YOU MUST USE YOUR HAIR DRYER IN THE BATHROOM, INSTALL A GFCI* NOW!

Your local electrician can help you decide which type is best for you - a portable unit that plugs into the electrical outlet or a permanent unit installed by your electrician. The National Electrical Code now requires GFCIs in the bathrooms, garages, and outdoor outlets of all new homes.



WHY DO YOU NEED A GFCI? Electricity and water don't mix. If your hair dryer falls into water while it's plugged in, the electric shock can kill you ... even if the

switch is off. A regular fuse or circuit breaker won't protect you under these circumstances. A GFCI offers you far greater protection.

A GFCI can save your life! Compared to that, the price is small! Don't wait...install one

*A GFCI is a sensitive device that reacts immediately to a small electric current leak by stopping the electricity flow.

USER MAINTENANCE

Your dryer is virtually maintenance free. No lubrication is needed. For proper operating performance, the dryer must be kept clean. When cleaning is needed, unplug the cord, allow to cool and clean dust and lint from air intake openings with a small brush or the brush attachment of a vacuum cleaner. The outer surface of the dryer should be wiped clean with a cloth only.

Blocked or clogged air intake vents will cause the dryer to overheat. If overheating occurs, an automatic safety device will shut the dryer or the heat off to prevent damage or personal injury. If the unit or the heat turns off, unplug the cord and allow the dryer to cool for 10 to 15 minutes before restarting. Make sure the air vents are clean.

NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the dryer. Damage will occur at the high flex point of entry into the dryer, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or unit stops or operates intermittently.

If the cord or dryer is damaged or does not operate properly, return it for repair to an authorized Conair Service Representative only. No repairs should be attempted by the consumer.

STORAGE - Important

When not in use, your dryer should be disconnected, allowed to cool and stored in a safe, dry location, out of reach of children. Do not wrap line cord around dryer. Allow the cord to hang or lie loose and straight at the point of entry into the dryer.

LIMITED FOUR-YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace (at our option) your unit free of charge for 48 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service centre listed below, together with your purchase receipt. In the absence of a purchase receipt, the warranty period shall be 48 months of the date of manufacture.

ANY IMPLIDED WARRATIES, OBLIGATIONS. OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN **DURATION TO THE 48 MONTH DURATION OF** THIS WRITTEN, LIMITED WARRANTY.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREAT OF THIS OR ANY OTHER WARRANTY, EXPRESS OF IMPLIED, WHATSOEVER.

This warranty gives you specific legal rights, and you may also have other rights, which vary from province to province.

SERVICE CENTRE: CONAIR CONSUMER PRODUCTS ULC

100 Conair Parkway Woodbridge Ontario, L4H 0L2 ©2022 CONAIR CONSUMER PRODUCTS ULC For more information on any Conair product call: 1-855-926-6247 Visit our Web site: www.conaircanada.ca

Consumer Call Centre E-mail: Consumer_Canada@Conair.com 22CN083721

IB-17694

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS **BEFORE USING** KEEP AWAY FROM WATER

DANGER — Any hair dryer is electrically live even when the switch is off. To reduce the risk of death or injury by electric shock:

- 1. ALWAYS UNPLUG IT IMMEDIATELY AFTER USING.
- 2. Do not use while bathing or in the shower. 3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
- 4. Do not place in, or drop into water or other liquids.
- 5. If an appliance falls into water, unplug it immediately. Do not reach into the water.

WARNING — To reduce the risk of

burns, electrocution, fire, or injury to persons: 1. This appliance should never be left

- unattended when plugged in.
- 2. This appliance should not be used by, on, or near children or individuals with certain disabilities.
- 3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.

4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged, or dropped into water. Return the appliance to a Conair Service Center for examination and repair.

- 5. Keep the cord away from heated surfaces. Do not pull, twist, or wrap line cord around dryer, even during storage.
- 6. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
- 7. Never use while sleeping.
- 8. Never drop or insert any object into any opening or hose.
- 9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- 10. Do not use an extension cord to operate dryer.
- 11. Do not direct hot air toward eyes or other heat-sensitive areas
- 12. Attachments may be hot during use. Allow them to cool before handling.
- 13. Do not place appliance on any surface while it is operating.
- 14. While using the appliance, keep your hair out of it. Keep your hair away from the air inlets.
- 15. Do not use with a voltage converter.
- 16. This appliance is not a toy. Keep away from

SAVE THESE

INSTRUCTIONS

OPERATING INSTRUCTIONS

This appliance is intended for household use Use on Alternating Current (60 hertz) only. Standard dryers are designed to operate at 110 to 125 volts AC.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

IMPORTANT 1875 WATT OPERATING GUIDE

Use of this dryer on the same circuit or fuse with other electrical products or appliances may trip a 15 amp circuit breaker or blow a 15 amp fuse. NEVER replace the fuse with one rated higher than the capacity of the circuit. Doing so could result in an electrical fire.

SUPER STYLING GUIDE

Your best looks begin with a good haircut that's well maintained. Always treat hair right with superior quality shampoos, conditioners, and finishing products.

DRYING BASICS

- 1. Shampoo and condition hair with products of your choice. Rinse thoroughly. Towel-dry hair to remove excess moisture. Using the dryer along with your styling brush, start at a lower setting and direct hot air through a section of hair at a time. Move dryer steadily across each section so that the hot air passes through hair. Direct airflow at hair, not scalp. Clouds of negatively charged ions will help to reduce static electricity, control frizzy flyaways and contribute to your hair's shine.
- 2. Keep dryer's air intake vents unobstructed and free from hair while drying
- 3. To avoid overdrying, do not concentrate heat on any one section for an extended length of time. Keep dryer moving as you style. For pinpoint airflow, use the snap-on concentrator attachment
- 4. For quick touch-ups between shampoos, dampen hair with a mist of water before styling with the dryer.
- 5. When using your dryer to create curls and waves, dry hair almost completely on a warmer temperature setting, then finish styling with cold shot feature to quickly close hair shaft and lock in style.

BODY & VOLUME

To create extra volume, turn head upside down while drying. Position the airflow toward the roots for maximum lift. When hair is dry, toss head back and brush hair into place.

STRAIGHTENING

Work with hair in sections when creating a super-straight look. Using a large round brush (approximately 2" in diameter), hold hair taut in each section and bend ends slightly under as you dry.

MAKING WAVES

Tousled, natural-looking waves are easily created by grasping hair at the roots and scrunching between fingertips while drying.



Texture Diffuser Innovative design provides airflow that gently surrounds your hair to enhance its natural texture and reduce frizz.

GETTING TO KNOW YOUR DRYER

technology

Cold shot

button

3 heat settings

2 speed settings

1875 watts

Ceramic

technology

Powerful AC motor

for longer life

WHY USE THE TEXTURE STYLING SYSTEM?

Airflow from traditional diffusers only blows up and out for less efficient drying and styling, which could also damage your hair's natural texture. This InfinitiPRO by Conair® Texture Diffuser uses a styling control. patent-pending multi-chambered design that continuously circulates the airflow through the vents and interior to gently surround and evenly dry your hair fast, while helping to eliminate frizz! With this unique feature, your natural curls and waves are enhanced for smooth, gorgeous hair.

INFINITIPRO

NATURAL TEXTURE STYLING SYSTEM



Have a Question? Please do not return this product

to the retailer Call Us First!

Our customer service and product experts are ready to answer ALL your questions. Please call our TOLL-FREE customer service number at: 1-855-926-6247 or visit us online at

www.conaircanada.ca

INSTRUCTION & STYLING GUIDE

MODEL 600C

The InfinitiPRO by Conair® 1875 Watt Texture Styling System is very effective, even at lower temperatures, and helps create healthier-looking, shiny, more manageable hair with maximum

CERAMIC HEAT TECHNOLOGY is full-spectrum. infrared heat that works on hair molecules to dry them inside and out. This fast and easy drying process minimizes heat damage and makes hair less frizzy and more manageable.

POWERFUL AC MOTOR delivers fast airflow for styling ease and provides up to 3x longer life.*

THE IONIZING FUNCTION generates a cloud of negative ions that can:

- help reduce frizz by up to 75%**
- neutralize the generally positive charge on flyaway, frizzy hair
- eliminate static electricity
- · contribute to shine

*When compared to other DC motor hair dryer and styler models.

**When compared to hair dryers with natural ion generation.

select your setting

| speed/temp. | hair type |
|------------------------|--|
| " "/" " low/cool | delicate, thin, or easy-to-style hair |
| " "/" " low/warm | average to thick or treated hair |
| " "/" " high/hot | thick, coarse or hard-to-style hair |
| ★ cold shot | sets style in place for all hair types |