

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING FOR HOUSEHOLD USE ONLY KEEP AWAY FROM WATER

- To reduce the risk of electrical shock:
1. Do not reach for an appliance that has fallen into water.
 2. Do not use while bathing or in the shower.
 3. Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquids.

WARNING — To reduce the risk of burns, fire, electrical shock, or injury to persons:

1. This appliance should not be used by, on, or near children or by individuals with certain disabilities.
2. Use this appliance only for its intended use as described in this manual. Do not

use attachments not recommended by the manufacturer.

3. Never operate this appliance if it is not working properly, if it has been dropped, damaged, or dropped into water. Return the appliance to service center for examination and repair.
4. Never operate the appliance with the air openings blocked or while on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair and the like.
5. Never drop or insert any object into any opening.
6. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
7. Do not place appliance on any surface while it is operating.
8. Do not use this appliance with a damaged or broken comb or with teeth missing from the blades, as injury may occur.
9. Avoid skin contact with moving blades.

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

BEFORE USE

Prior to initial use, test trimmer on small area of arm or leg. If any signs of allergic reaction or sensitivity occur, discontinue use. Do not use trimmer on ultra-sensitive or irritated skin. Keep out of reach of children.

TO OPERATE TRIMMER

This trimmer comes with two trimming blades. The larger blade can be used to trim body hair and eyebrows. The smaller blade is ideal for detailing.

It also comes with a comb attachment that helps you achieve an even cut when you do not want to completely remove the hair. The comb attachment has two sides: the long tooth is for body hair and the short tooth is for eyebrow trimming. Aligning the indicator with the L mark on the comb leaves hair longer, while aligning with S mark leaves hair shorter.

To use the comb attachment, be sure the unit is in the OFF position and slide the comb over the trimming blades. Make sure that the teeth of the comb are facing in the same direction as the trimming blade and that the top of the comb is even with the top of the trimmer (see Fig. 1).

If you want to completely remove hair, use the trimmer without the comb attachment. To operate the trimmer, slide the ON switch towards the trimming blades. When you

are finished trimming, slide the ON switch away from the blades.

To store the trimmer, slide the comb attachment cover over the trimming blades. Be sure to align triangle sign on the comb attachment with indicator on the trimmer housing (see Fig. 2). Then slide the protective cap over the comb attachment so that the triangle sign on protective cap aligns with the triangle sign on the handle tube (see Fig. 3).

TRIMMING TIPS

1. Place the trimmer at a slight right angle to the skin and trim in the direction of hair growth.
2. Continue trimming in the direction of growth. Be careful not to apply excess pressure to the blade. This may damage the blade, and can result in injury to the skin during trimming.
3. Pull the skin firmly with one hand during the trimming process to ensure the closest possible shave.

REPLACING THE BATTERY

To replace battery, remove the lower housing and remove/replace battery and reassemble to cover housing. Dispose of battery properly after use. Do not incinerate.

1. Be sure appliance is off, remove the protective cap and then hold the upper part of the trimmer firmly and pull off battery cover.
2. Insert 1 AAA battery. Pay close attention, making sure that the battery is inserted in the correct direction (+ / - poles). If you expect that the trimmer will go unused for

 


Fig. 2

 


Fig. 3

 
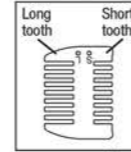 


Fig. 1

GET TO KNOW YOUR TRIMMER

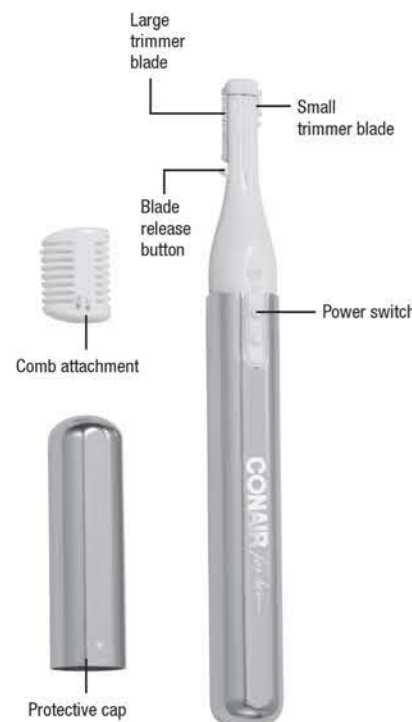

SENSITIVITY AND CAUTIONS SPECIAL CAUTIONS FOR DELICATE AREAS

The True Glow™ Glam Facial Brush and Eye Massager is a face and body cleansing device that is intended to help you get clean and healthy-looking skin. The True Glow™ Glam Facial Brush and Eye Massager is not a medical device and is not intended to be used to treat any medical conditions such as acne.

If you are under a doctor's care for any skin condition or if you think you have very sensitive skin, please consult your physician before use. We recommend not sharing the brush heads; each user should have their own brush head.

Do not use with exfoliation creams with rough or jagged particles.

Removing makeup can cause the brush head to discolor. This will not affect performance and the brush head can be used for the entire recommended life of 90 days.

If you experience any pain or discomfort during use, stop using and consult your physician.

Moisten your face and apply cleanser. Also apply a small amount of cleanser to the moistened brush head. Do not apply pressure with the brush to the face; let the oscillation perform the cleansing. When finished, rinse with water and dry skin with a clean towel.

TRUE GLOW™ GLAM FACIAL BRUSH AND EYE MASSAGER



ATTACHMENTS

FACIAL BRUSH:

For cleansing, gentle exfoliation, moisturizing and massaging.

Perfect for applying your favorite foundation or powder to the entire face.

ENHANCED EYE MASSAGER:

Gently massages under eyes, leaving skin feeling bright and smooth.



MAKEUP BRUSH



ENHANCED EYE MASSAGER

some time, please remove the battery.

3. Slide the ON/OFF switch into the notch in the battery cover when closing the trimmer
4. Clean the battery contacts and also those of the device prior to battery installation.
5. Remove used batteries promptly.
6. Use only alkaline batteries.

Do not use in the shower or submerge unit in water.

For best performance, AAA alkaline batteries are recommended.

CARE AND MAINTENANCE

Do not use water to clean, and do not use the trimmer in a damp room. Do not use harsh cleansing products. Instead, use mild cleaning agents to care for the trimmer.

1. Make sure the trimmer is in the OFF position.
2. To remove the blade, press the blade release button away from the trimmer blade.
3. Carefully remove the blade from the trimmer.
4. Use a small brush to wipe away any hair or dust. Never remove foreign matter with a sharp object.
5. After cleaning, replace the blade. Make sure unit is still in the OFF position when replacing blade. Cover blade with protective cap for storage.

LIMITED TWO YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return them defective product to the service centre listed below, together with your purchase receipt and \$7.50 for postage and handling. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.

ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24-MONTH DURATION OF THIS WRITTEN WARRANTY. IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

Some provinces do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from province to province.

6 FACIAL cleansing zones



NOTE: USE FOR 10 SECONDS AT EACH LOCATION

INSTRUCTIONS FOR USING THE TRUE GLOW™ GLAM FACIAL BRUSH AND EYE MASSAGER

1. Wet your face and apply sufficient cleanser. Also apply a small amount of cleanser to the wet brush head.
2. Select attachment and attach to power handle.
3. Press the ON/OFF button one time to start 3-in-1 Facial Cleansing System.
4. Do not press the brush hard against your skin, as it will reduce the motion and effectiveness. Keep the brush in light contact and flush against the skin.

5. Move the brush in a slow, circular motion around your face. Let the oscillation do the cleansing. NOTE: Do not apply treatment close to the eyes to avoid risk of injury.

6. When finished, rinse with water and dry your skin with a towel.

INSTRUCTIONS FOR USING THE EYE MASSAGER

1. Gently remove the facial cleansing brush attachment.
2. Apply serums to your skin.
3. Turn the massager on by pressing the ON/OFF button one time.
4. Do not press the massager hard against your skin, as it will reduce the motion and effectiveness. Keep the massager in light contact and flush against the skin.

5. Move the massager in a slow, circular motion around your eyes. Let the vibration do the massaging. NOTE: Do not press tip of eye massager close to the eyes.

6. When finished, rinse with water and dry your skin with a towel.

INSTRUCTIONS FOR USING THE FACIAL BRUSH

1. Select attachment and attach to power handle.
2. Apply foundation to the middle of the makeup brush.
3. Press the ON/OFF button once to start the gentle vibration, allowing you to blend your makeup quicker for photo-finish results.
4. Do not press the brush hard against your skin, as it will reduce the motion and effectiveness. Keep the brush in light contact and flush against the skin.
5. Start applying foundation to your face with short, downward strokes, blending properly.

NOTE: Do not apply foundation close to the eyes to avoid risk of injury.

true glow™ glam

Face & Body Kit
Bikini | Brows | Face



HAVE A QUESTION?

Please do not return this product to the retailer.

CALL US FIRST!

Our customer service and product experts are ready to answer ALL your questions. Please call our TOLL-FREE customer service number at :

1-855-926-6247

Or visit us online at

www.conaircanada.ca

SERVICE CENTRE:

CONAIR CONSUMER PRODUCTS ULC

100 Conair Parkway

Woodbridge, ON L4H 0L2

©2020 Conair Consumer Products ULC

For more information on any Conair product call: 1-855-926-6247

Or visit us online at

www.conaircanada.ca

Consumer Call Centre E-mail:

Consumer_Canada@Conair.com

19CNO35074

IB-16684

Model LTFBRGC