

## CAUTION

NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the dryer. Damage will occur at the high flex point of entry into the dryer, causing it to rupture and short. Inspect the cord frequently for damage. **Stop use immediately if damage is visible or unit stops or operates intermittently.**

If the cord or dryer is damaged or does not operate properly, return it for repair to an authorized Conair service representative only. No repairs should be attempted by the consumer.

### STORAGE - Important

When not in use, your dryer should always be stored in the dryer bracket and the unit should be unplugged from the wall outlet.

## LIMITED ONE YEAR WARRANTY

Conair will repair or replace (at our option) your appliance free of charge for twelve months from the date of purchase if the appliance is defective in workmanship or materials.

**To obtain service under this warranty, return the defective product to the service center nearest you, together with your sales slip and \$7.50 for postage and handling.**

**This warranty excludes all incidental or consequential damages. Some provinces do not allow the exclusion or limitation of incidental or consequential damages, so the foregoing exclusion may not apply to you.**

This warranty gives you specific legal rights, and you may also have other rights which vary from province to province.

### SERVICE CENTRE:

#### Conair Consumer Products Inc.

100 Conair Parkway,  
Woodbridge, Ontario, L4H 0L2  
1-800-472-7606

©2008 Conair Consumer Products Inc.  
[www.conaircanada.ca](http://www.conaircanada.ca)

Consumer Call Centre E-mail :  
[Consumer\\_Canada@Conair.com](mailto:Consumer_Canada@Conair.com)

00CN1015

**IB-3599**

# IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

## READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

**DANGER** — Any hair dryer is electrically live even when the switch is off. To reduce the risk of death or injury by electric shock:

1. Do not install where unit can fall into a tub or sink. Always return hand unit to wall unit after using.
2. Always “unplug it” immediately after using.
3. Do not use while bathing or in a shower.
4. Do not place or store appliance where it can fall or be pulled into a tub or sink.
5. Do not place in, or drop into, water or other liquid.
6. If an appliance falls into water, “unplug it” immediately. **Do not reach into the water.**

**WARNING**— To reduce the risk of burns, electrocution, fire, or injury to persons:

1. **This appliance should never be left unattended when plugged in.**
2. This appliance should not be used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use as described in this manual. Do not

use attachments not recommended by the manufacturer.

4. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped, damaged, or dropped into water. Return the appliance to a Conair Service Centre for examination and repair.**
5. Keep the cord away from heated surfaces. **Do not pull, twist, or wrap line cord around dryer.**
6. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
7. Never use while sleeping.
8. Never drop or insert any object into any opening or hose.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Do not use an extension cord to operate dryer.
11. Do not direct hot air toward eyes or other heat-sensitive areas.
12. **Attachments may be hot during use. Allow them to cool before handling.**
13. Do not place appliance on any surface while it is operating.
14. While using the appliance, keep your hair out of it. Keep your hair away from the air inlets.
15. Do not use with voltage converter.
16. Periodically inspect the wall unit for secure mounting.

## SUPER STYLING GUIDE

Your best looks begin with a good haircut that's well maintained. Always treat hair right with superior quality shampoos, conditioners, and finishing products.

### DRYING BASICS

1. Shampoo and condition hair with products of your choice. Rinse thoroughly. Towel blot hair to remove excess moisture. Section hair. Using the dryer along with your styling brush, direct hot air through a section of hair at a time. Move dryer steadily across each section so that the hot air passes through hair. Direct air flow at hair, not scalp.
2. Keep dryer's air intake vents unobstructed and free from hair while drying.
3. To avoid overdrying, do not concentrate heat on any one section for any length of time. Keep dryer moving as you style.
4. For quick touch ups between shampoos, dampen hair with a mist of water before styling with the dryer.
5. When using your dryer to create curls and waves, dry hair almost completely on a warmer temperature setting, then finish styling with Cool Shot feature to close hair shaft and lock in style.

### BODY & VOLUME

To create extra volume, turn head upside down while drying. Position the airflow toward the roots for maximum lift. When hair is dry, toss head back and brush hair into place.



### STRAIGHTENING


Work with hair in sections when creating a super straight look. Using a large round brush (approximately 2" diameter), hold hair taut in each section and bend ends slightly under as you dry.



### MAKING WAVES

Tousled, natural-looking waves are easily created by grasping hair at the roots and scrunching between fingertips while drying.



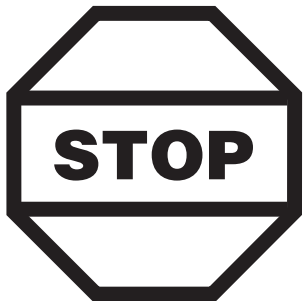

This message about...

**G**ROUND

**F**AULT

**C**IRCUIT

**I**NTERRUPTERS

...can save a life!

## IF YOU MUST USE YOUR HAIR DRYER IN THE BATHROOM, INSTALL A GFCI\* NOW!

Your local electrician can help you decide which type is best for you—a portable unit that plugs into the electrical outlet or a permanent unit installed by your electrician. The National Electrical Code now requires GFCI's in the bathrooms, garages, and outdoor outlets of all **new** homes.

**WHY DO YOU NEED A GFCI?** Electricity and water don't mix. If your hair dryer falls into water while it's plugged in, the electric shock



can kill you...**even if the switch is "off."** A regular fuse or circuit breaker won't protect you under these circumstances. A GFCI offers you far greater protection.

**A GFCI can save your life! Compared to that, the price is small! Don't wait...install one now!**

\*GFCI is a sensitive device which reacts immediately to a small electric current leak by stopping the electricity flow.

**CONAIR®**

# Wall Mount

1 6 0 0   W a t t   D r y e r



**Instruction & Styling Guide**  
**Model 134C**


# **SAVE THESE INSTRUCTIONS**

## **OPERATING INSTRUCTIONS**

This appliance is intended for household use only. Use on Alternating Current (50/60 hertz) only. Standard Dryers are designed to operate at 110 to 125 volts A.C.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

# GET TO KNOW YOUR DRYER

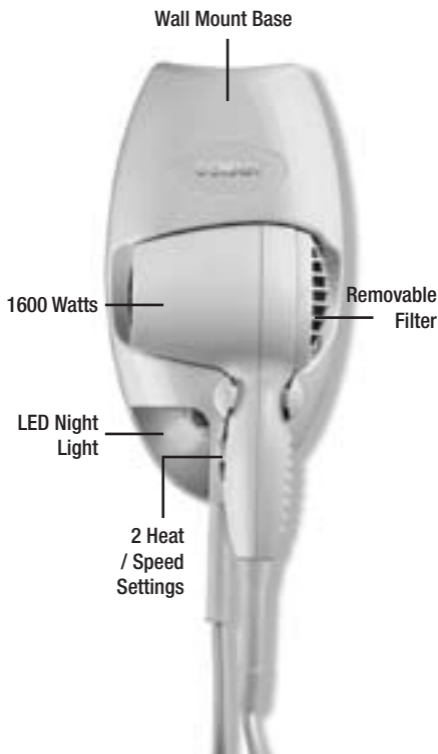

## **NOTE:**

See “Wall Mount Hair Dryer Installation Instructions” supplied on a separate sheet.

# USER MAINTENANCE

Your dryer is virtually maintenance-free. No lubrication is needed. For proper operating performance, the dryer must be kept clean. When cleaning is needed, unplug the cord, and clean dust and lint from air intake openings with a small brush or the brush attachment of a vacuum cleaner. The outer surface of the dryer should be wiped clean with a cloth only.

**Blocked or clogged air intake vents will cause the dryer to overheat.** If overheating occurs, an automatic safety device will shut the dryer or the heat off to prevent damage or personal injury. If the unit or the heat cycles off, unplug the cord and allow the dryer to cool for 10 to 15 minutes before restarting. Make sure the air vents are clean.