IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING.

KEEP AWAY FROM WATER

DANGER — Any appliance is electrically live even when the switch is off. To reduce the risk of death by electric shock:

- 1. Always unplug appliance immediately after using.
- 2. Do not use while bathing.
- 3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
- 4. Do not place in, or drop into water or other liquids.
- 5. If an appliance falls into water, unplug it immediately. $\mbox{\bf Do}$ not reach into the water.

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:

- 1. This appliance should never be left unattended when plugged in.
- $2. \ \mbox{Do}$ not pull, twist, or wrap line cord around appliance.

vides consistent styling power so that every strand of your hair is set with the same level of heat and comes out the same way for a perfect finish.

USER MAINTENANCE

Your hot brush is virtually maintenance free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the hot brush from the power source, let it cool, and wipe exterior with a cloth. If any abnormal condition occurs, unplug the hot brush, allow it to cool, and return it for repair to an authorized service center only. No repairs should be attempted by the consumer.

CAUTION

NEVER allow the power supply cord to be pulled or twisted. Never wrap the cord around the hot brush. Damage will occur at the high flex point of entry into the hot brush, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your appliance should be disconnected, allowed to cool, and stored in a safe, dry location, out of reach of children. Do not jerk or strain cord at plug connections. Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

- 3. This appliance should not be used by, on or near children or individuals with certain children
- 4. Use this appliance only for its intended use, as described in this manual. Do not use attachments not recommended by the manufacturer.
- 5. Never operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service center for examination and repair.
- 6. Keep the cord away from heated surfaces.
- 7. Never use while sleeping or drowsy.
- 8. Never drop or insert any object into any opening or hose.
- 9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- 10. Unit is hot when in use. Do not let heated surfaces touch eyes or skin.
- 11. Do not place the heated unit directly on any surface while it is hot or plugged in.
- 12. Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of hair, lint and other debris.
- 13. Do not use an extension cord with this appliance.
- 14. Do not touch hot surfaces of the appliance. Use handles or knobs.
- 15. Do not attempt to touch the housing of your appliance near the heat plate, as it is hot when in use.
- 16. TO AVOID TANGLING, NEVER ROLL THE HAIR AROUND THE HOT BRUSH MORE THAN TWO TIMES.
- 17. Do not operate with a voltage converter.

WARNING:

IF YOU THINK

THE POWER IS OFF

WHEN THE SWITCH

IS OFF.

YOU'RE WRONG.

KEEP AWAY FROM WATER

Everyone knows that electricity and water

are a dangerous combination. But did

you know that an electric appliance is still

electrically live even if the switch is off?

If the plug is in, the power is on. So when you are

not using your appliances, keep them unplugged.

ALWAYS UNPLUG

SMALL APPLIANCES

18. This appliance is not a toy. Keep away from children.

SAVE THESE INSTRUCTIONS OPERATING INSTRUCTIONS

Use on Alternating Current (60 hertz) only. This unit is designed to be operated at 125V AC.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

GETTING STARTED

The brush's 3 high heat temperature settings and Instant Heat technology provide unique styling versatility for all hair types. If you have fine hair, a low temperature will provide the best results. If you have thick or wavy hair, keep the heat setting on high. You can vary the brush's temperature according to your particular need!

Temperature Setting Guide

TEMP.CONTROL	HAIR TYPE
I:Low 356°F (180°C)	Delicate, thin or easy- to-style hair
II: Medium 375°F (190°C)	Average to thick or treated hair
III: High up to 400°F (204°C)	Thick or wavy hair

STYLING WITH THE DIAMOND-INFUSED CERAMIC EASY-GLIDE PADDLE BRUSH

Diamond Brilliance™ combines luxuriously smooth diamond-infused ceramic with advanced ionic technology. The diamond-infused ceramic surface helps smooth down flyaways and frizz. It evenly distributes heat so that the style you create has a salon-perfect, silky smooth, shiny finish.

The unique combination of heated diamond-infused ceramic and silicone bristles provides better contact and superior styling for beautifully defined, lasting results. The metal bristles retain heat while styling, and the silicone bristles add shine.

IONIC TECHNOLOGY

The heat-activated hot paddle brush also includes a powerful, high-voltage ion generator.

The advanced ion generator generates up to 50% more ions to:

- · reduce flyaways and frizzy hair
- eliminate static electricity
- enhance shine

NOTE: The unit may produce a clicking sound at times, which is normal for a high output ion generator.

TO STYLE HAIR

The hot paddle brush is perfect for everyday, damp-to-dry styling and touch-ups. Simply slide the switch to choose the temperature setting and follow the steps below to detangle and smooth hair.

- 1. Separate a hair section approximately 2 inches. Comb through, starting at the ends and work upward to smooth and detangle. Next, using the hot paddle brush, brush the section, distributing heat evenly with slow, steady strokes to add shine. Repeat until you finish all your sections.
- 2. For extra frizz-free style separate a 2 inch

section of hair and pull down on the ends with your opposite hand to create tension. Brush through the section with slow, steady strokes to distribute heat evenly and make sure to keep hair taut! Repeat until you finish all your sections.

3. For added volume, using the hot paddle brush, flip your hair forward and brush through with slow, steady strokes to distribute heat evenly. Then just flip back up and smooth into your desired style.

Never leave your hot paddle brush on and unattended. However, should you fail to turn it off, it will shut itself off automatically within 60 minutes.

TO AVOID TANGLING, NEVER ROLL THE HAIR AROUND THE HOT BRUSH MORE THAN TWO TIMES. USE A SMALL SECTION OF HAIR AT A TIME.

NOTE: DO NOT USE THIS STYLING APPLIANCE ON HAIR EXTENSIONS.

USING INSTANT HEAT, THE 3 ULTRA-HIGH HEAT TEMPERATURE SETTINGS & UNIFORM HEAT RECOVERY SYSTEM

This styling brush features a ceramic heater that maintains constant temperature during use for precision styling.

This Instant Heat technology has 3 high heat temperature settings. There is a temperature range that's gentle and safe for every type of hair, from the finest to the curliest and most resistant, and helps you create the look you want. And that's not all. Conair's professional salon standards of engineering provide you with a uniform and improved heat recovery system that maintains the hot brush at constant temperatures. There is a constant surge of power to ensure that heat is continuously and quickly delivered for optimal styling results, unlike other units, which lose heat during use. This pro-

GET TO KNOW YOUR HOT PADDLE BRUSH



WARNING: The hot paddle brush will get very hot within a few seconds and should not come in contact with skin after the hot paddle brush is turned on.

LIMITED FOUR YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace (at our option) your unit free of charge for 48 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service centre listed below, together with your purchase receipt and \$7.50 for postage and handling. In the absence of a purchase receipt, the warranty period shall be 48 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 48 MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

This warranty gives you specific legal rights, and you may also have other rights, which vary from province to province.

IB-16032

©2018 CONAIR CONSUMER PRODUCTS ULC
SERVICE CENTRE:
CONAIR CONSUMER PRODUCTS ULC
100 Conair Parkway
Woodbridge Ontario, L4H 0L2
1-855-926-6247
www.conaircanada.ca
Consumer Call Centre E-mail:
Consumer_Canada@Conair.com

18CN033966



Have a Question?

Please do not return this product

to the retailer. Call Us First!

Our customer service and product experts are ready to answer ALL your questions.

Please call our TOLL-FREE customer service number at: 1-855-926-6247

or visit us online at www.conaircanada.ca

Instruction & Styling Guide
Model BC7PKC

