

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should a ways be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

DANGER — Any appliance is electrically live even when the switch is off. To reduce the risk of death or injury by electric shock:

- 1. Always “unplug it” immediately after using.
- 2. Do not use while bathing or in a shower.
- 3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
- 4. Do not place in, or drop into, water or other liquid.
- 5. If an appliance falls into water, “unplug it” immediately. Do not reach into the water.

WARNING— To reduce the risk of burns, electrocution, fire, or injury to persons:

- 1. This appliance should never be left unattended when plugged in. Do not pull, twist, or wrap line cord around appliance.
- 2. Close supervision is necessary when this appliance is used by, on, or near children or invalids.
- 3. Use this appliance only for its intended


use as described in this manual. Do not use attachments not recommended by the manufacturer.

- 4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged or dropped into water. Return the appliance to an authorized service centre for examination and repair.
- 5. Keep the cord away from heated surfaces. Do not wrap the cord around appliance.
- 6. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
- 7. Never use while sleeping.
- 8. Never drop or insert any object into any opening or hose.
- 9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- 10. Do not use an extension cord with this appliance.
- 11. Do not direct hot air toward eyes or other heat sensitive areas.
- 12. Attachments may be hot during use. Allow them to cool before handling.
- 13. Do not place appliance on any surface while it is operating.
- 14. While using the appliance, keep your hair away from the air inlets.

IF YOU MUST USE YOUR HOT AIR STYLER IN THE BATHROOM, INSTALL A GFCI*NOW!

Your local electrician can help you decide which type is best for you—a portable unit that plugs into the electrical outlet or a permanent unit installed by your electrician. The National Electrical Code now requires GFCI's in the bathrooms, garages, and outdoor outlets of all new homes.

WHY DO YOU NEED A GFCI? Electricity and water don't mix. If your HOT AIR STYLER falls into water while it's plugged in, the electric shock can kill you...even if the switch is “off.” A regular fuse or circuit breaker won't protect you under these circumstances. A GFCI offers you far greater protection.



A GFCI can save your life! Compared to that, the price is small! Don't wait... install one now!

*GFCI is a sensitive device which reacts immediately to a small electric current leak by stopping the electricity flow.

- 15. Do not operate with a voltage converter.
- 16. This appliance was set at the factory to operate at 125 volts.

SAVE THESE INSTRUCTIONS OPERATING INSTRUCTIONS

This appliance is intended for household use. Use on Alternating Current (60 hertz) only. Standard curling appliances are designed to operate at 110 to 125 volts AC. This appliance has a polarized plug (one blade is wider than the other.) As a safety feature, this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

CONAIR VOLUME SERIES

The Conair VOLUME SERIES is perfect for adding gorgeous volume and shine to styles. The large ceramic barrel gives fullness and body as you style whilst the soft bristles create ultimate shine and smoothness to hair.

IONIC TECHNOLOGY

Many aspects of modern living, including air conditioning, contact with man-made fibres and air pollution contribute to a build-up of static electricity in the hair. Even brushing and towel drying the hair, can increase these levels causing the surface of the cuticle to become rough.

USER MAINTENANCE

Your appliance is virtually maintenance-free. For proper performance, the appliance must be kept clean. Blocked or clogged air intake vents will cause the appliance to over-heat. When cleaning is needed, unplug the cord and clean dust and lint from air intake openings with a small brush attachment. The outer surface of the appliance should be wiped clean with a cloth only. If abnormal conditions occur, unplug the appliance, allow it to cool and return it for repair to an authorized service representative only. No repairs should be attempted by the consumer.

CAUTION

NEVER allow the power supply cord to be pulled or twisted. Never wrap the cord around the appliance. Damage will occur at the high-flex point of entry into the appliance, causing it to rupture and short circuit.

Inspect the cord frequently for damage. STOP USE IMMEDIATELY if damage is visible or if unit stops or operates intermittently.

STORAGE - Important

When not in use, your appliance should be disconnected and stored in a safe, dry location, out of reach of children. Do not wrap line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

Consequently, hair may have a dull appearance. Also high levels of static charge cause hair to become “fly-away” and difficult to style.

The ion generator produces a stream of negative ions which act to neutralise the static charge, smoothing the scales on the cuticle for shiny, smooth and manageable hair so you can achieve your desired style easily.

HEAT SETTINGS

The Conair VOLUME SERIES is perfect for adding gorgeous volume and shine to styles. The large ceramic barrel gives fullness and body as you style whilst the soft bristles create ultimate shine and smoothness to hair.

ROTATION SETTINGS

There are two rotation speed settings. To make the brush head rotate, press the buttons marked << and >>, these will make the brush head rotate clockwise and anticlockwise. When the appliance is set on the high heat setting the brush head rotation will be faster. When the appliance is set on the low heat setting the speed will be slower.

 
When the appliance is used on the cool setting, the brush head will not rotate. For best results, use the rotating brush feature to create styles with gorgeous volume and shine.

PROTECTIVE COVER

After every use, always ensure the protective shield is placed over the brush head. This protects the bristles and stops them from collapsing.

WARNING:
IF YOU THINK THE
POWER IS OFF WHEN
THE SWITCH IS OFF
YOU'RE WRONG.

KEEP AWAY FROM WATER



Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES

A Public Service Ad from the Association of Home Appliance Manufacturers and Underwriters Laboratories, Inc.

INSTRUCTIONS FOR USE

- If you have long or thick hair, you may find it quicker and easier to use a hairdryer first, to rough dry your hair and remove the excess moisture. For added volume, turn your head upside down as you dry.
- Once the hair is 80% dry, you should start to create your style using the VOLUME SERIES styler.

MAXIMUM VOLUME AND BODY

- 1) Start by sectioning the hair.
- 2) To turn the appliance on, slide the I / O switch to the correct heat setting for your hair.
- 3) Place the appliance into the hair, close to the roots and brush through the section to remove any tangles.
- 4) For added root lift, hold the brush in place at the root for a few seconds.
- 5) Move the brush through the hair, towards the ends and as you reach the end of the section, start to rotate the brush away from your head by pressing and holding the appropriate rotate button.
- 6) As you do this, resist the rotation of the brush by pulling the brush downwards. This will create tension through the section of hair.

IMPORTANT! It may take several attempts to perfect this technique, if the brush spins too quickly, simply release the rotation button and remove from the hair.

LIMITED THREE YEAR WARRANTY

Conair will repair or replace, at our option, your appliance free of charge for 36 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service centre listed below together with your sales slip and \$7.50 for postage and handling. In the absence of a receipt, the warranty period shall be 36 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 36 MONTH DURATION OF THIS WARRANTY.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

This warranty gives you specific legal rights, and you may also have other rights which vary from province to province.

7) For even more volume, allow the brush

to rotate, winding the entire section of hair around the barrel, release the rotate button and the leave the brush in the hair for a few seconds.

- 8) To release the section, press and hold the opposite rotation button to un-wide the hair section.
- 9) Repeat as necessary.
- 10) After use, switch off and unplug the appliance.
- 11) Allow to cool before storing away.
- 12) Place protective shield over brush head to protect the bristles.

HELPFUL HINTS AND TIPS

- To define layers and give shape to styles, follow step 5 and repeat through section.
- To get root volume and body through the top section of hair, follow steps 3 to 5 but using an upward motion.
- For long lasting results, follow steps 3 to 7 but then slide the I / O switch to the cool setting (first position on the switch) for a few seconds, this will set the hair. Slide the switch to the low heat setting (second position on the switch) and proceed with step 8.

FEATURES



- 500W
- 50mm ceramic barrel with soft brush bristles
- High shine ionic conditioning
- 2 heats plus a cool setting
- 2 rotation speeds for total control
- Multi-directional brush

infinitiPRO CONAIR

2 in. (50 mm) Spin Air Brush



Have a Question?

Please do not return this product to the retailer.

Call Us First!

Our customer service and product experts are ready to answer ALL your questions. Please call our TOLL-FREE customer service number at: 1-855-926-6247 or visit us online at www.conaircanada.ca

Instruction & Styling Guide MODEL BC178RC