

SANITIZING INSTRUCTIONS

1. Position the Garment Steamer's faceplate at a minimum distance of 1 cm (0.4 inch) from material to be treated.
2. Remain steaming in this position for 1 minute, then move to the next area to be treated and repeat.

ATTACHMENTS

- CREASER ATTACHMENT** - Creates a crease in pants, shirts, blouses and more.
- DELICATE BONNET** - protects trims and safely steam fine fabrics.
- 2-IN-1 ATTACHMENT - Silicone Band** - pulls fabric taut for better results.
- Bristle Brush** - ensures steam penetrates fibers for a perfect press, even on heavy fabrics.



USING ATTACHMENTS

With the garment steamer off and cool, snap the Silicone Band, creaser or delicates bonnet attachment over the steam head, ensuring it is firmly affixed. At this point, for the 2-in-1 attachment, the Silicone Band can be used or you can choose to affix either the Bristle Brush insert into the channel on the top of the Silicone Band attachment, as desired. **NOTE:** Only one function of the 2-In-1 attachment can be used at a time.

CAUTION: Use extreme care when changing the attachments after the unit has been in use, as the steam head will continue to be hot.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING

DANGER — Any appliance is electrically live even when the switch is off.

To reduce the risk of death by electric shock:

1. **Always unplug appliance immediately after use and before cleaning.**
2. Do not place or store appliance where it can fall or be pulled into a tub or sink.
3. Do not place in, or drop into water or other liquids.
4. Do not reach for an appliance that has fallen into water. **Unplug immediately.**
5. Use only in a dry area.

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:

1. **This appliance should never be left unattended when plugged in.**
2. **This appliance is not a toy and is not to be used by children.**
3. Close supervision is necessary when this appliance is used near children or individuals with certain disabilities. Unsupervised use could result in fire or personal injury.

STEAMING TIPS

1. First, test unit on an inconspicuous area of the item to be steamed using the lowest Steam setting to ensure fabric can tolerate the effects of steam. If there is no evidence of damage, you can proceed to use the steamer on that item.
2. To prepare your fabric for steaming, brush it with the brush attachment. This will loosen the fibers and allow better steam penetration.
3. Hang your garment or fabric. **NOTE:** Avoid using metal clothes hangers, if possible.
- CAUTION: If hanging garment on a door while steaming, be careful not to damage the door with steam.**
4. Pass the steam jets just above the fabric where the wrinkles are. It may take a few passes to remove the wrinkles completely.
5. For heavier fabrics or severely wrinkled fabrics, you may position the steamer head directly on the fabric for a few seconds to remove wrinkles. Be cautious when working with delicate fabrics.
6. After use, turn unit OFF by depressing the "STEAM" button. Then press the I/O button to the OFF position. With dry hands, unplug your garment steamer from the outlet. Empty any remaining water from the tank to avoid leakage. **BE SURE TO PRESS THE ON/OFF "I/O" BUTTON TO THE "OFF (O)" POSITION PRIOR TO UNPLUGGING THE UNIT.**
7. When steaming, always keep the unit in motion. Do not continuously hold steamer over an area or touch steamer jets directly to fabric for more than a few seconds, as this can cause damage, including shrinkage, melting, or color shift on certain types of material.

8. In the case of heavier, durable fabrics such as wool coats or bedding, the TURBO setting and slower passes with the steamer may be necessary to achieve desired results. As always, start by testing on an inconspicuous area of the item to be steamed using the regular steam setting to ensure fabric can tolerate the effects of steam, and adjust your technique as needed to obtain the results desired.

LIMITED ONE YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace (at our option) your unit free of charge for 12 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service centre listed below, together with your purchase receipt.

In the absence of a purchase receipt, the warranty period shall be 12 months from the date of manufacture

ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 12-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

This warranty gives you specific legal rights, and you may also have other rights, which vary from province to province.

SERVICE CENTRE:
CONAIR CONSUMER PRODUCTS ULC
100 Conair Parkway
Woodbridge Ontario, L4H 0L2
©2021 CONAIR CONSUMER PRODUCTS ULC

For more information on any Conair product call:
1-855-926-6247
Visit our Web site: www.conaircanada.ca
Consumer Call Centre E-mail:
Consumer_Canada@Conair.com

20CN076025

IB-17054



Have a Question?
Please do not return this product to the retailer.
Call Us First!
Our customer service and product experts are ready to answer ALL your questions.

Please call our TOLL-FREE customer service number at: 1-855-926-6247 or visit us online at www.conaircanada.ca

Instruction Booklet
For your safety and continued enjoyment of this product, always read the instruction book carefully before using.


CONAIR®
Model GS108C

IMPORTANT

FOR HOUSEHOLD USE ONLY

FILLING INSTRUCTIONS

1. Make sure the unit is unplugged.
2. Stand the unit on a table and grasp with one hand.
3. Pull the reservoir out, away from the steamer body.
4. The rubber inlet cover is located on the top of the water reservoir.
5. Open the inlet cover and fill the reservoir with distilled water (which can be found in grocery stores). We recommend that you use distilled water only, as this will prevent mineral deposits in the boiler that can reduce performance or clog the water system.
6. Close the inlet cover and return the reservoir to its place, making sure that it snaps in place and is secure.

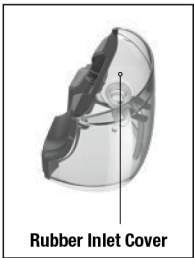


GETTING TO KNOW YOUR STEAMER



2-IN-1 ATTACHMENT

- Silicone Band** - Pulls fabric taut for easier steaming (A).
- Bristle Brush** - Loosens fibers for bet steam penetration (B)

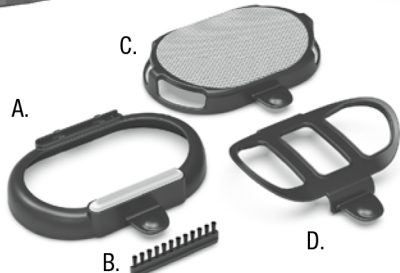

- Delicates Bonnet** - Helps protect delicate fabrics and trims (C).
- Creaser** - For perfect pleats and folds (D).

OPERATING INSTRUCTIONS

1. Fill water reservoir with distilled water.
2. Plug the unit into the electrical outlet.
3. Press ON/OFF (I/O) button, located on the back of the steamer, to turn the unit on. The HIGH MODE (III) light will illuminate and begin blinking. Allow 10 seconds for the unit to warm up. The appliance is ready to use when the HIGH MODE (III) light stops blinking and remains solid.
4. This steamer has a dry iron setting. Without pressing the steam button, the soleplate of the steamer will get hot to use as an iron.
5. Your steamer has 4 steam settings. Press the "MODE" button repeatedly until you reach desired setting. Choose LOW (I) for delicate fabrics, up to Turbo for use on thick fabrics and heavily wrinkled articles.
6. Press the steam button to emit steam. Pick up steamer and begin steaming, pointing the jets away from you and anyone in the room. NOTE: This steamer button to emit steam. Pick up steamer and begin steaming, pointing the jets away from you and anyone in the room.
7. Once steamer is placed down and SMART SENSOR goes into auto pause. To restart the steamer again, simply pick up steamer and begin steaming. To activate SMART TOUCH SENSOR, hold the MODE button for 2 seconds until lights are flashing. Once lights are flashing, the SMART TOUCH SENSOR has been activated.
8. Press ON/OFF button to turn unit OFF.
9. Unplug the steamer when it is not in use.

