

INFINITIPRO
BY CONAIR®

Instruction & Styling Guide
Model CD2662C

PATENT PENDING



TWO SECRETS ARE BETTER THAN ONE !

METÀ e METÀ
(Half & Half)™
BY CURL SECRET®

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING *KEEP AWAY FROM WATER*

DANGER — Any appliance is electrically live even when the switch is off. To reduce the risk of death by electric shock:

1. **Always unplug appliance immediately after using.**
2. Do not use while bathing or in the shower.

3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into water or other liquids.
5. If an appliance falls into water, unplug it immediately. **Do not reach into the water.**

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:

1. **This appliance should never be left unattended when plugged in.**
2. **Do not pull, twist, or wrap line cord around appliance.**
3. This appliance should not be used by, on or near children or individuals with certain disabilities.
4. Use this appliance only for its intended use, as described in this manual. Do not use attachments not recommended by the manufacturer.

5. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service center for examination and repair.**
6. Keep the cord away from heated surfaces.
7. Never use while sleeping.
8. Never drop or insert any object into any opening or hose.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Unit is hot when in use. Do not let heated surface touch eyes or skin.
11. **Do not place the heated unit directly on any surface while it is hot or plugged in.**
12. Never block the air openings of the appliance or place on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of hair, lint and other debris.
13. Do not use an extension cord with this appliance.
14. Do not touch hot surfaces of the appliance. Use handles or knobs.
15. Do not attempt to touch the housing of your appliance near the curl chamber, as it is hot when in use.
16. Do not operate with a voltage converter.
17. This appliance is not a toy. Keep away from children.

SAFETY INSTRUCTIONS

1. Do not use the unit if it is damp or if your hands are wet.
2. **WARNING:** Polyethylene bags containing this product or its packaging can be dangerous. To avoid the risk of suffocation, keep these bags out of the reach of babies and children. A polyethylene bag is not a plaything.
3. **WARNING:** Do not use this appliance near bathtubs, showers, basins, or other vessels containing water.
4. If the appliance is used in a bathroom, unplug it after use. Leaving the appliance near a source of water may be dangerous, even if the appliance is off. For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your electrician for advice.
5. Do not immerse appliance in water or any other liquid.
6. Stop using the appliance immediately if the cord is damaged. The power supply cord should not be replaced



- by the end user. The power supply cord should only be replaced by the manufacturer's authorized importer (or, in the United States and Canada, by an authorized Service Center).
7. Do not leave the appliance unattended while it is plugged in or in use.
 8. Do not let the appliance's hot surface touch eyes or skin.
 9. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with appliance.
 10. Allow the appliance to cool before storing.
 11. After use, do not wind the cord around the appliance as this may damage it. Instead roll the cord up loosely and let it rest by the side of the appliance.

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

Use on Alternating Current (60 Hz) only. This unit is designed to be operated at 125V AC.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.


NOTE: Do not use this styling appliance on hair extensions.

GETTING STARTED

Creating Waves


- Ensure the hair is clean, dry and free of dry shampoo, hairspray, mousse, spray wax, styling dust and all other styling products.
- Comb through to remove any tangles and divide the hair into sections, no bigger than 3cm wide.
- To turn the appliance on, slide the switch to the heat setting suitable for your hair type (See Heat Settings).
- Select the wave setting by sliding the switch to wave mode (See Wave or Smooth Settings).
- Wave direction can be selected by sliding the switch to desired direction (See Wave Direction Settings).

- Always insert the hair into the appliance with the open part of the ceramic chamber facing towards the head. For longer length hair, insert the hair into the appliance further down the section to ensure the hair is drawn into the ceramic chamber efficiently.

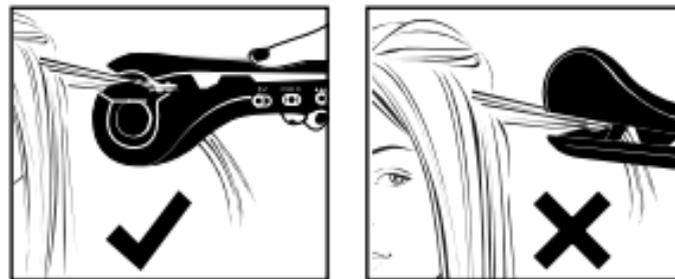


- **CAUTION:** If the appliance is used incorrectly, in certain instances a slight tangle can occur. Should a tangle occur, firstly turn the appliance off and refrain from pulling the appliance away from the hair. Gently tease the hair out from the ceramic chamber until fully released.

- **IMPORTANT!** The neat section of hair must be inserted into the opening, beyond the hair stopper (A) until it reaches the hair guide (B). If too much hair is placed into the appliance opening and outside of hair stopper (A) the appliance will beep

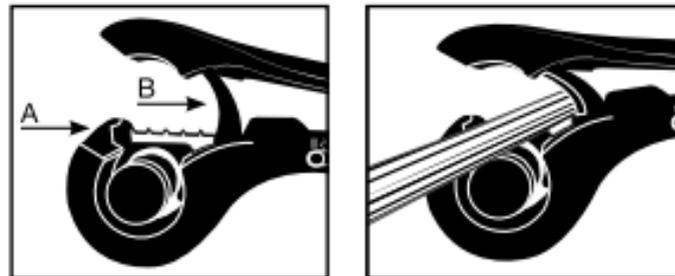

continuously. To continue using, remove the appliance from the hair and insert smaller sections of hair.

- **IMPORTANT!** Firmly close the handles together to allow the hair to be drawn into the ceramic chamber.
- Keep the appliance in position and once the hair has been drawn into the ceramic chamber, the appliance will start beeping. Continue to hold the handles closed until the appliance sounds finish audio, this is to indicate the time is up.
- **IMPORTANT!** If the styler is not released from the hair after the finish audio, it will beep continuously and the power indicator will flash until the handles are released. To continue using the appliance, remove from the hair and use as normal.

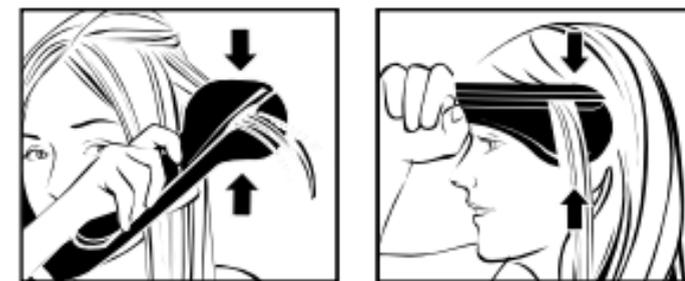




- Release the handles fully and smoothly pull the appliance away from the head to reveal the chosen wave.
- To allow the wave to set, do not comb or brush the hair until it cools.
- Repeat around the head until you have the amount of waves desired.
- After use, switch off and unplug the appliance.



Creating Smooth Styles

- Ensure the hair is clean, dry and free of dry shampoo, hairspray, mousse, spray wax, styling dust and all other styling products.
- Comb through to remove any tangles and divide the hair into sections, no bigger than 3cm wide.

- To turn the appliance on, slide the switch to the heat setting suitable for your hair type (See Heat Settings).
- Select the smooth setting by sliding the switch to straight mode (See Wave or Smooth Settings).
- Always insert the hair into the appliance with the plate part facing towards the head. Place a section of hair between the straightening plates, close to the roots.
- **IMPORTANT!** The neat section of hair must be inserted into the opening, beyond the hair stopper (A) until it reaches the hair guide (B). If too much hair is placed into the appliance opening and outside of hair stopper (A) the appliance will beep continuously. To continue using, remove the appliance from the hair and insert smaller sections of hair.

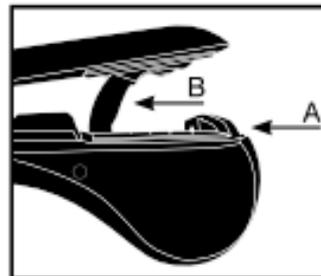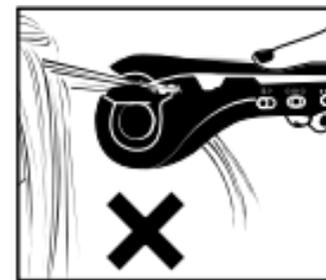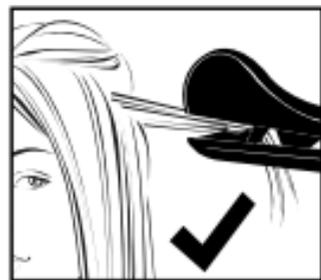

- **Caution!** If the appliance is used incorrectly, in certain instances a slight tangle can occur. Should a tangle occur, firstly turn the appliance off and refrain from pulling the appliance away from the hair. Gently tease the hair out from the ceramic chamber until fully released.
- Firmly close the handles together to allow the hair to be drawn into the ceramic chamber.
- **IMPORTANT!** Once the hair has begun to be drawn into the ceramic chamber hold the hair firmly between the straightening plates and immediately slide down the length of the hair from root to tip.
- **IMPORTANT!** If the appliance is not released from the hair it will beep continuously and the power indicator will flash until the handles are released. To continue using the appliance, remove from the hair and use as normal.



- To allow the style to set, do not comb or brush the hair until it cools.
- After use, switch off and unplug the appliance.

Heat Settings

- If you have delicate, fine or coloured hair, use the lower heat settings. For thicker hair, use the higher heat settings.
- It is suggested to always complete a test on initial use to ensure the correct temperature is used on the hair type. Start on the lowest setting and increase the temperature until desired result is achieved. See guide of the temperature settings.

Wave or Smooth Settings

- The wave or smooth setting allows you to switch between the Wave Mode for

TEMP. SETTINGS	
0	= OFF
●	= 180°C (355°F)
●●	= 200°C (395°F)
●●●	= 230°C (450°F)

WAVE/SMOOTH SETTINGS	
⤿	= Wave mode
	= Straight mode

perfectly formed waves or Smooth Mode for a sleek finish without flattening.

- See guide of the wave and smooth settings.

Wave Direction Settings

- The wave direction settings allow you to chose the direction of your wave formation.
- See guide of the wave direction settings.

WAVE DIRECTION SETTINGS
 = Clockwise
 = Alternate
 = Anti-Clockwise

Sleep Mode

This appliance has an automatic sleep mode feature. If the appliance is not used for more than 20 minutes the temperature will automatically drops to around 150°C (300°F). If you wish to continue using the appliance after this time, simply close then release the handles and it will return to the temperature setting you were using it on.

Auto Shut-Off

This appliance has an automatic shut off feature for added safety. If the appliance is switched on for more than 60 minutes continuously, it will automatically switch off. If you wish to continue using the appliance after this time, simply slide the switch to the “0” setting, then slide the switch to the relevant setting to turn the power on again.

Heat Mat

The appliance comes with a heat mat for use during and after styling. During use do not place the appliance on any heat sensitive surface, even when using the heat mat provided. After use, switch off and unplug the appliance. Immediately wrap the appliance in the heat mat provided and allow to fully cool down. Continue to keep it out of reach of children as it will remain hot for several minutes.


Cleaning Maintenance

To keep your appliance in the best possible condition, please follow the steps below:

General

- Ensure the appliance is switched off, unplugged and cool. To clean the outside of the appliance, wipe with a damp cloth. Make sure that no water enters the appliance and it is completely dry before use.

- Do not wrap the lead around the appliance, instead coil the lead loosely by the side of the appliance.
- Do not use the appliance at a stretch from the power point.
- Always unplug after use.

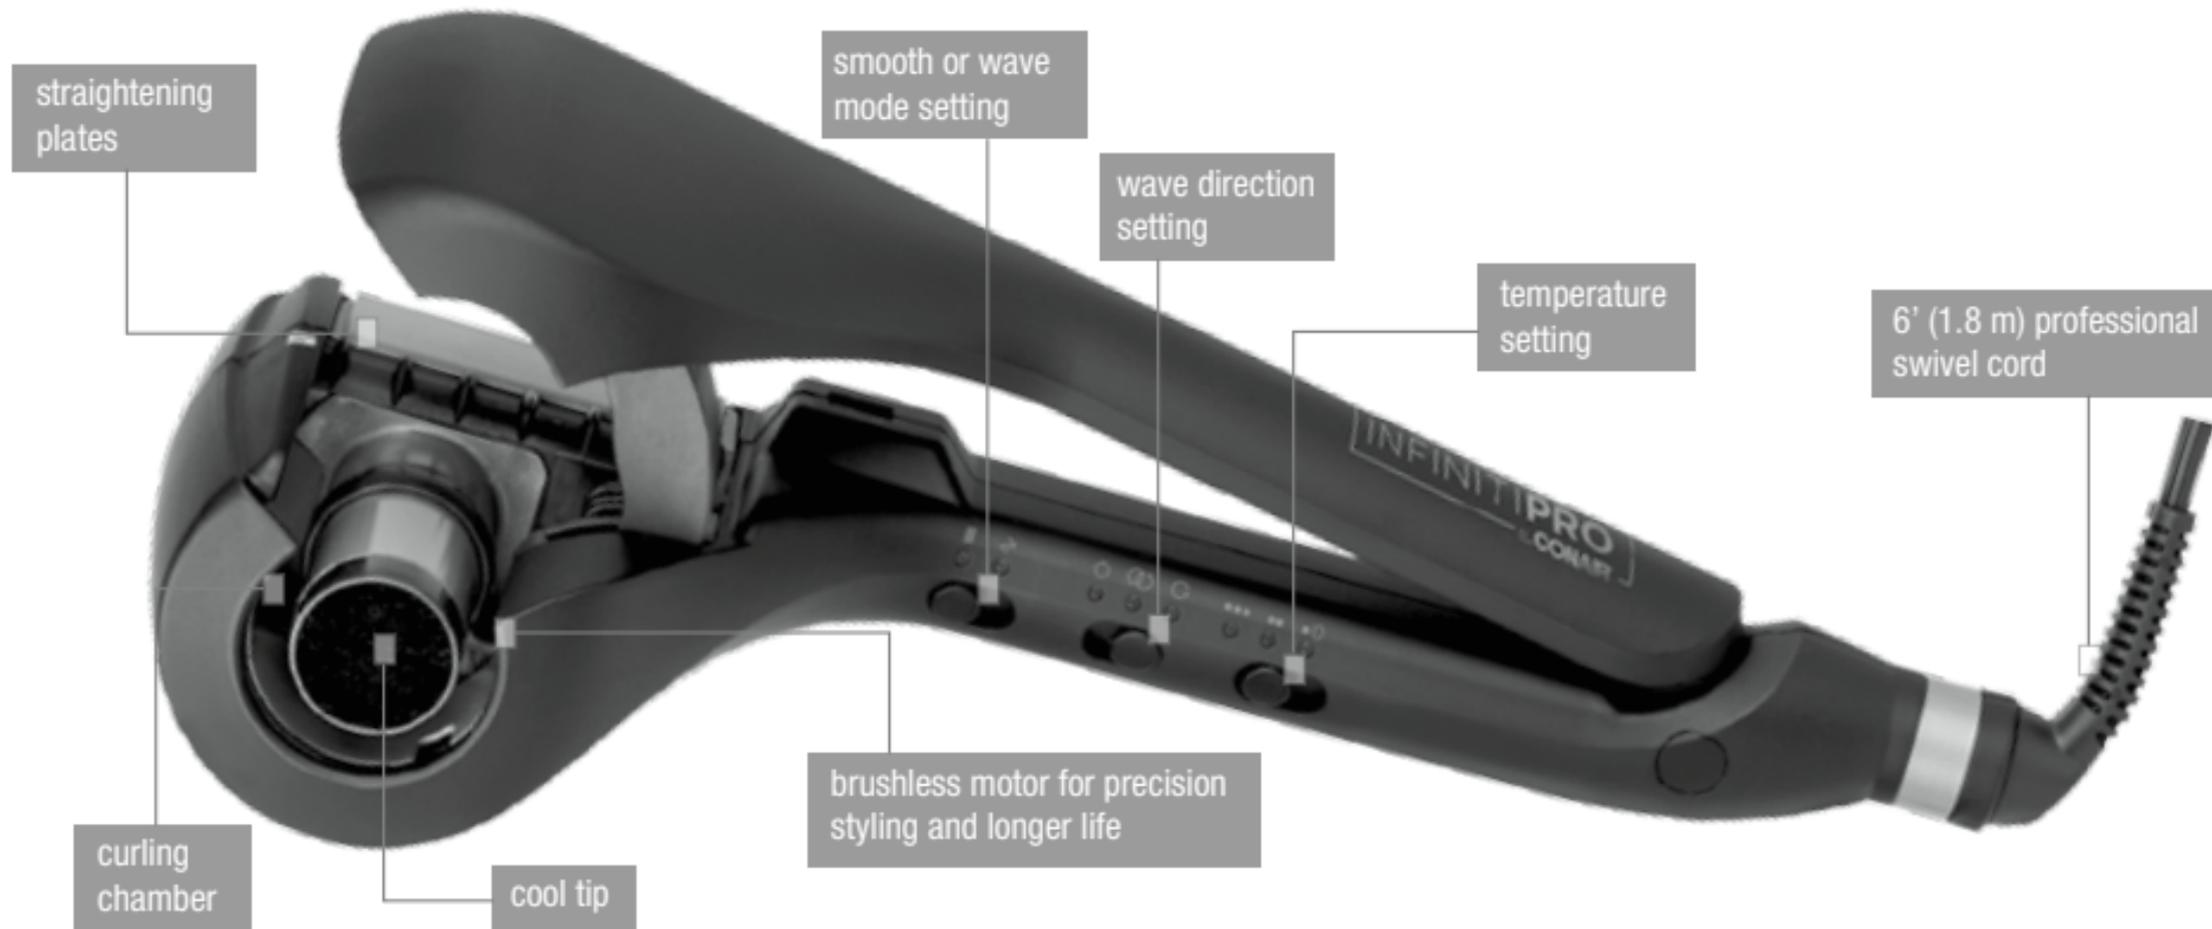

USER MAINTENANCE

Your styler is virtually maintenance free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the unit from the power source, allow to cool and wipe exterior with a cloth. If any abnormal condition occurs, unplug the unit, allow it to cool, and return it for repair to an authorized service representative only. No repairs should be attempted by the consumer.

CAUTION


NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the appliance. Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your appliance is easy to store. Allow appliance to cool, then simply store out of reach of children in a safe, dry location. Do not jerk or strain cord at plug connections. Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

**WARNING:
IF YOU THINK
THE POWER IS OFF
WHEN THE SWITCH
IS OFF,
YOU'RE WRONG.**

KEEP AWAY FROM WATER

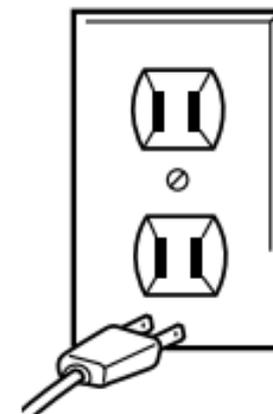

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES

LIMITED FIVE YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 60 months from the date of purchase if the appliance is defective in workmanship or materials. To obtain service under this warranty, return the defective product to the service centre listed below that is nearest you, together with your purchase receipt and \$7.50 for postage and handling. In the absence of a purchase receipt, the warranty period shall be 60 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 60 MONTHS DURATION OF THIS WRITTEN, LIMITED WARRANTY.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

This warranty gives you specific legal rights, and you may also have other rights, which vary from province to province.

Due to continued product enhancements, the product featured may differ slightly from the actual product purchased.

SERVICE CENTER

CONAIR CONSUMER PRODUCTS ULC

100 Conair Parkway

Woodbridge, ON L4H 0L2

©2017 CONAIR CONSUMER PRODUCTS ULC

17CN030851

For more information on any Conair product call:

1-855-926-6247

Visit our Web site: www.conaircanada.ca

Consumer Call Centre E-mail:

Consumer_Canada@Conair.com

IB-15307