 


Remember, it's better to leave too much hair than too little. For longer hair on top, use the barber comb and lift hair on the top of the head, cutting over the comb. Or hold the hair between the fingers and cut to desired length. Always working from the front to the back of the head, gradually cut the hair shorter by reducing the space between the comb or fingers and the head. Comb often to check for uneven strands, and to get rid of trimmed hair.

OUTLINING

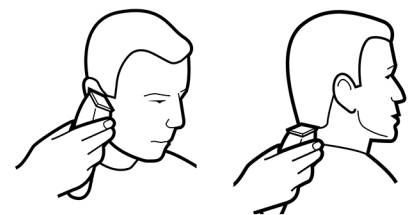

Outlining requires no attachments. Comb hair into the desired style. Position the clipper between the sideburns and the ear (see above), making sure the corner edge of the blade is against the hairline. With the outline of the hair as your guide, slowly move the clipper over, around and behind the ears. For the back of the neck and the sideburns, hold the clipper upside down (see above) and, holding it against the skin at the length desired, move the clipper downward.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, take basic safety precautions, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER FOR HOUSEHOLD USE ONLY

DANGER —

Any appliance is electrically live, even when the switch is off.

To reduce the risk of death or injury by electric shock:

1. **Unplug this appliance before cleaning.**
2. Do not place or store appliance where it can fall or be pulled into a tub or sink.
3. Do not use while bathing or in a shower.
4. Do not place in, or drop into water or other liquids.
5. Do not reach for an appliance that has fallen into water. **Unplug immediately.** For dry location use only. Do not expose to liquid, vapor or rain.
6. Except when charging, always unplug this appliance from electrical outlet immediately after using.

STOP. COMB. CHECK.

For best results, do as the professionals do: Comb hair often, and check clipping results as you comb. This way you avoid uneven sides, bangs, neckline, etc.

SHORTCUTS TO PERFECT FLATTOPS, CREW CUTS, ETC.

Always cut from the back of the neck to the crown, using the longest comb setting.

Hold the comb attachment flat against the head and slowly move the clipper up through the hair. Use the same technique for the sides, cutting from the bottom to the upper side of the head.

For the front to the crown, cut the hair against the direction in which it grows. Then even it up with the sides.



For a flattop, use the flat comb, not the comb attachment. Just cut hair on top of the head over flat comb (see below).



USER-MAINTENANCE INSTRUCTIONS

CARE OF YOUR CLIPPERS DETACHABLE BLADE SET

 
 
Your clipper is equipped with a detachable blade set for routine maintenance, cleaning and replacement.

To remove the blade: The front of the clipper should be facing you; push up under the blade with your thumb and the blade will pop out. (See Fig 1.)

To replace the blade: Make sure the taper control is set to the longest position and with the back of the clipper facing you, insert the bottom side (with screws) of the blade into the clipper and push down until it snaps into place. (See Fig 2.)

MAINTENANCE OF THE BLADE

Always apply oil to the blades before, during and after use. This will ensure maximum cutting performance. Hold clipper away from your body in a downward position and apply oil on the front and sides of the cutter blade. Wipe excess oil off with a soft, dry cloth.

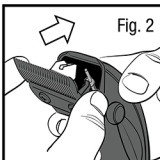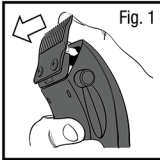

ADJUSTABLE TAPER LEVER

Just like professional clippers, the Conair taper lever is positioned at your thumb. You can hold the clipper in your hand and adjust the lever at the same time... while you're clipping.

This taper lever eliminates the need in some situations for a comb attachment because it lets you gradually adjust the closeness of the cut. For the closest cut and the shortest hair, push taper lever up as far as it will go to, level #1. To increase cutting length, slowly push lever down. If you push to the lowest position, level #5, it will leave hair about the same length as the short comb attachment. Because a different cutting edge is used in each setting, the taper lever lengthens the life of your blades.

Packed-in hair can slow down any clipper. To remove hair without removing the blades, do what the professionals do: Keeping the clipper on, quickly push the taper lever back and forth from "close" to "longer" cut a few times.

If you do this after every clipping, especially with heavy hair cutting, the blades should remain free of cut hair.

 
If clipper stops cutting and this action doesn't help, check the blades. If they've become dull, replace them. For new blades, send check or money order for \$6.50, which includes postage and handling (if \$10 minimum is met) to:

CONAIR CONSUMER PRODUCTS ULC
100 Conair Parkway
Woodbridge Ontario, L4H 0L2

NOTE: Never pull on the clipper cord. Never twist or wrap the cord around the clipper. Lay it flat with the cord coiled up when not in use.



STORAGE: When not in use, your clipper should be disconnected, allowed to cool and stored in a safe, dry location, out of reach of children.

Any other servicing should be performed by an authorized service representative. This appliance has no user serviceable parts. This appliance is for household use.

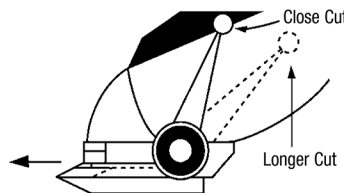

BATTERY DISPOSAL

  This appliance contains a lithium ion battery. To protect the environment, this appliance and its battery must be disposed of safely. At the end of its life, please take this appliance to a recycling center, where the internal rechargeable battery should be removed by a professional and recycled separately. For more information about the recycling of electrical and battery-operated appliances, please contact your local recycling or environmental protection office or your household waste disposal service. For specific enquiries regarding the replacement of batteries in this product, please contact our Conair Customer Care Line.

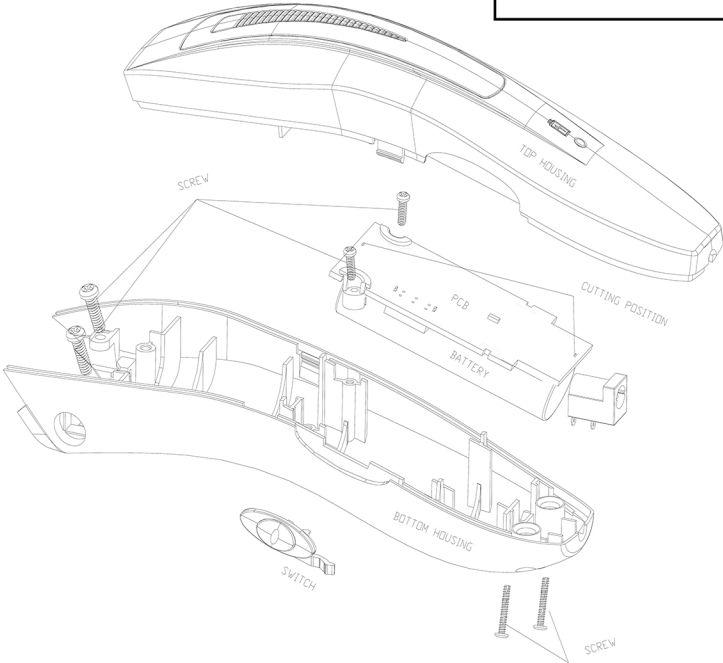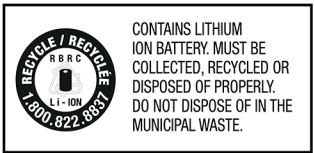

HC1900C CORDLESS CLIPPER



LIMITED FIVE-YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace, at our option, your appliance free of charge for 60 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service centre listed below, together with your sales slip and \$5.50 for postage and handling. In the absence of a receipt, the warranty period shall be 60 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 60-MONTH DURATION OF THIS WARRANTY.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

This warranty gives you specific legal rights, and you may also have other rights which vary from province to province.

SERVICE CENTRE

©2017 CONAIR CONSUMER PRODUCTS ULC
100 Conair Parkway
Woodbridge Ontario, L4H 0L2
For more information on any Conair product call: 1-855-926-6247
Visit our Web site: www.conaircanada.ca
Consumer Call Centre E-mail: Consumer_Canada@Conair.com
17CN029261

IB-15133

LITHIUM ION HAIRCUT KIT

CORDLESS CLIPPER



Have a Question?

Please do not return this product to the retailer.

Call Us First!

Our customer service and product experts are ready to answer

ALL your questions.

Please call our TOLL-FREE customer service number at: 1-855-926-6247

or visit us online at

www.conaircanada.ca

Model HC1900C

Instruction Booklet

CONAIR
FOR MEN

OPERATING INSTRUCTIONS

USER MANUAL

Before using the Class 2 Power Supply, read these instructions carefully.

Rated input voltage: 100–240V AC, 50/60Hz, 0.2A

Rated output: 4.5VDC, 600mA

OPERATION

1. For dry location use only. Do not expose to water.
2. When not in use, unplug unit completely.
3. Unit will become warm during operation.

CAUTION

1. Dry location use only. Do not expose to liquid, vapor or rain.
2. Ensure jack is plugged into the trimmer unit before plugging the adapter into the outlet.
3. Do not operate any appliance that has a damaged output cord or housing.
4. Always unplug the unit before cleaning or when not in use.
5. This power unit is intended to be correctly oriented in a vertical or floor-mount position.
6. Be sure voltage is in correct position before plugging in.

FEATURES

- Cordless operational clipper for total flexibility and control.
- Lithium-ion technology with lightweight DC motor for powerful cutting action and sustained power performance.
- Precision-engineered, high-grade hardened steel blades with unique, super-sharp cutting angle for smooth, effortless cutting.
- Lightweight for easy handling during use.
- Taper control for custom settings.
- 6-hour full charge for approximately 120 minutes of use.
- 3-hour charge for approximately 75 minutes of run time.
- 15-minute quick charge for instant power.

Also included are 10 comb attachments for different hair lengths (including left and right ear taper combs), barber scissors, a barber comb with straight teeth, a full-length barber cape, styling clip and a deluxe case for easy storage. It also comes with lubricating oil, a cleaning brush and a blade guard for easy maintenance and protection of the clipper blades.

INSTRUCTIONS FOR USE

CHARGING THE APPLIANCE IMPORTANT

Use only the adapter supplied with this appliance. This clipper is easy to use, but before you do anything you must take your time to charge the unit for 6 hours before its first use. Even if you want to use it plugged in straight from an outlet, this initial supercharge ensures optimum power performance to give smooth, fast cutting every time. **Maximum battery capacity will be reached only after 3 charging/discharging cycles.** A full charge will provide approximately 120 minutes of use. When the clipper is about to run out of power, a 15-minute quick charge will provide approximately 5 minutes of use.

The red charging LED indicator light on your new tool will flash when correctly connected to the mains power, and will continuously flash until the battery has fully charged.

When the battery is fully charged, the LED indicator light will stop flashing, but remain on.

When the clipper is running low on charge, the LED indicator light will flash, warning you there is approximately 3 minutes left of battery use remaining.

If the charging light suddenly starts to flash rapidly (more than 4 flashes per second) then the appliance is faulty. If this happens then please stop charging and remove the adaptor

from the mains and contact our customer care centre for further advice.

 
CORDLESS OPERATION

- Insert the adapter into the base of the appliance, plug into a suitable outlet.
- When the battery is fully charged, the LED indicator light will stop flashing, but remain on.

OILING INSTRUCTIONS

IMPORTANT! It is highly recommended before each use to oil the blades with the oil provided. This ensures optimum cutting performance. For the first use, you will need to use the oil supplied with the product. Unscrew the cap and cut off the very end of the plastic tube with a pair of scissors to release the oil.

To oil the blades, ensure that the unit is switched on. Gently squeeze the oil tube and apply 2 drops of oil to the blades (see FIG. 1, 2, and 3). Leave the unit on for a few seconds to allow the oil to thoroughly spread the length of the blades. Switch off the unit and remove any excess oil by gently dabbing with a cloth.

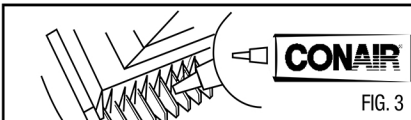

Be careful not to use too much oil and don't oil your clipper more than necessary, as this could damage the motor. (Never attempt to oil the motor bearing, as it is permanently lubricated.) **KEEP OIL OUT OF REACH OF CHILDREN.**

PRESERVING THE BATTERIES

In order to maintain the optimum capacity of the rechargeable batteries, the appliance has to be fully discharged approximately every 6 months. Then recharge the appliance to full capacity, again for 6 hours.

THE CONAIR GUIDE TO CUTTING HAIR AT HOME

Before you start:

 
1. Inspect your clipper. Make sure it's free of hair and dirt, is properly oiled and running smoothly.
2. Place a towel around the neck of the person whose hair is to be cut.
3. Seat the person so that his or her head is at your eye level. This gives you greater visibility and control.
4. First, comb hair until it's tangle free. Then hold clipper in a comfortable grip. Now you're ready to cut.

MEDIUM TO LONG CUT


To begin, cut only a small amount of hair until you become used to the length each attachment leaves the hair. Try the longest attachment on the clipper first. If you want a shorter cut, you can then use shorter combs.

- Short comb attachment (number 1) cuts hair to 1/8" (3mm).
- Medium-Short comb attachment (number 2) cuts hair to 1/4" (6mm).
- Medium-Long comb attachment (number 3) cuts hair to 3/8" (9.5mm).
- Long comb attachment (number 4) cuts hair to 1/2" (12.5mm).
- Long comb attachment (number 5) cuts hair to 5/8" (16mm).
- Long comb attachment (number 6) cuts hair to 3/4" (19mm).
- Long comb attachment (number 7) cuts hair to 7/8" (22mm).

- Long comb attachment (number 8) cuts hair to 1" (25mm).
- Left ear comb attachment lightly tapers over left ear.
- Right ear comb attachment lightly tapers over right ear.

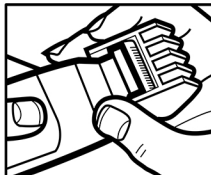

 Attach combs by holding them teeth up, then snapping onto the bottom of the clipper blade.

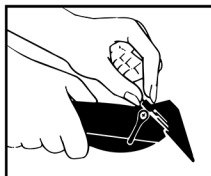

To remove comb attachments, place index finger and thumb as illustrated; then pull out and up.

NOTE: Never push or shove the clipper through the hair to make it move more quickly. Professional experience shows that the clipper works most efficiently when it cuts through the hair at its own speed.

To begin cutting hair:



1. The hair should be combed in its natural direction.
2. Using the largest comb attachment, trim sides from the bottom upward. Hold clipper lightly against the hair with teeth of the comb attachment pointing upward, yet flat against the head. Gradually lift the clipper upward and outward through the hair, trimming just a little at a time.

Repeat around sides and back of head.

If you want hair to be even shorter:

- A) Apply more pressure to the head with the comb attachment that is in place. This takes a little practice, of course. **OR**
- B) Just switch to a shorter comb attachment.