

HOW TO CHANGE CURLING WANDS

- IMPORTANT!** The element of the appliance will become very hot when plugged in and switched on. Before fixing or removing any attachments, ensure the appliance is cool, switched off and is unplugged.
- Turn locking dial to the right to unlock.
- Pull attachment straight off the handle.
- Push other attachment into power handle. Barrel insulator should securely connect into locking dial on power handle.
- Turn locking dial to the left to secure attachment in place.

WARNING: This unit will get very hot within a few seconds and should not be placed in contact with the scalp, face, ears or neck during use.

WARNING: When the High setting is chosen, the curling wand will have an extremely hot barrel. Always do a test curl before using the curling wand to ensure the proper setting for your hair type.

IMPORTANT

A heat-protective glove has been supplied to help protect your fingers from temporary contact with the barrel when wrapping the hair around the appliance.

Please note that the heat-protective glove is only designed to give initial contact protection. Discomfort will be caused by prolonged contact with the hot surface.

A bonus, heat-resistant storage pouch has been supplied. After using curling wand, unplug and store in pouch.

Never leave your curling wand on and unattended. However, should you fail to turn the wand off, it will shut itself off automatically within 60 minutes.

USER MAINTENANCE

 
Your curling wand is virtually maintenance free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the unit from the power source, allow to cool and wipe exterior with a cloth. If any abnormal condition occurs, unplug the unit, allow it to cool, and return it for repair to an authorized service representative only. No repairs should be attempted by the consumer.

CAUTION

NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the appliance. Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your appliance is easy to store. Allow appliance to cool, then simply store out of reach of children in a safe, dry location. Do not jerk or strain cord at plug connections. Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

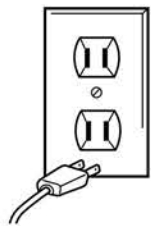

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

DANGER — Any appliance is electrically live even when the switch is off. To reduce the risk of death by electric shock:

- Always unplug appliance immediately after using.**
- Do not use while bathing or in the shower.
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Do not place in, or drop into water or other liquids.
- If an appliance falls into water, unplug it immediately. **Do not reach into the water.**

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:

- This appliance should never be left unattended when plugged in.**
- This appliance should not be used by, on or near children or individuals with certain disabilities.
- Use this appliance only for its intended use, as described in this manual. Do not use

attachments not recommended by the manufacturer.

4. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service center for examination and repair.**

5. **Keep the cord away from heated surfaces. Do not pull, twist, or wrap line cord around appliance.**

6. Never use while sleeping or drowsy.

7. Never drop or insert any object into any opening or hose.

8. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

9. Unit is hot when in use. Do not let heated surfaces touch eyes or skin.

10. **Do not place the heated unit directly on any surface while it is hot or plugged in. Use the counter rest provided.**

11. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of hair, lint and other debris.

12. Do not use an extension cord with this appliance.

13. Do not touch hot surfaces of the appliance. Use handles or knobs.

14. Do not attempt to touch the housing of your appliance near the barrel, as it is hot when in use.

15. Do not operate with a voltage converter.

16. This appliance is not a toy. Keep away from children.

SAVE THESE INSTRUCTIONS OPERATING INSTRUCTIONS

Use on Alternating Current (60 hertz) only. This unit is designed to be operated at 125V AC.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

NOTE: Do not use this styling appliance on hair extensions.

ROSE GOLD TITANIUM CERAMIC EASY-GLIDE BARREL

The barrel of your new curling wand has a Rose Gold Titanium Ceramic Technology, easy-glide surface, the newest technology. This means it's not only simpler to clean off styling product residue, etc., after each use, but you'll find that hair glides easily over the surface of the barrel as you're curling. The Rose Gold Titanium Ceramic surface also helps smooth down flyaways. It evenly distributes heat so that the style you create has a salon-perfect, silky smooth, shining finish. Hair also slips right off the barrel after it's curled.

The new Rose Gold Titanium Ceramic Technology is a pleasure to work with and makes styling your hair easier and the results more professional.

USING INSTANT HEAT, THE HIGH HEAT TEMPERATURE SETTINGS & UNIFORM HEAT RECOVERY SYSTEM

This curling wand maintains constant temperature during use for precision styling.

This Instant Heat technology has high heat temperature settings, with a temperature range that's gentle and safe for every type of hair, from the finest to the curliest and most resistant, and helps you create the look you want. Conair's professional salon standards of engineering provide you with a uniform and improved heat recovery system that maintains the wand at constant temperatures. There is a constant surge of power to ensure that heat is continuously and quickly delivered for optimal styling results, unlike other units, which lose heat during use. This provides consistent styling power so that every strand of your hair is set with the same level of heat and comes out the same way for a perfect finish.

The wand's unique 5 ultra-high heat temperature settings and Instant Heat technology provide styling versatility for all hair types. If you have fine hair, a low temperature will provide the best results. If you have thick, wavy or hard-to-curl hair, keep the heat setting on high. You can vary the wand's temperature according to your particular need!

LIMITED FIVE-YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace, at our option, your appliance free of charge for 60 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service centre listed below together with your sales slip and \$7.50 for postage and handling. In the absence of a receipt, the warranty period shall be 60 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 60 MONTH DURATION OF THIS WARRANTY.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.


This warranty gives you specific legal rights, and you may also have other rights which vary from province to province.

Temperature Setting Guide

HAIR TYPE	TEMPERATURE CONTROL
Fragile/Fine Hair	POWER/LOW 293°F (145°C)
Thin Hair	MEDIUM/2 320°F (160°C)
Medium/Normal Hair	MEDIUM-HIGH/3 347°F (175°C)
Wavy/Curly Hair	HIGH/4 374°F (190°C)
Coarse/Thick Hair	MAXIMUM/5 400°F (205°C)

SWITCH FUNCTION

 To turn on the unit, simply press the I/O button. The blue LED will blink. Once the default temperature has been reached, it turns solid.

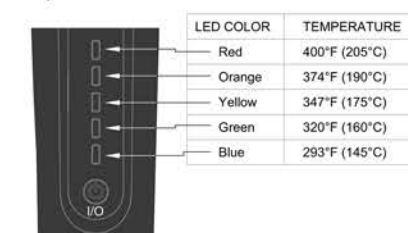

To select your temperature, press the I/O button again. Press and release button until you reach the temperature you desire. As the temperature increases to the next setting, the LED lights will blink as follows:

○ Temperature setting is set to 293°F (145°C)
○ The blue LED light blinks, then turns solid when the temperature has been reached

○ Temperature setting is set to 320°F (160°C)
○ The blue and green LED lights blink, then both turn solid when the temperature has been reached

○ Temperature setting is set to 347°F (175°C)
○ The blue, green and yellow LED lights blink, then all turn solid when the temperature has been reached

○ Temperature setting is set to 374°F (190°C)
○ The blue, green, yellow and orange LED lights blink, then all turn solid when the temperature has been reached

 
○ Temperature setting is set to 400°F (205°C)
○ The blue, green, yellow, orange and red LED lights blink, then all turn solid when the temperature has been reached

To turn off the unit, press and hold the I/O button for 1-2 seconds, and the curling iron will power off. All LED lights will turn off.

BEAUTY TIPS:

To achieve the looks you love and for more great InfnitiPRO by Conair® products, visit infniti.conair.com

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

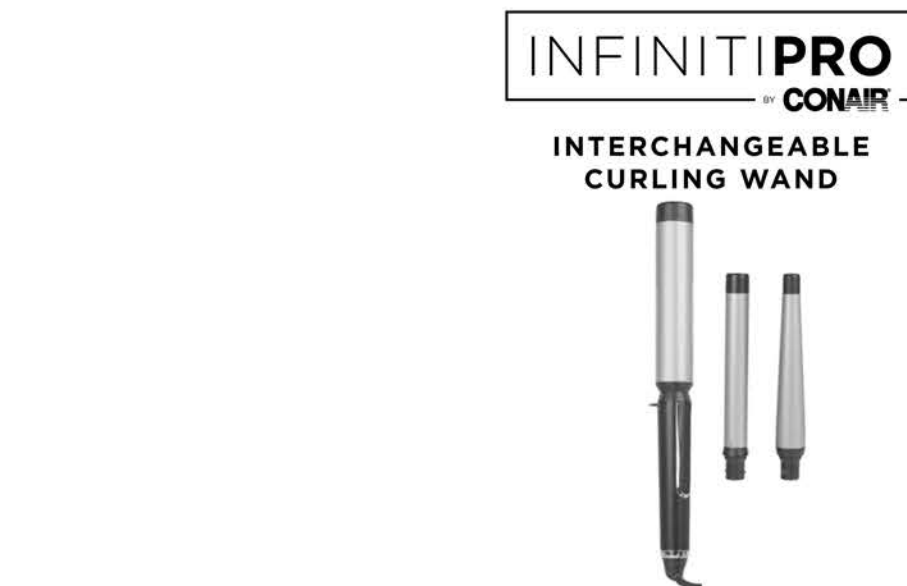

Have a Question?

Please do not return this product to the retailer.

Call Us First!

Our customer service and product experts are ready to answer ALL your questions.

Please call our TOLL-FREE customer service number at: 1-855-926-6247 or visit us online at www.conaircanada.ca

Instruction & Styling Guide Model CB700C

SERVICE CENTRE:
CONAIR CONSUMER PRODUCTS ULC
100 Conair Parkway
Woodbridge Ontario, L4H 0L2
©2018 CONAIR CONSUMER PRODUCTS ULC

For more information on any Conair product call:
1-855-926-6247
Visit our Web site: www.conaircanada.ca
Consumer Call Centre E-mail:
Consumer_Canada@Conair.com

18CN033681

IB-15966



GETTING TO KNOW YOUR CURLING WAND

GETTING STARTED

Plug the wand into an electrical outlet. Turn on unit. The Power/Low 293°F setting will become illuminated. Allow unit to heat up for 30 seconds.

WARNING: The curling wand's barrel will get very hot within a few seconds and should not be placed in contact with the skin after the curling wand has been turned on.

TO CURL HAIR

Hair should be clean and completely dry before using the curling wand. For best results, use a light styling product before blow-drying hair.



- Take a 1-in. wide section of hair. Starting where you would like the curl to begin, wind the section of hair around the barrel toward the cool tip. If using the tapered attachment, start winding hair at the thicker portion of the barrel.
- Hold the ends of the hair in place at the cool tip for 5 to 8 seconds, depending on hair type, and then release. No clamp allows you to easily curl hair without kinks. For tighter, bouncier curls, roll less hair. For loose, free-flowing curls, roll more hair. To set the curl, do not comb or brush hair until it cools.
- Repeat process on additional sections of hair until you achieve the hairstyle you desire.

Some experience is necessary when learning to use this curling wand. After using it several times, you will learn the ideal way to curl and style your hair.