


GET TO KNOW YOUR 2-in-1 STYLER

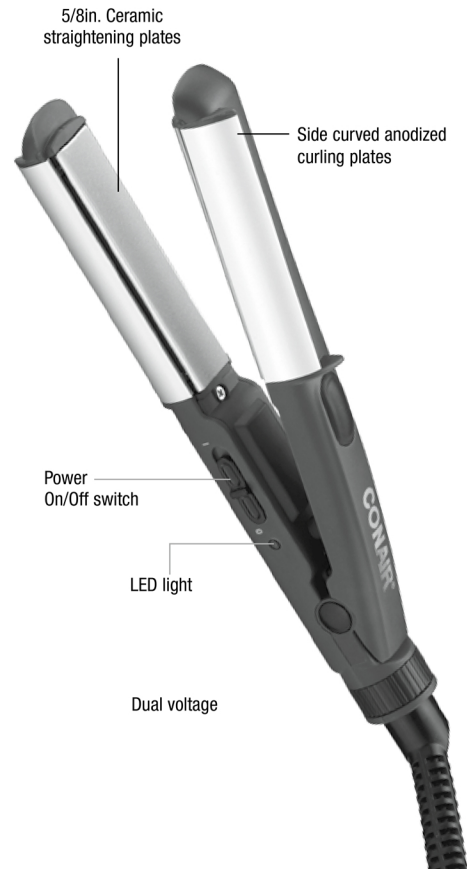

CURL OR STRAIGHTEN WITH 1 TOOL



IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

DANGER

- Any appliance is electrically live even when the switch is off. To reduce the risk of death by electric shock:

1. Always unplug appliance immediately after using.
2. Do not use while bathing or in the shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into, water or other liquid.
5. If an appliance falls into water, unplug it immediately. Do not reach into the water.

WARNING

- To reduce the risk of burns, electrocution, fire, or injury to persons:

1. This appliance should never be left unattended when plugged in.
2. Do not pull, twist, or wrap line cord around appliance.
3. This appliance should not be used by, on or near children or individuals with certain disabilities.

4. Use this appliance only for its intended use, as described in this manual. Do not use attachments not recommended by the manufacturer.

5. Never operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service centre for examination and repair.

6. Keep the cord away from heated surfaces.
7. Never use while sleeping.
8. Never drop or insert any object into any opening or hose.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Unit is hot when in use. Do not let heated surfaces touch eyes or bare skin.
11. Do not place the heated unit directly on any surface while it is hot or plugged in.
12. Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint and other debris.
13. Do not use an extension cord with this appliance.
14. Do not touch hot surfaces of the appliance. Use handles or knobs.
15. Do not attempt to touch the housing of your appliance near the straightening plates, as it is hot when in use.
16. Before plugging in, read the information about dual voltage contained in the Operating Instructions section of this booklet.
17. Do not use with a voltage converter.

USER MAINTENANCE

Your You Style 2-in-1 Ceramic Styler is virtually maintenance-free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the unit from the power source, allow to cool and wipe exterior with a cloth. If any abnormal condition occurs, unplug the unit, allow it to cool, and return it for repair to an authorized service centre only. No repairs should be attempted by the consumer.

CAUTION

NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the appliance. Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your appliance is easy to store. Allow appliance to cool, then simply store out of reach of children in a safe, dry location. Do not jerk or strain cord at plug connections. Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

SAVE THESE INSTRUCTIONS OPERATING INSTRUCTIONS

This 2-in-1 styling iron is not intended for household use. Use on Alternating Current (50/60 hertz) only. This unit is designed to be operated at 120-240 volts AC.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

DUAL VOLTAGE

This styling iron will automatically adjust to the proper voltage. Use an adapter plug with correct configuration prior to use in outlet.


TO STYLE HAIR

Hair should be clean and completely dry before using the 2-in-1 styling iron. Plug the iron into an electrical outlet. Turn on unit. Your 2-in-1 styler will heat up quickly.

To turn "O" (OFF), slide switch to "O" (OFF) position (light will go off). Never leave your 2-in-1 styling iron on and unattended.

WARNING:
IF YOU THINK THE
POWER IS OFF WHEN
THE SWITCH IS OFF,
YOU'RE WRONG.

KEEP AWAY FROM WATER

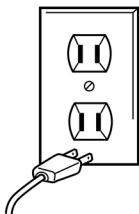

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES

WARNING: The 2-in-1 styling iron's ceramic-coated plates will get very hot within a few seconds. The side curling plates can become warm and should not be placed in contact with the skin after the 2-in-1 styling iron has been turned on.

GETTING STARTED

The styler's high-heat temperature setting and Instant Heat technology provide styling versatility for all hair types.

STRAIGHTENING

Start with a hair section that is 1in. wide and no more than 1/2in., thick. Open the styler and place a hair section between the two hot plates, close to the scalp. Trap hair between the plates by firmly squeezing the handles together. While maintaining the tension, slowly pull the unit down along the hair section toward the end of hair. For best results, use a light styling product before blow-drying hair. At the end of hair section, release the pressure on the handle and allow the hair section to slide out. Repeat process on additional sections of hair until you achieve the hair style you desire. It may be necessary to repeat the process on certain areas, depending on the texture of your hair.

LIMITED TWO-YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service centre listed below, together with your purchase receipt and \$5.50 for postage and handling. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

This warranty gives you specific legal rights, and you may also have other rights, which vary from province to province.

SERVICE CENTRE

CONAIR CONSUMER PRODUCTS ULC
100 Conair Parkway,
Woodbridge, Ont. L4H 0L2
Printed in China
1-855-926-6247
Visit our Web site: www.conaircanada.ca
Consumer Call Centre E-mail:
Consumer_Canada@Conair.com
©2015 CONAIR CONSUMER PRODUCTS ULC
tal.2017.04.01

15CN148042

IB-13579

you[™]
mini
STYLER

Have a Question?

Please do not return this product to the retailer.

Call Us First!

Our customer service and product experts are ready to answer ALL your questions. Please call our TOLL-FREE customer service number at:
1-855-926-6247

Or visit us online at www.conaircanada.ca

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.



CONAIR[®]

Instruction & Styling Guide

CS69XRNC

STYLING WITH THE NEW CERAMIC-COATED PLATES

Your new 2-in-1 styling tool has ceramic-coated straightening plates, the latest in technological advances. The ceramic technology produces the ultimate in healthy, shiny, silky hair. The ceramic surface also helps smooth down flyaways and frizzies. As you smooth your hair, heat is evenly distributed so that the style you create has a salon-perfect, silky smooth finish. Hair also slips right through the plates after it's straightened.

The new ceramic technology is a pleasure to work with, makes styling your hair easier and provides professional salon results at home.

You'll find not only that hair glides easily over the surface of the plates as you're straightening, but it's simpler to clean styling product residue, etc. off after each use.



- Slowly glide the You Style unit along the length of the hair from root to tip in an outward motion.
- Release the You Style unit from the hair.

- To ensure the curl sits neatly in place, take the end of the section you have just curled and turn 180° in the direction of the curl.

- Repeat as necessary.

Some experience is necessary when learning to use this 2-in-1 styling tool. After using the styler several times, you will learn the ideal way to straighten and style your hair.

Your new Mini You[™] Style is perfect for travel and for touch ups on the go.

