

IMPORTANT

A heat-protective glove has been supplied to help protect your fingers from temporary contact with the barrel when wrapping the hair around the appliance.

Please note that the heat-protective glove is only designed to give initial contact protection. Discomfort will be caused by prolonged contact with the hot surface.

Never leave your appliance on and unattended. However, should you fail to turn the curling wand off, it will shut itself off automatically within 60 minutes at 60 Hz, 72 minutes at 50 Hz.

USER MAINTENANCE

Your curling wand is virtually maintenance free. No lubrication is needed. If cleaning becomes necessary, disconnect the curling wand from the power source, allow it to cool and wipe exterior with a cloth. If any abnormal condition occurs, unplug the curling wand, allow it to cool and return it for repair to an authorized service center only. No repairs should be attempted by the consumer.

CAUTION

NEVER allow the power supply cord to be pulled or twisted. Never wrap the cord around the curling wand. Damage will occur at the high flex point of entry into the curling wand, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.


STORAGE

When not in use, your appliance should be disconnected, allowed to cool and stored in a safe, dry location, out of reach of children. Do not jerk or strain cord at plug connections. Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

WARNING: The instant-heat barrel will get very hot within a few seconds and should not come into contact with skin after the curling wand is turned on. When the high setting is chosen, the curling wand will have an extremely hot barrel. Always do a test curl before using the wand to ensure the proper setting for your hair type.

**WARNING:
IF YOU THINK
THE POWER IS OFF
WHEN THE SWITCH
IS OFF,
YOU'RE WRONG.**

KEEP AWAY FROM WATER

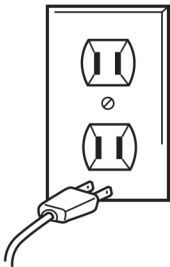

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

**ALWAYS UNPLUG
SMALL APPLIANCES**

LIMITED TWO-YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed on back, together with your purchase receipt and \$7.50 for postage and handling. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

This warranty gives you specific legal rights, and you may also have other rights, which vary from province to province.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

DANGER — Any appliance is electrically live even when the switch is off. To reduce the risk of death or injury by electric shock:

1. **Always unplug appliance immediately after use.**
2. Do not use while bathing or in the shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into water or other liquids.
5. If an appliance falls into water, unplug it immediately. **Do not reach into the water.**

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:

1. **This appliance should never be left unattended when plugged in.**
2. **Do not pull, twist, or wrap line cord around appliance.**

3. Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
4. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
5. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service center for examination and repair.**

6. Keep the cord away from heated surfaces.
7. Never use while sleeping.
8. Never drop or insert any object into any opening or hose.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Unit is hot when in use. Do not let heated surfaces touch eyes or skin.
11. **Do not place the heated unit directly on any surface while it is hot or plugged in. Use built-in counter rest.**
12. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of hair, lint and other debris.
13. Do not use an extension cord to operate appliance.

14. Do not touch hot surfaces of the appliance. Use handles or knobs.
15. Do not attempt to touch the housing of your appliance near the barrel, as it is hot when in use.
16. Do not use with a voltage converter.
17. Before plugging in, read the information about dual voltage contained in the Operating Instructions section of this manual.
18. This appliance is not a toy. Keep away from children.

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

This curling appliance is intended for use on Alternating Current (50/60 hertz) only. This unit is designed to be operated at 125V/250V AC.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

NOTE: DO NOT USE THIS STYLING APPLIANCE ON HAIR EXTENSIONS.

DUAL VOLTAGE

This curling appliance will automatically adjust to the proper voltage. Use an adapter plug with correct configuration prior to use in outlet.

STYLING WITH DOUBLE CERAMIC TECHNOLOGY CURLING WANDS

The barrel of your new curling wand has an Easy-Glide™ double ceramic-coated surface, the newest technology.

This double ceramic-coated surface helps to smooth down flyaways. As you wind each strand around the barrel, it evenly distributes heat so that the style you create has a salon-perfect, silky smooth, shiny finish. Hair glides easily over the surface of the barrel. Any residue from styling products that builds up on the ceramic-coated barrel can be easily cleaned.

USING INSTANT HEAT, THE 30 VARIABLE TEMPERATURE SETTINGS & UNIFORM HEAT RECOVERY SYSTEM

This curling wand features Conair's Instant Heat technology. Within this Instant Heat technology there are 30 variable temperature settings. There is a temperature range that is gentle and safe for every type of hair, from the finest to the curliest and most resistant, and helps you create the look you want. You can vary the wand's temperature according to your particular need!

Temperature Setting Guide	
Temp. Control	Hair Type
Low 1–5	Fragile/Fine Hair
Medium 6–10	Thin Hair
Med/High 11–15	Medium/Normal Hair
High 16–20	Wavy/Curly Hair
Maximum 21–30	Coarse/Thick Hair
Turbo Heat®	Up to 15°C/27°F burst of heat for difficult styling spots

Conair's professional salon standards of engineering provide you with a Uniform Heat Recovery System that maintains the wand at constant temperatures.

There is a constant surge of power to ensure that heat is continuously delivered for optimal styling results, unlike other units, which lose heat during use. This provides consistent styling power so that every strand of your hair is set with the same level of heat and comes out the same way for a perfect finish.


GETTING STARTED

Plug the curling wand cord into electrical outlet (125V/250V). Press Power I/O button. The unit will heat up very quickly. Red light will blink until it reaches desired temperature setting and then becomes solid.

To activate Turbo Heat®, press Turbo I/O button and green light will go on, increasing curling wand temperatures up to 15°C/27°F. Press Turbo I/O button again to turn off Turbo Heat®. The green light will turn red. To turn unit off, press Power I/O button again until red light goes out.

WARNING: The curling wand's barrel will get very hot within a few seconds and should not be placed in contact with the skin after the curling wand has been turned on.

GET TO KNOW YOUR CURLING WAND

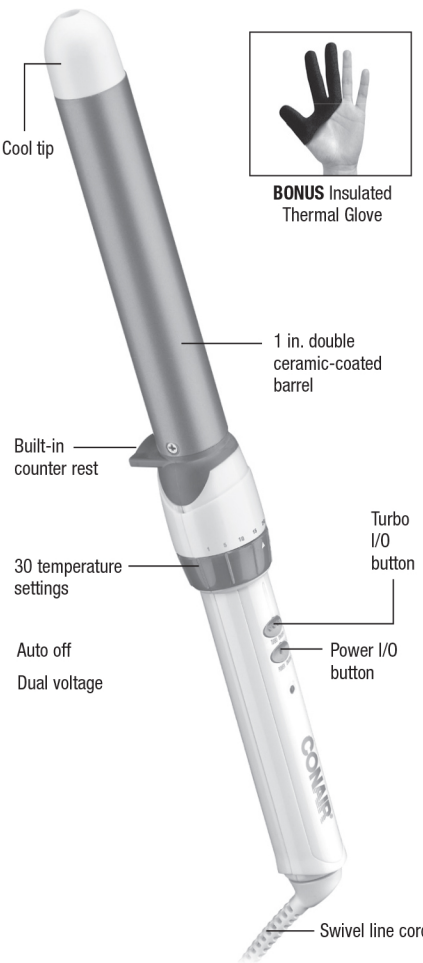

DOUBLE CERAMIC

1 IN. (25 MM) CURLING WAND



Have a Question?

Please do not return this product to the retailer.

Call Us First!

Our customer service and product experts are ready to answer ALL your questions.

Please call our TOLL-FREE customer service number at:
1-855-926-6247
or visit us online at
www.conaircanada.ca

Instructions & Styling Guide

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

CONAIR®

Instructions & Styling Guide

Model CD705GNC

TO CURL HAIR

Hair should be clean and completely dry before using the curling wand. Section dry hair evenly and comb each section before winding.

For best results, use a light styling product before blow-drying hair.

1. Take a 1-in. wide section of hair, starting 2 in. from the scalp.
2. Wind the section of hair around the barrel toward the cool tip.
3. Hold the ends of the hair in place at the cool tip for 5 to 8 seconds, depending on hair type, and then release. No clamp allows you to easily curl hair without kinks. For tighter, bouncier curls, roll more hair. For loose, free-flowing curls, roll less hair. To set the curl, do not comb or brush hair until it cools.
4. Repeat process on additional sections of hair until you achieve the hairstyle you desire.

Some experience is necessary when learning to use this curling wand. After using it several times, you will learn the ideal way to curl and style your hair.