


BATTERY REMOVAL INSTRUCTIONS

- Using a small Phillips screwdriver, remove the screw on the right handle of fabric defuzzer.
- Remove the right handle by hand.
- Now the battery is exposed so you can separate the wire connectors. Carefully hold the wires on each side of the connector and gently cut the wires. The connector will separate and the batteries can be removed from the inner housing.


Bring the battery to the nearest collection center for disposal or call the toll-free RBRC information line at 1-800-8-BATTERY. RBRC is a trademark of The Rechargeable Battery Recycling Corporation. DO NOT throw the batteries into the normal municipal waste system.

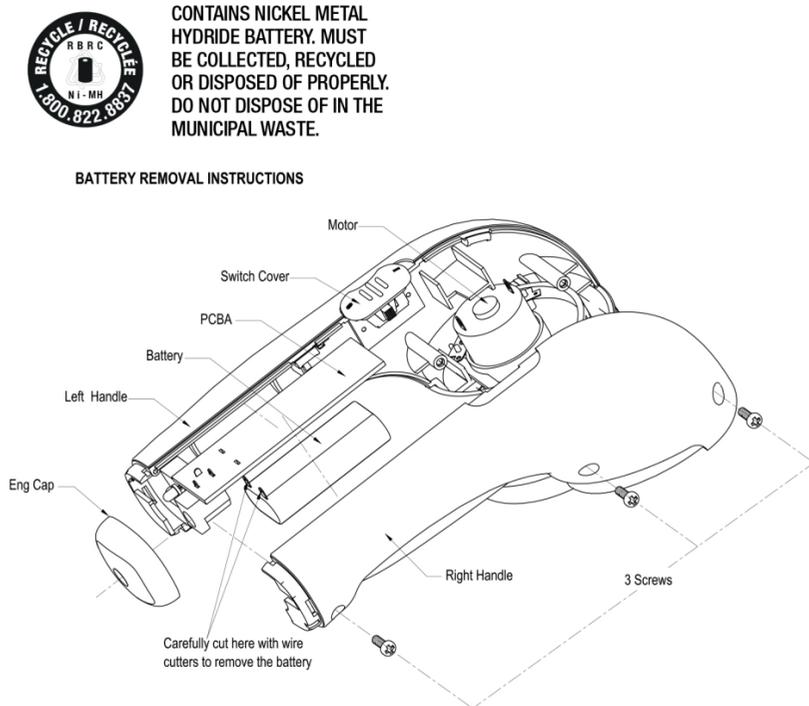

CONTAINS NICKEL METAL HYDRIDE BATTERY. MUST BE COLLECTED, RECYCLED OR DISPOSED OF PROPERLY. DO NOT DISPOSE OF IN THE MUNICIPAL WASTE.

BATTERY REMOVAL INSTRUCTIONS

GETTING TO KNOW YOUR FABRIC DEFUZZER

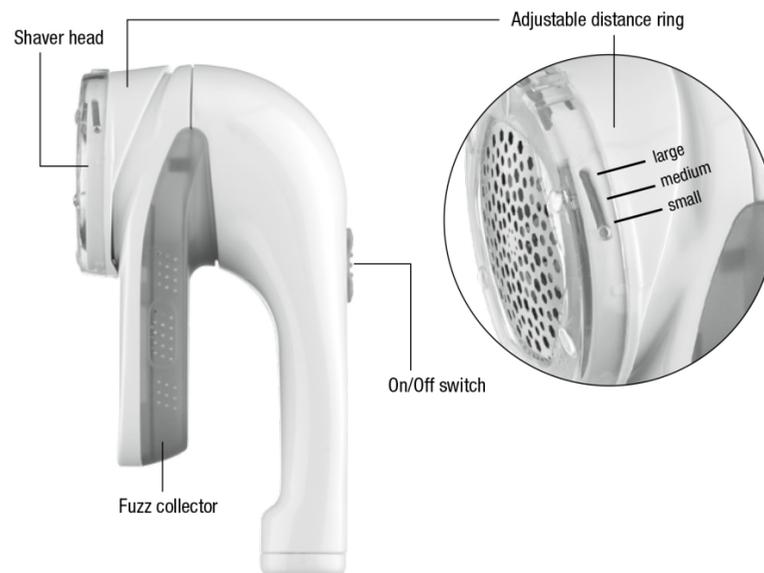

LIMITED ONE YEAR WARRANTY

Conair will repair or replace, at our option, your appliance free of charge for 12 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service centre below together with your sales slip and \$7.50 for postage and handling.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 12 MONTH DURATION OF THIS WARRANTY.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

This warranty gives you specific legal rights, and you may also have other rights which vary from province to province.

©2017 CONAIR CONSUMER PRODUCTS ULC

SERVICE CENTRE:
Conair Consumer Products ULC
100 Conair Parkway,
Woodbridge, ON L4H 0L2
1-855-926-6247
www.conaircanada.ca
Consumer Call Centre E-mail:
Consumer_Canada@Conair.com

17CN025240

IB-14744

EXTREME FABRIC DEFUZZER

Removes FUZZ, LINT & PILLING



HAVE A QUESTION?

Please do not return this product to the retailer.

CALL US FIRST!

Our customer service and product experts are ready to answer ALL your questions. Please call our TOLL-FREE customer service number at :

1-855-926-6247

Or visit us online at

www.conaircanada.ca

Instructions for Use
Model CLS2RC

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

IMPORTANT SAFETY INSTRUCTIONS

THE APPLIANCE MUST NOT COME INTO CONTACT WITH WATER.

DO NOT USE ON DAMP TEXTILES!

The fabric defuzzer might damage structured textiles or very soft materials such as Angora wool. Always test on an area that is not visible on the item you want to treat. In testing, set the distance ring to the highest level.

OPERATING INSTRUCTIONS

- Put the item you want to treat on an even surface.
- Turn the distance ring to the appropriate position or remove the ring entirely depending on the distance required.
- Switch the unit "I" (ON).
- Without applying pressure, run the shaver head lightly over the parts you wish to remove the fuzz from. Fuzz will accumulate in the fuzz collector.
- After use, switch the unit "O" (OFF).

IMPORTANT: Empty the fuzz collector regularly and before it becomes overfilled, which can cause the unit to slow down or stop. If

unit slows or stops, check and empty fuzz collector.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

DANGER — Any appliance is electrically live, even when the switch is off. To reduce the risk of death or injury by electric shock:

- Unplug this appliance before cleaning.
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Do not use while bathing or in a shower.
- Do not place in, or drop into water or other liquid.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Except when charging, always unplug this appliance from electrical outlet immediately after using.
- Never operate the adaptor if the specification is out of the rating.

DO NOT REACH INTO THE WATER

WARNING — To reduce the risk of burns, electric shock, fire, or injury to persons:

- This appliance should never be left unattended when plugged in. Do not pull, twist, or wrap line cord around appliance.
- This appliance should not be used by, on, or near children or individuals with certain disabilities.
- Use this appliance only for its intended purpose as described in this manual. Do not use attachments not recommended by the manufacturer. Do not use an extension cord to operate this appliance.
- Never operate this appliance if it has a damaged cord or plug, or if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for examination and repair.
- Keep the cord away from heated surfaces.
- Never drop or insert any object into any opening on this appliance.
- Do not place appliance on any surface while it is operating.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Never operate the appliance with the air openings blocked or while on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
- Always attach plug to appliance first, then

to outlet. To disconnect, turn all controls to "OFF" then remove plug from outlet.

- Avoid skin contact with moving blades.
- Do not short the polarity (cordless use only), ensure jack is plugged into the unit before plugged the adaptor into outlet.
- This power unit is intended to be correctly oriented in vertical or floor mount position.
- Be sure voltage is in correct voltage before plugging in.
- For connection to a supply not in U.S.A, use an attachment plug adapter of the proper configuration for the power outlet.
- This unit complies with Canadian ICES-003.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

SAVE THESE INSTRUCTIONS


REMOVING AND FITTING THE DISTANCE RING



TO REMOVE: Grasp both sides of the ring and pull it off the unit in the direction of the arrow.

TO FIT: Push the distance ring onto the unit so that the recess on the distance ring engages the lug on the body of the shaver. This ensures that the distance ring does not twist when you adjust it.

EMPTYING THE FUZZ COLLECTOR

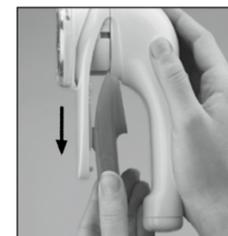

Slide the fuzz collector downward and out of the unit.

Empty the collector and slide it straight into the unit until it engages audibly.

CLEANING THE FABRIC DEFUZZER AND SHAVER HEAD



- Remove the distance ring and turn the shaver head counterclockwise to remove it.



- Brush out residual fuzz with any small cleaning brush. **CAUTION:** Blades are extremely sharp and can be damaged easily.

- Reattach the shaver head and fit the distance ring.

If necessary, wipe off the unit casing with a slightly dampened cloth.

INSTRUCTIONS FOR USE

CARE OF YOUR FABRIC DEFUZZER IMPORTANT : CHARGING

FIRST TIME USE

The fabric defuzzer is so easy to use, but before you do anything you must take your time to charge the unit for 16 hours before its first use. After the first charge a full charge will only take 16 hours. Maximum battery capacity will only be reached after 3 charging/discharging cycles.

Connect the power adaptor to the socket on the underside of the fabric defuzzer.

- Plug the power adaptor into a suitable electrical outlet.

REGULAR CHARGING

- A full charge will take 16 hours and will supply enough power for minimum 25 minutes continuous cordless use.
- In order to maintain the optimum capacity of the rechargeable batteries, the appliance should be recharged for 16 hours every 3 months approximately.

NI-MH BATTERIES

This unit has Nickel-Metal Hydride batteries. In an effort to protect the environment, these batteries should be removed and properly disposed of when the unit is no longer operating. To remove the battery block

for disposal or recovery, follow these instructions:

- First, unplug the fabric defuzzer. Remove the screws on the back.
- Open the fabric defuzzer and remove the batteries using wire cutters.
- To protect the environment, do not dispose of your batteries with your ordinary household waste. For more details on recovery of materials and waste treatment facilities, please contact the waste disposal services in your region.