USER MAINTENANCE INSTRUCTIONS

CLEARING FOR YOUR TRUE GLOW® MICRODERMABRASION UNIT

- 1. After each use, wipe the device with a damp cloth to remove any oils or lotions used during treatment. Be sure you keep the charging contacts on the Microdermabrasion Unit clean.
- 2. After each use, clean the device to prevent buildup of oils and lotions. The 2 pin contacts must be clean for the unit to charge properly.
- 3. Clean the attachment head and unit after each use for sanitation purposes by rinsing under warm. soapy water to help remove oil and lotion buildup. Clean the attachment head and unit after each use with rubbing alcohol or antibacterial soap. Wipe with a dry cloth and store unit in its box or in a clean,
- 4. Do not put unit in dishwasher for cleaning.

TROUBLE-**SHOOTING GUIDE**

THE MICRODERMABRASION UNIT IS NOT CHARGING.	Make sure the contacts on the unit and charging cable are clean. See User Maintenance Instructions for cleaning procedure.
NO WHITE FLASHING CHARGING LIGHT.	2. Make sure the unit is plugged in properly.
THE CHARGING	3. Check the outlet and make sure the power is

on. Most bathroom

outlets have a test and

reset button. Press the

You must hold the

than 1 second to turn

the outlet.

the unit off.

Make sure the

attachments are

snapped on properly

MICRODERMABRASION | ON/OFF button for more

reset button and recheck

LIGHT DOES NOT

CHANGE TO

HINIT WILL

UNIT OR

FALL OFF

DURING USE.

NOT TURN OFF.

ATTACHMENTS

MICRODERMABRASION

SOLID WHITE.

CONTAINS LITHIUM ION BATTERY. MUST BE COLLECTED, RECYCLED OR DISPOSED OF PROPERLY. DO NOT DISPOSE OF IN THE MUNICIPAL WASTE. **KEEP AWAY FROM WATER**

ALWAYS UNPLUG SMALL APPLIANCES

RBRC™ is a trademark of the Rechargeable Battery

The batteries are sealed inside the True Glow® Microdermabrasion Unit, so they cannot be easily Microdermabrasion Unit should be returned when

not expressly approved by Conair Corporation, the



BATTERY REMOVAL

1. Using a small Phillips-head screwdriver, remove the screws at the front of the unit. 2. Remove the control panel and cut the battery out. Bring the battery to the nearest collection center for proper disposal. DO NOT throw the battery into the general municipal waste system.

 
Recycling Corporation.

removed for recycling. The entire True Glow® recycling the batteries for this product.

CAUTION: Any changes or modifications manufacturer of this product and the party responsible for compliance, could void the user's authority to operate the equipment.

WARNING: IF YOU THINK THE **POWER IS OFF** WHEN THE SWITCH IS OFF, YOU'RE WRONG.

KEEP AWAY FROM WATER



Everyone knows that electricity and water are a dangerous combination. But did you know that an electrical appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

> **ALWAYS UNPLUG SMALL APPLIANCES**

SERVICE CENTRE:

Conair Consumer Products ULC 100 Conair Parkway Woodbridge, Ontario, L4H 0L2

1-855-926-6247 ©2020 Conair Consumer Products ULC

www.conaircanada.ca

Consumer Call Centre E-mail: Consumer_Canada@Conair.com

Printed in China

Model MD02C 20CN076756

IB-17116

OPERATING

Have a Question?

product to the retailer.

Call Us First!

Our customer service and product experts

are ready to answer ALL your questions.
Please call our TOLL-FREE customer

service number at 1-855-926-6247

or visit us online at

www.conaircanada.ca

ALL Models MD02C

INSTRUCTION GUIDE

Microdermabrasion beauty tool

- 1. Thoroughly cleanse and dry the skin.
- 3. Pull the skin taut with your free hand to allow the
- 4. Move device in an upward, fluid motion across

- 7. Clean the attachment head and unit after each use with rubbing alcohol or antibacterial soap. 8. Wait 6 to 7 days between treatments.

same area during treatment.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING THE MICRODERMABRASION UNIT

DANGER — Any appliance is electrically

WARNING — To reduce the risk of burns, electrocution, fire, injury or death to

- 1. Always unplug appliance from electrical outlet immediately after using (except when charging unit). Do not allow to be used as a toy.
- 2. Do not place or store appliance where it could fall or be pulled into a tub or sink.
- 3. Do not use appliance while bathing or in the shower. 4. Do not place appliance in, or drop into water or other liquids.
- 5. If appliance has fallen into water, do not reach for it. Unplug immediately.
- 6. Unplug this appliance before cleaning.
- 7. Do not operate the charger if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged or dropped into water. 8. Do not place or store the charging cable where it
- can fall or be pulled into a tub or sink. 9. Do not immerse charging cable in water or any
- other liquids 10. If charging cable falls into water or another liquid,
- unplug immediately. 12. Not for use by children.

- 13. Do not pull, twist or wrap the cord around the appliance.
- 14. Never drop or insert any object into any opening on the appliance. 15. THIS PRODUCT IS FOR HOUSEHOLD USE ONLY.
- 16. Do not leave appliance when plugged in. Unplug from outlet when not in use and before cleaning and 17. Do not unplug by pulling on cord. To unplug,
- grasp the plug, not the cord. 18. Do not handle plug or appliance with wet hands. 19. CAN ICES-3(B).

CAUTION –

- 1. Dry location use only. Do not expose to liquids, vapor, or rain.
- 2. Ensure jack is plugged into the unit before plugging the USB cable into the outlet. 3. Do not operate any appliance that has a damaged
- output cord or housing. 4. Always unplug the unit before cleaning or when not in use.
- 5. Be sure voltage is correct before plugging in. The rated input is 5.0V DC 0.20A.

The True Glow® Microdermabrasion Unit handle, charger and cable have no serviceable parts. If the charger cord is damaged, it must be unplugged and replaced. Call 1-855-926-6247 for instructions or to purchase replacement brush heads.

SAVE THESE INSTRUCTIONS

SENSITIVITY AND CAUTIONS SPECIAL CAUTIONS FOR DELICATE AREAS

The True Glow® Microdermabrasion Unit is intended to gently remove dirt and makeup from your pores without irritation, resulting in healthy-looking skin.

If you are under a doctor's care for any skin condition, or if you think you have very sensitive skin, please consult your physician before use.

We recommend starting on the LOW setting and slowly increasing speed, depending on how your skin reacts to treatment. If rash or irritation occurs, stop use.

We recommend not sharing the device.

If you experience any pain or discomfort during use, stop using and consult your physician.

TRUE GLOW® MICRODERMABRASION UNIT



USB CHARGING CABLE

FEATURES THREE SPEED OPTIONS

LIMITED ONE YEAR WARRANTY

(U.S. AND CANADA ONLY)

Conair will repair or replace (at our option) your unit

free of charge for 12 months from the date of

To obtain service under this warranty, return the

defective product to the service centre listed below,

In the absence of a purchase receipt, the warranty

period shall be 12 months from the date of

ANY IMPLIED WARRANTIES, OBLIGATIONS,

LIMITED TO THE IMPLIED WARRANTY OF

MERCHANTABILITY AND FITNESS FOR A

IN NO EVENT SHALL CONAIR BE LIABLE

FOR ANY SPECIAL, INCIDENTAL, OR

WRITTEN, LIMITED WARRANTY.

PARTICULAR PURPOSE, SHALL BE LIMITED IN

DURATION TO THE 12 MONTH DURATION OF THIS

CONSEQUENTIAL DAMAGES FOR BREACH OF THIS

OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED,

This warranty gives you specific legal rights, and you

may also have other rights, which vary from province

OR LIABILITIES, INCLUDING BUT NOT

purchase if the appliance is defective in

together with your purchase receipt.

workmanship or materials.

manufacture

to province.

The three speeds available on your True Glow® Microdermabrasion Unit allow you to customize your skincare routine to suit your individual needs.

ATTACHMENTS

FINE ATTACHMENT: For sensitive skin. **COARSE ATTACHMENT:** For deeper exfoliation. PORE ATTACHMENT: For blackhead extraction.

RECHARGEABLE

The True Glow® Microdermabrasion Unit is cordless and requires a full charge before use. After unit is fully charged, it can provide up to 35 minutes of use without recharging.

OPERATING PRECAUTIONS

There is a built-in, rechargeable Li-polymer battery. Do not throw into fire, apply heat, use or leave in a high-temperature environment CAUTION: Any changes or modifications not expressly approved by the Conair Corporation, the manufacturer of this product and the party responsible for compliance, could void the user's authority to operate the equipment

CHARGING THE MICRODERMABRASION UNIT

- 1. Before using the Microdermabrasion Unit for the first time, it must be fully charged for 2.5–3.5 hours. Plug the power cable into a wall outlet and plug the DC jack into the back of the unit. The white LED lights up, indicating that the unit is charging.
- 2. The charging indicator under the control panel will flash BRIGHT WHITE when charging. Once fully charged, the light will illuminate SOLID WHITE. Always check to ensure that the charging light illuminates when you plug the charging cable into the Microdermabrasion unit..
- 3. The WHITE light will start flashing for 5 seconds and then shut off when the unit reaches low battery capacity during operation.
- 4. The adapter may become warm while charging; this is normal operation
- 5. In order to maintain the optimum capacity of the rechargeable battery, the Microdermabrasion Unit should be given a full, 2.5–3.5-hour charge every 3 months.
- 6. Unplug the adapter from the wall and the cable when not in use. Do not unplug the adapter from the wall when it is still connected to the unit. This will cause the battery to discharge.

STARTING THE MICRODERMABRASION UNIT AND SELECTING THE SPEEDS

Press the ON/OFF button 1 second and it will start at LOW setting, 2 times for MEDIUM setting and 3 times for HIGH setting. The white indicator will illuminate with different brightness (Low: dark; Med: bright: High: more bright) indicating the setting on the control panel.

STOPPING THE MICRODERMABRASION UNIT At any time, the Microdermabrasion Unit can be


stopped by pressing and holding the ON/OFF button for more than 1 second.

ATTACHING AND REMOVING MICRODERMABRASION HEADS

To attach the different attachments, hold the unit and push in the attachment onto the post until it snaps in place. To remove attachment heads, simply pull attachment off of the unit.

It is recommended to clean attachment head and unit after each use. If not clean, performance could be affected. Change the filter if the suction strength is weak.

CUSTOMIZE YOUR TREATMENT AT HOME

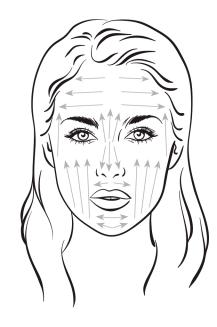

CONAIR

- **INSTRUCTIONS**
- 2. Test on a small area of the neck or forearm.
- device to smoothly glide over the skin.
- the skin. Do not hover in any spots.
- Do not use directly above or below eyes
- 5. Immediately after treatment, wash and dry the skin. 6. Apply a calming toner and recovery moisturizer.

NOTE: Do not do more than two passes over the