

GET TO KNOW YOUR CERAMIC FLAT IRON



*Actual plate size may vary

Due to continued product enhancements product image may differ slightly from actual product purchased.

USER MAINTENANCE

Your flat iron is virtually maintenance free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the unit from the power source, allow to cool and wipe exterior with a cloth. If any abnormal condition occurs, unplug the unit, allow it to cool, and return it for repair to an authorized service representative only. No repairs should be attempted by the consumer.

CAUTION

NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the appliance. Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.


STORAGE

When not in use, your appliance is easy to store. Allow appliance to cool, then store in a safe, dry location, out of reach of children. Do not jerk or strain cord at plug connections.

LOCKING BUTTON ON HINGE COVER ONLY FOR STORAGE.

**WARNING:
IF YOU THINK
THE POWER IS OFF
WHEN THE SWITCH
IS OFF,
YOU'RE WRONG.**

KEEP AWAY FROM WATER

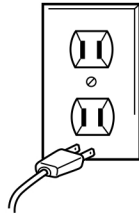

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES

LIMITED THREE YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace (at our option) your unit free of charge for 36 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service centre listed below, together with your purchase receipt.

In the absence of a purchase receipt, the warranty period shall be 36 months from the date

of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 36-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

This warranty gives you specific legal rights, and you may also have other rights, which vary from province to province.

SERVICE CENTRE:

Conair Consumer Products ULC
100 Conair Parkway,
Woodbridge, ON L4H 0L2
©2020 Conair Consumer Products ULC
www.conaircanada.ca
Consumer Call Centre E-mail :
Consumer_Canada@Conair.com
1-855-926-6247
20CN073278

IB-16818

INFINITI **PRO**
BY CONAIR

1 INCH (25 MM)
3X CERAMIC FLAT IRON



Have a Question?

Please do not return this product to the retailer.

Call Us First!

Our customer service and product experts are ready to answer ALL your questions.

Please call our TOLL-FREE customer service number at:

1-855-926-6247

or visit us online at
www.conaircanada.ca

Instruction & Styling Guide

Model CS929C

the handle and allow the hair to slide out.

4. Repeat the process on additional sections of hair until you achieve the hairstyle you desire. It may be necessary to repeat the process on certain areas, depending on the texture of your hair.

Some experience is necessary when learning to use this flat iron. After using the iron several times, you will learn the ideal way to straighten and style your hair.

GETTING STARTED

Plug the iron into an electrical outlet. Adjust temperature to desired level by VR knob. Iron will warm to default temperature. Set the desired temperature. To turn on unit, slide on/off switch to "I" position. Red light will blink until it reaches desired temperature setting and then becomes solid. To turn off, slide on/off switch to "O" position (lights will go off). Never leave your flat iron on and unattended. However, should you fail to turn the unit off, it will shut itself off automatically within 60 minutes.

WARNING: The flat iron's plates will get very hot within a few seconds and should not come into contact with the skin after the flat iron has been turned on.

TO STRAIGHTEN HAIR

Hair should be clean and completely dry before using the flat iron. For best results, use a light styling product before blow-drying hair.

1. Start with a hair section that is 1½ inches wide and no more than ½ inch thick.
2. Open the iron and place the hair section between the two hot plates, close to the scalp. Trap hair between the plates by firmly squeezing the handles together.
3. While maintaining the tension, slowly pull the unit down along the hair section toward the ends. At the ends, release the pressure on

17. Do not use with a voltage converter.

SAVE THESE INSTRUCTIONS

You will be pleased by the extreme softness of the new 3X ceramic coated plates. This ceramic coating will give your hair incomparable shine and silkness.

Please carefully read the instructions for use below before using the appliance.

PRODUCT FEATURES

1. 3x ceramic coated professional plates
Size of the plates: 25mm x 110mm
2. 3X Ceramic Technology : fast heat up 410°F (210°C)
3. Temperature regulator 266°F - 410°F (130°C - 210°C)
4. ON/OFF button - Automatic switch off
5. Swivel cord
6. Locking system to keep the plates closed

OPERATING INSTRUCTIONS

This unit is designed to operate at 125 volts AC. Use on Alternating Current (60 hertz) only. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician.

4. Use this appliance only for its intended use, as described in this manual. Do not use attachments not recommended by the manufacturer.

5. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service center for examination and repair.**

6. Keep the cord away from heated surface.

7. Never use while sleeping.

8. Never drop or insert any object into any opening or hose.

9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

10. Unit is hot when in use. Do not let heated surfaces touch eyes or skin.

11. **Do not place the heated unit directly on any surface while it is hot or plugged in.**

12. Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint and other debris.

13. Do not use an extension cord with this appliance.

14. Do not touch hot surfaces of the appliance. Use handles or knobs.

15. Do not attempt to touch the housing of your appliance near the straightening plates, as it is hot when in use.

16. This appliance is not a toy. Keep away from children.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

DANGER - Any appliance is electrically live even when the switch is off. To reduce the risk of death by electric shock:

1. **Always unplug appliance immediately after using.**
2. Do not use while bathing or in a shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into water or other liquids.
5. If an appliance falls into water, unplug it immediately. **Do not reach into the water.**

WARNING - To reduce the risk of burns, electrocution, fire, or injury to persons:

1. **This appliance should never be left unattended when plugged in.**
2. **Do not pull, twist, or wrap line cord around appliance, even during storage.**
3. This appliance should not be used by, on or near children or individuals with certain disabilities.