## INSTRUCTIONS FOR USING THE **FACIAL BRUSH**

- 1. Wet your face and apply sufficient cleanser. Also apply a small amount of cleanser to the
- 2. Attach brush head to power handle.
- 3. Turn the brush on.
- 4. Do not press the brush hard against your skin, as it will reduce the motion and effectiveness. Keep the brush in light contact and flush against the skin
- 5. Move the brush in a slow circular motion around your face. NOTE: Do not apply treatment close to the eyes to avoid
- 6. When finished, rinse with water and dry your skin with a towel.

## **USER MAINTENANCE** INSTRUCTIONS

CARING FOR YOUR TRUE GLOW® SONIC

- 1. After each use, rinse brush head and wipe the brush handle with a damp cloth to remove any oils or lotions used during treatment.
- 2. Clean unit thoroughly each week by rinsing under warm, soapy water to help remove oil and lotion buildup. Wipe with a dry cloth and store unit in its box or in a clean, dry place.

**IMPORTANT** 

SAFETY

INSTRUCTIONS

When using electrical appliances, especially when

children are present, basic safety precautions should

always be taken, including the following:

**READ ALL** 

INSTRUCTIONS

**BEFORE USING THE** 

**FACIAL BRUSH** 

WARNING - To reduce the risk of

burns, electrocution, fire or injury to persons:

product is used on, by or near children or

2. Use this product only for its intended use as

3. Keep the unit away from heated surfaces.

5. Do not use outdoors or where oxygen is

6. Never operate if the product is damaged.

7. Not for use by children. Keep this product out

4. Never use while sleeping or drowsy.

described in this instruction booklet. Do not use attachments not recommended by the

1. Close supervision is required when this

people with certain disabilities.

manufacturer.

being administered.

of reach of children.

8. Avoid contact with eyes.

- 3. Remove brush heads once a week and rinse under warm, soapy water to remove residue accumulated during treatment. Allow brush heads to air-dry. Store in a clean, dry place.
- 4. Do not use abrasive cleaners for cleaning.
- 5. Do not put unit in dishwasher for cleaning.

NOTE: It is recommended to replace the brush attachment every 90 days, as the bristles wear over time and lose their

## INSTRUCTIONS **FOR USING BATTERIES**

- 1. Always purchase the correct size and grade of battery most suitable for the intended use.
- 2. Replace old batteries of a set at the same
- 3. Do not mix old and new batteries. Do not mix alkaline standard (carbon-zinc) or rechargeable (nickel cadmium) batteries.
- 4. Clean the battery compartment by blowing away any debris prior to battery installation.
- 5. Ensure the batteries are installed correctly with regard to polarity (+ and -).
- 6. Remove batteries from equipment that is not to be used for an extended period of time.
- 7. When batteries begin to fail, remove promptly.

#### BATTERY DISPOSAL

Batteries contain various materials that must be recycled and disposed of properly. Do not dispose of in the municipal waste system.

## TROUBLE-**SHOOTING GUIDE**

THE BRUSH IS NOT WORKING.	Make sure the contacts in the unit are clean. See user maintenance instructions for cleaning procedure.
	Make sure the batteries are installed properly.
THE BRUSH OPERATES AT SLOW SPEED.	Replace the batteries.
THE BRUSH HEAD VIBRATES OR FALLS OFF DURING USE.	Make sure the brush head is snapped on properly. Replace the brush head.

## **INSTRUCTIONS**

The True Glow® Sonic Facial Brush handle has no serviceable parts. Call 1-855-926-6247 for instructions to purchase replacement brush

### SENSITIVITY AND CAUTIONS

The True Glow® Sonic Facial Brush is a facial clean and healthy-looking skin. The True Glow® not intended to be used to treat any medical

If you are under a doctor's care for any skin condition or if you think you have very sensitive

Depending on how your skin reacts to treatment.

We recommend not sharing the brush heads: each user should have their own brush head.

Do not use with exfoliation creams with rough or

Removing makeup can cause the brush head to discolor. This will not affect performance and the brush head can be used for the entire

If you experience any pain or discomfort during

Moisten your face and apply cleanser. Also apply a small amount of cleanser to the moistened brush head. Do not apply pressure with the brush to the face. When finished, rinse with water, and dry skin with a clean towel.

#### 9. CAN ICES-3(B)

## **SAVE THESE**

## SPECIAL CAUTIONS FOR DELICATE AREAS

cleansing device that is intended to help you get Sonic Facial Brush is not a medical device and is conditions such as acne.

skin, please consult your physician before use.

if rash or irritation occurs, stop use.

jagged particles.

recommended life of 90 days.

use, stop using and consult your physician.

### TRUE GLOW® SONIC FACIAL **BRUSH FEATURES**



#### ATTACHMENTS

NORMAL SKIN: White bristles with a teal plastic back.

NOTE: Your True Glow® Sonic Facial Brush may only include certain attachments. Call 1-855-926-6247 for instruction to purchase brush

#### WATERPROOF

The True Glow® Sonic Facial Brush is waterproof and can be used in the shower. Cannot be submerged in water.



### TIMER


The unit will automatically shut off after 60 seconds

## **OPERATING**

INSTRUCTIONS

NOTE: The True Glow® Sonic Facial Brush operates on 2 AAA batteries (not included).

- 1. Remove the battery cover from the unit.
- 2. Install 2 AAA batteries (not included) as per the markings in the battery compartment.
- 3. Slide the battery cover back onto the unit until the battery door is firmly closed.
- 4. Select the desired attachment and push it down onto the mounting post until firmly in place.

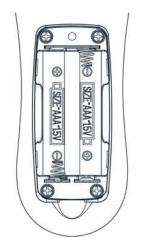

#### LIMITED ONE YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace (at our option) your unit free of charge for 12 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service centre listed below. together with your purchase receipt and \$3.00 for postage and handling. In the absence of a purchase receipt, the warranty period shall be 12 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES. INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILI-TY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24 MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.

IN NO EVENT SHALL CONAIR BELIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DA-MAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSO-

This warranty gives you specific legal rights, and you may also have other rights, which vary from province to province.

#### SERVICE CENTRE

©2020 CONAIR CONSUMER PRODUCTS ULC 100 Conair Parkway Woodbridge, Ontario, L4H OL2 For more information on any Conair product call: 1-855-926-6247 Visit our Web site: www.conaircanada.ca Consumer Call Centre E-mail: Consumer\_Canada@Conair.com

STARTING THE FACIAL BRUSH

STOPPING THE FACIAL BRUSH

Press the ON/OFF button to turn on the unit.

Press the ON/OFF button to stop the unit.

ATTACHING AND REMOVING ATTACHMENTS

To attach, hold the brush by the rim and attach

To remove, hold the rim and pull brush off.

over mounting post until it firmly snaps into place.

19CN035060

IB-16673

# renew - refresh - revive

Battery Operated Sonic Facial Brush or the ultimate alow!



### Have a Question?

Please do not return this product to the retailer. Call Us First!


Our customer service and product experts are ready to answer ALL your questions.

Please call our TOLL-FREE customer service number at: 1-855-926-6247 or visit us online at www.conaircanada.ca

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.





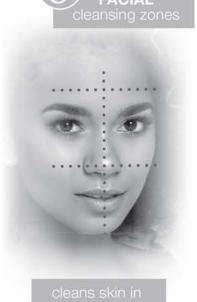

60 seconds