

For the front to the crown, cut the hair against the direction in which it grows. Then even it up with the sides.

For a flat top, use the flat comb, not the attachment comb. Just cut hair on top of the head over the flat comb. (Fig. 2).

To taper hair down to the neckline, use attachment comb #1. Comb hair and check for uneven spots. Outline sideburns and neck areas (see “Outlining”).



USER MAINTENANCE

 
CARE OF YOUR CLIPPERS

MAINTENANCE OF THE BLADE


Always apply oil to the blades before, during and after use. This will ensure maximum cutting performance. Hold clipper away from your body in a downward position and apply oil on the front and sides of the cutter blade.

Wipe excess oil off with a soft dry cloth. Conair® hair clippers are carefully inspected to insure that the blades are in perfect alignment. You will need to realign the blades after removing them for cleaning or replacement, or if they should be knocked out of alignment. How can you tell if the blades need realigning? Simply match them up, point for point, to conform with the drawing below. To replace cutting comb and cutter after re-

moval for cleaning, replacement or, because they are out of alignment, slide the cutter back on to the black plastic oscillating head. Next, you must make sure that the cutter (small blade) and the cutting comb (large blade) are properly aligned. Line up the new or existing cutting comb with the two screw holes. Place the original screws, one in each hole, and lightly tighten with a Phillips head screwdriver.

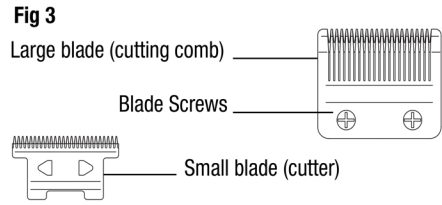

 Then, match the two blades up, point to point, conforming with the illustration below in (Fig. 4).

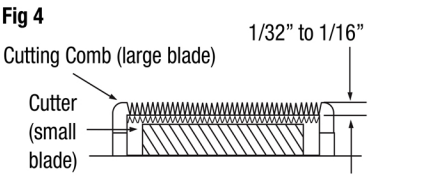

*The top edge of the cutting comb should be 1/32" to 1/16" (.79 mm. to 1.59 mm.) higher than the top edge of the cutter. This is important so that the clipper does not cut too close, or come in contact with the skin.

*The extreme left-hand tooth of the cutting comb must cover or be to the extreme left hand of the first small tooth of the cutter.

*Be sure that the extreme right hand big tooth of the cutter touches the extreme right hand tooth

of the cutting comb.

CAUTION: Never pull on the clipper cord. Never twist or wrap the cord around the clipper. Lay it flat with the cord coiled up when not in use. For new blades, send check or money order for \$8.00 (which includes postage and handling) to: Conair Consumer Products ULC 100 Conair Parkway, Woodbridge, Ont. L4H 0L2

Any other servicing should be performed by an authorized service representative. The appliance has no user serviceable parts. The product is for household use

STORAGE: When not in use, your clipper should be disconnected, allowed to cool and stored in a safe, dry location, out of reach of children.

 
OILING INSTRUCTIONS

IMPORTANT! It is highly recommended before each use to oil the blades with the oil provided. This ensures optimum cutting performance. For the first use you will need to use the oil supplied with the product. Unscrew the cap and cut off the very end of the plastic tube with a pair of scissors to release the oil.

To oil the blades ensure that the unit is switched on. Gently squeeze the oil tube and apply 2 drops of oil to the blades (see FIG. 1, 2, and 3). Leave the unit on for a few seconds to allow the oil to thoroughly spread the length of the blades. Switch off the unit and remove any excess oil by gently dabbing with a cloth.

Be careful not to use too much oil and don't oil your clipper more than necessary, as this could damage the motor. (Never attempt to oil the motor bearing, as it is permanently lubricated.)


KEEP OIL OUT OF REACH OF CHILDREN.

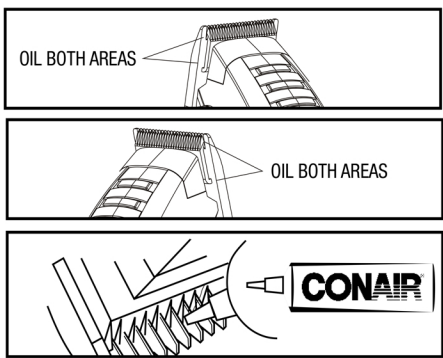

POWER SCREW


The power screw permits you to adjust power to your clipper. You may need to make this adjustment if the power in your house is low. (The Conair® clipper was designed for household use.)

 1. With a screwdriver or a dime, turn the power-screw counterclockwise until the arm strikes a coil, making a clacking noise (Fig. 1).
2. Turn the screw clockwise until the noise stops, and then turn about 45 degrees more. This is the maximum power setting (Fig. 2).

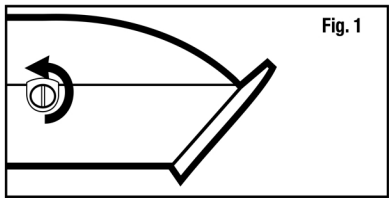

WARNING:
IF YOU THINK THE POWER IS OFF WHEN THE SWITCH IS OFF YOU'RE WRONG.

 KEEP AWAY FROM WATER



Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES

A Public Service Ad from the Association of Home Appliance Manufacturers and Underwriters Laboratories, Inc.

LIMITED FIVE YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 60 months from the date of purchase if the appliance is defective in workmanship or materials. To obtain service under this warranty, return the defective product to the service centre listed below together with your purchase receipt and \$7.50 for postage and handling. In the absence of a purchase receipt, the warranty period shall be 5 years from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 60 MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

This warranty gives you specific legal rights, and you may also have other rights, which vary from province to province.

SERVICE CENTRE:

Conair Consumer Products ULC
100 Conair Parkway, Woodbridge, Ontario, L4H 0L2.
©2017 Conair Consumer Products ULC
For information on any Conair product call 1-855-926-6247 or visit us on the web at: www.conaircanada.ca.
Consumer Call Centre E-mail : Consumer_Canada@Conair.com

16CN025920

IB-14811

NUMBER CUT®

NUMBERED CODED COMB GUIDE HAIRCUT KIT



Have a Question?

Please do not return this product to the retailer.

Call Us First!

Our customer service and product experts are ready to answer ALL your questions.

Please call our TOLL-FREE customer service number at: 1-855-926-6247 or visit us online at www.conaircanada.ca

Model HC95WNC
Instruction Booklet

CONAIR
FOR MEN

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER FOR HOUSEHOLD USE ONLY

DANGER— Any appliance is electrically live, even when the switch is off. To reduce the risk of death or injury by electric shock:

1. Do not reach for an appliance that has fallen into water. **Unplug immediately.**
2. Do not use while bathing or in the shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
4. Always unplug this appliance from the electrical outlet immediately after using.
5. Unplug this appliance before cleaning.

DO NOT REACH INTO THE WATER

WARNING— To reduce the risk of burns, electrocution, fire, or injury to persons:

1. The appliance should never be left unattended when plugged in.
2. Close supervision is necessary when this

appliance is used by, on, or near children or the disabled.

3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped, damaged, or dropped into water. Return the appliance to service centre for examination and repair.
5. Keep the cord away from heated surfaces.
6. Never operate the appliance with the air opening blocked or while on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair and the like.
7. Never drop or insert any object into any opening.
8. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
9. Always attach plug to appliance first, then to outlet. To disconnect, turn all controls to "off", then remove plug from outlet.
10. Do not place appliance on any surface while it is operating.
11. Do not use this appliance with a damaged or broken comb or with teeth missing from the blades, as injury may occur.
12. Avoid skin contact with moving blades.
13. When using the appliance with its cord, be mindful of tangles or kinks in the cord. If the cord does become tangled during use, turn the unit off and straighten cord before operating again.

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

This appliance is used on Alternating Current 120V AC 60 hertz only. To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other).

As a safety feature, this plug will fit in the outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way. Do not attempt to defeat this safety feature.

Your new Conair® haircut kit has everything you need to achieve professional haircuts at home. Its comes with a new torque motor clipper and steel blades for cutting precision. Also included are 10 attachment combs for different hair lengths. It also comes with a barber comb, barber scissors, barber cape, a carry case for easy storage and travel, a, 2 styling clips, cleaning brush, lubricating oil and a blade guard for easy maintenance of the clipper blades.

THE CONAIR GUIDE TO CUTTING HAIR AT HOME

Before you start:

1. Inspect your clipper. Make sure it's free of hair and dirt, properly oiled, and running

- smoothly.
2. Place a towel or cape around the neck of the person.
3. Seat the person so that his or her head is at your eye level. This gives you greater visibility and control.
4. First, comb hair until it's tangle-free. Then hold clipper in a comfortable grip. Now you're ready to cut.

Please note your [number] cut™ 20 piece haircut kit comes with easy-to-use number combs so you can easily remember your favorite number comb once you start to use the kit on a regular basis.

MEDIUM TO LONG CUT

To begin with, cut only a small amount of hair until you become used to the length each attachment leaves the hair. Try the longest attachment on the clipper first. If you want a shorter cut, you can then use shorter combs.

 
- Short attachment comb (number 1) cuts hair to 1/8".
- Medium-Short attachment comb (number 2) cuts hair to 1/4".
- Medium-Long attachment comb (number 3) cuts hair to 3/8".
- Long attachment comb (number 4) cuts hair to 1/2".
- Long attachment comb (number 5) cuts hair to 5/8".
- Long attachment comb (number 6) cuts hair

to 3/4".

- Long attachment comb (number 7) cuts hair to 7/8".
- Long attachment comb (number 8) cuts hair to 1".
- Left ear attachment comb lightly tapers over left ear.
- Right ear attachment comb lightly tapers over right ear.



Attach combs by holding the teeth up, then snapping onto the bottom of the clipper blade.

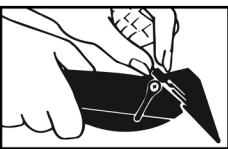

To remove comb attachments, place index finger and thumb as illustrated; then pull out and up.

NOTE: Never push or shove the clipper through the hair to make it move more quickly. Professional experience shows that the clipper works most efficiently when it cuts through the hair at its own speed.

To begin cutting hair:

1. The hair should be combed in its natural direction.
2. Using the largest attachment comb, trim sides from the bottom upwards. Hold clipper lightly against the hair with teeth of the

attachment comb pointing upward, yet flat against the head. Gradually lift the clipper upward and outward through the hair, trimming just a little at a time.

Repeat around sides and back of head.



If you want hair to be even shorter:

A) Apply more pressure to the head with the attachment comb that is in place. This takes a little practice, of course.

OR

B) Just switch to a shorter attachment comb. Remember, it's better to leave too much hair than too little. For longer hair on top, use the barber comb and lift hair on the top of the head, cutting over the comb. Or hold the hair between the fingers and cut to desired length. Always working

from the front to the back of the head, gradually cut the hair shorter by reducing the space between the comb or fingers and the head. Comb often to check for uneven strands, and to get rid of trimmed hair.

OUTLINING:

Outlining requires no attachments. Comb hair into the desired style. Position the clipper between the sideburns and the ear (Fig. 1), making sure the corner edge of the blade is against the hairline. With the outline of the hair as your guide, slowly move the clipper over, around and behind the ears. For the back of the neck and the sideburns, hold the clipper upside down (Fig. 1) and, holding it against the skin at the length desired, move the clipper downward.

STOP. COMB. CHECK.

For best results, do as the professionals do:

Fig 1



comb hair often, and check clipping results as you comb. This way you avoid uneven sides, bangs, neckline, etc.

SHORT CUTS TO PERFECT FLAT TOPS, CREW CUTS, ETC.

Always cut from the back of the neck to the crown, using the longest comb setting. Hold the comb attachment flat against the head and slowly move the clipper up through the hair. Use the same technique for the sides, cutting from the bottom to the upper side of the head.