


- If your roots are still a little damp or if you would like to produce more volume, bend forward and gently dry with a hairdryer.
 - Let the hair cool down before you comb it.
 - After use, press the I/O button and unplug the unit. Allow to cool before storing away.
- Note! When you are straightening, you might see some steam. Do not be concerned, this could be because of evaporation of the sebum, some residual hair products (leave-in hair care, hairspray, etc.) or excess water that is evaporating from your hair.

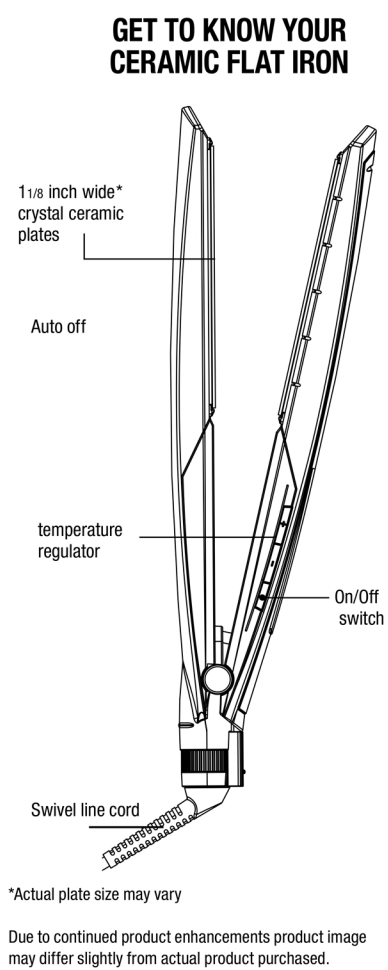

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

- DANGER** - Any appliance is electrically live even when the switch is off. To reduce the risk of death by electric shock:
1. **Always unplug appliance immediately after using.**
 2. Do not use while bathing or in a shower.
 3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
 4. Do not place in, or drop into water or other liquids.
 5. If an appliance falls into water, unplug it immediately. **Do not reach into the water.**

- WARNING** - To reduce the risk of burns, electrocution, fire, or injury to persons:
1. **This appliance should never be left unattended when plugged in.**
 2. **Do not pull, twist, or wrap line cord**

around appliance, even during storage.

3. Close supervision is necessary when this appliance is used by, on or near children or individuals with certain disabilities.
4. Use this appliance only for its intended use, as described in this manual. Do not use attachments not recommended by the manufacturer.
5. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service center for examination and repair.**
6. Keep the cord away from heated surfaces.
7. Never use while sleeping.
8. Never drop or insert any object into any opening or hose.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Unit is hot when in use. Do not let heated surfaces touch eyes or skin.
11. **Do not place the heated unit directly on any surface while it is hot or plugged in.**
12. Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint and other debris.
13. Do not use an extension cord with this appliance.
14. Do not touch hot surfaces of the appliance. Use handles or knobs.

USER MAINTENANCE

Your flat iron is virtually maintenance free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the unit from the power source, allow to cool and wipe exterior with a cloth. If any abnormal condition occurs, unplug the unit, allow it to cool, and return it for repair to an authorized service representative only. No repairs should be attempted by the consumer.

CAUTION

NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the appliance. Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your appliance is easy to store. Allow appliance to cool, then store in a safe, dry location, out of reach of children. Do not jerk or strain cord at plug connections. Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.


15. Do not attempt to touch the housing of your appliance near the straightening plates, as it is hot when in use.
16. Do not operate with a voltage converter.
17. This appliance is not a toy. Keep away from children.

SAFETY INSTRUCTIONS

1. Do not use the unit if it is damp or if your hands are wet.
2. **WARNING:** Polyethylene bags containing this product or its packaging can be dangerous. To avoid the risk of suffocation, keep these bags out of the reach of babies and children. A polyethylene bag is not a plaything.
3.  Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
4. If the appliance is used in a bathroom, unplug it after use. Leaving the appliance near a source of water may be dangerous, even if the appliance is off. For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your electrician for advice.
5. Do not immerse the appliance in water or any other liquid.
6. Stop using the appliance immediately if the cord is damaged. The power supply cord should not be replaced by the end user. The power supply cord should only be replaced by the manufacturer's authorized importer (or, in the United States and

**WARNING:
IF YOU THINK
THE POWER IS OFF
WHEN THE SWITCH
IS OFF,
YOU'RE WRONG.**

KEEP AWAY FROM WATER

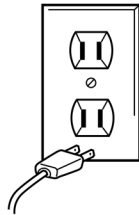

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES

- Canada, by an authorized Service Center).
7. Do not leave the appliance unattended while it is plugged in or in use.
8. Do not let the appliance's hot surfaces touch eyes or skin.
9. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.
10. Allow the appliance to cool before storing.
11. After use, do not wind the cord around the appliance as this may damage it. Instead, roll the cord up loosely and let it rest by the side of the appliance.

SAVE THESE INSTRUCTIONS

Conair Crystal Ceramic is a high-density ceramic coating for professional use. The perfect glide and heat-transfer qualities guarantee softness, shine and protection of the hair. Please carefully read the instructions for use below before using the appliance.

PRODUCT FEATURES

1. Crystal ceramic coated professional plates
Size of the plates: 28 mm x 110 mm
2. Use on dry or damp hair
3. Temperature regulator (140 °C - 235 °C)

LIMITED TWO-YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace, at our option, your appliance free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials. To obtain service under this warranty, return the defective product to the service centre listed below, together with your sales slip and \$7.50 for postage and handling. In the absence of a receipt, the warranty period shall be 24 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24-MONTH DURATION OF THIS WARRANTY.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

This warranty gives you specific legal rights, and you may also have other rights which vary from province to province.

SERVICE CENTRE

©2018 CONAIR CONSUMER PRODUCTS ULC
100 Conair Parkway
Woodbridge Ontario, L4H 0L2
For more information on any Conair product call: 1-855-926-6247
Visit our Web site: www.conaircanada.ca
Consumer Call Centre E-mail: Consumer_Canada@Conair.com
18CN032888

IB-15514

4. "I/O" button - Automatic switch off
5. Swivel cord
6. Locking system to keep the plates closed

OPERATING INSTRUCTIONS

This unit is designed to operate at 125 volts AC. Use on Alternating Current (60 hertz) only. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician.

Do not attempt to defeat this safety feature. NOTE: Do not use this styling appliance on hair extensions.

Straightening:

- Before straightening, wash and towel dry your hair then comb through with a large-tooth comb to untangle.
- Divide your hair into sections. Lift the upper sections using clips so that you can work with the sections underneath.
- Plug the flat iron cord into any household 125V AC. Press I/O button. The red LED will blink until it reaches desired temperature setting and then becomes solid. To turn off, press I/O button again until the red LED goes out. Never leave your flat iron on and unattended. However, should you fail to turn the unit off, it will shut itself off automatically within 60 minutes.

INFINITI**PRO**
BY CONAIR

1 1/8 in. (2.8 cm)
Crystal Ceramic Straightener



Have a Question?

Please do not return this product to the retailer.

Call Us First!

Our customer service and product experts are ready to answer ALL your questions.

**Please call our TOLL-FREE customer service number at:
1-855-926-6247
or visit us online at
www.conaircanada.ca**

Instruction & Styling Guide
Model CST327RC

WARNING: The flat iron's crystal ceramic coated plates will get very hot within a few seconds and should not be placed in contact with the skin after the flat iron has been turned on.

- Select the desired temperature using the temperature control. Generally, we recommend the unit be set to a lower temperature for fine, bleached and/or damaged hair, and a higher temperature for curly, thick and/or difficult to style hair. Every hair type is different, so we recommend you use a low temperature the first time you straighten. You can gradually increase the temperature gradually over the next uses if necessary. Use the table below as a guide:

Temperature Setting Guide	
Temperature	Hair type
140°C (285°F) – 180°C (355°F)	Fine, bleached and/or damaged hair
180°C (355°F) – 200°C (395°F)	Normal, coloured and/or wavy hair
200°C (395°F) – 235°C (455°F)	Thick and/or very curly hair

- Start with the underneath sections of hair. Take a section of about 5 cm width and place it between the 2 hot plates with the appliance positioned close to the roots, being careful to avoid touching the hot surface of the appliance with your hand.
- Hold the hair firmly with the straightener and slide slowly along from the roots to the tips.
- Repeat again if necessary.