

SOLID TEAK SPA BENCH

Model PTB1R Instructions For Use

Easy to Assemble • Includes Teakwood Seat with:

- 5 pre-drilled screw holes
- 5 plastic-capped screws
- 5 metal contoured washers
- 2 pre-assembled U-shaped legs

The Conair™ Home Solid Teak Spa Bench is partially assembled. Final assembly can be completed in minutes. No tools are required.

(Fig. A) Remove all parts from the box. Turn wooden bench seat upside down on floor or table.

(Fig. B) With both U-shaped legs reaching up, place one leg on top of the other. Indented centers should fit together in an X shape.





(Fig. C) Carefully align leg holes over pre-drilled bench holes.

(Fig. D) Place contoured washer over center hole. Insert a plastic-capped screw through the washer and screw loosely into pre-drilled hole.

(Fig. E) Place a contoured washer over each of the remaining holes, and securely screw the plastic-capped screws into place. Now tighten the center plastic-capped screw.

(Fig. F) Adjust bench to desired height by pushing in adjustment pin on each leg, and moving leg up or down to allow pin to “lock” into appropriate hole.*

***NOTE:** For safety and stability, be sure adjustment pins are securely locked into holes at the same height on each leg.

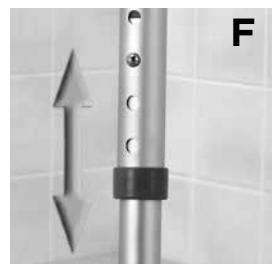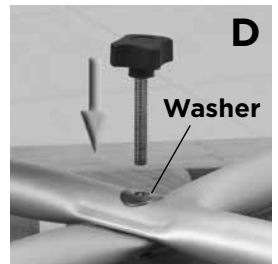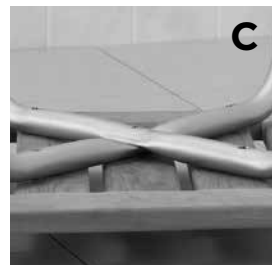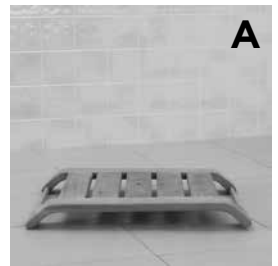

CONAIR™ home